






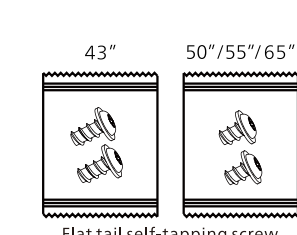

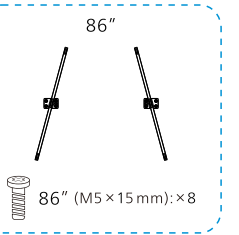
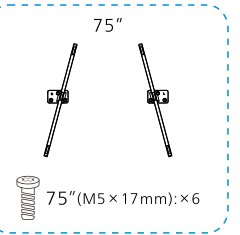
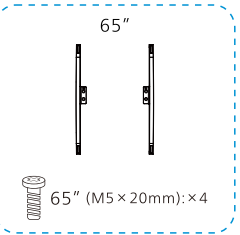


The actual accessories may differ from the illustrations, which are for reference purposes only.

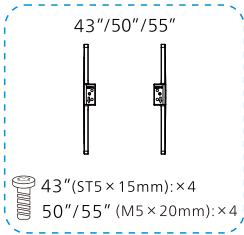


Tool needed for assembly

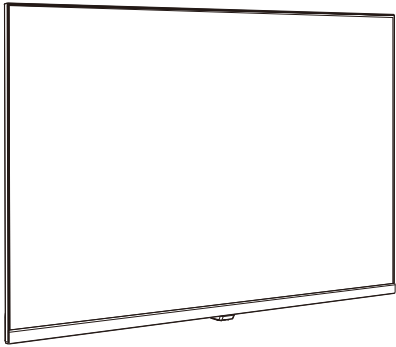


M: Machine screw

ST: Flat tail self-tapping screw


1 43"/50"/55"

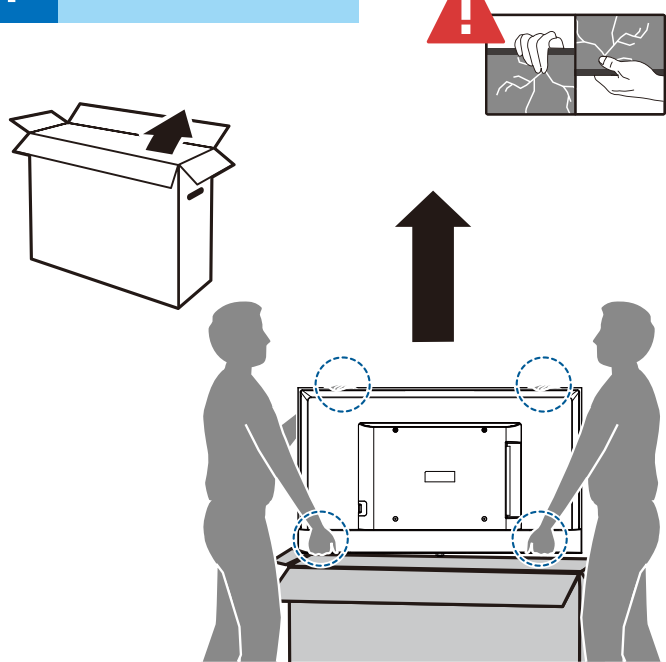


65"/75"

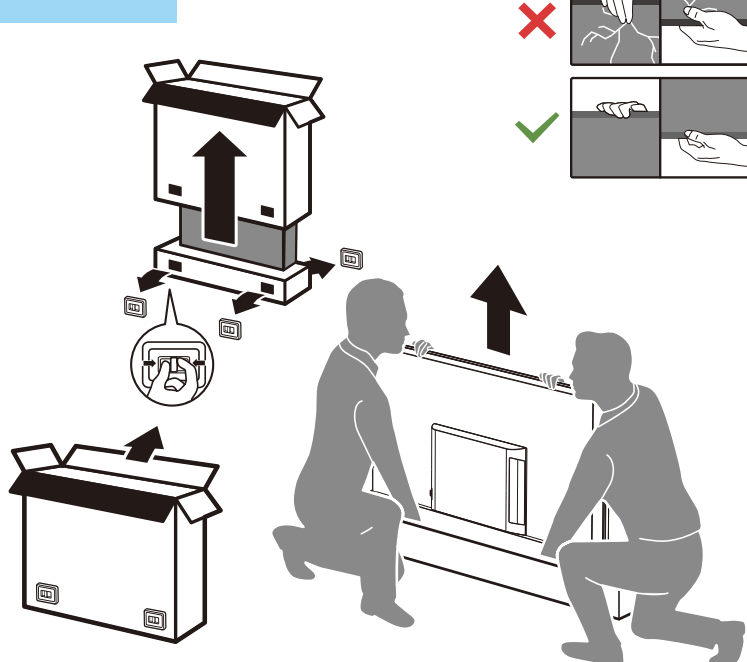


86"

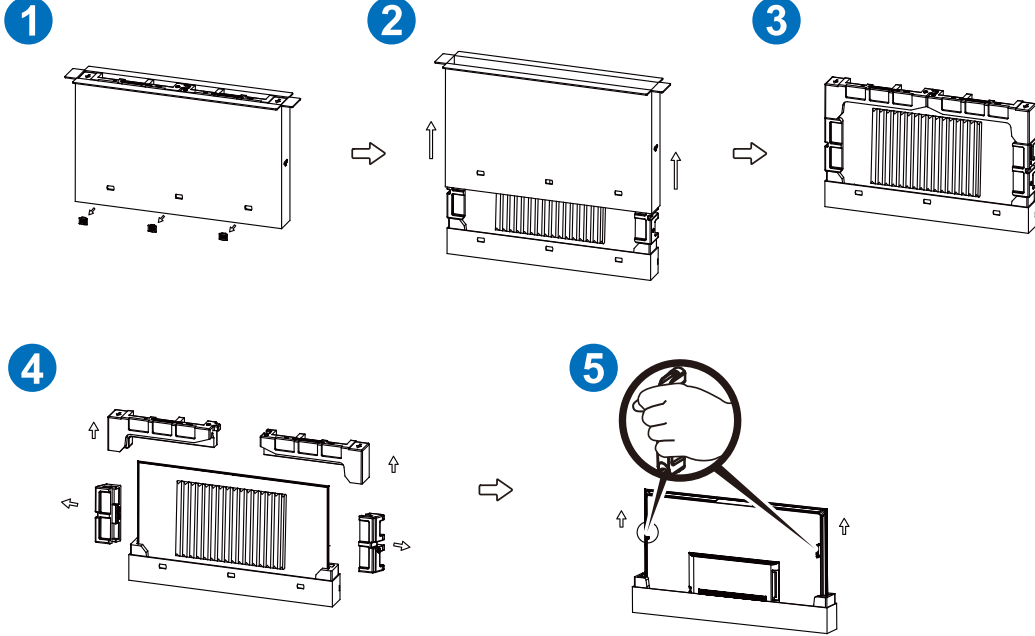


2 43"/50"/55"/65"/75"

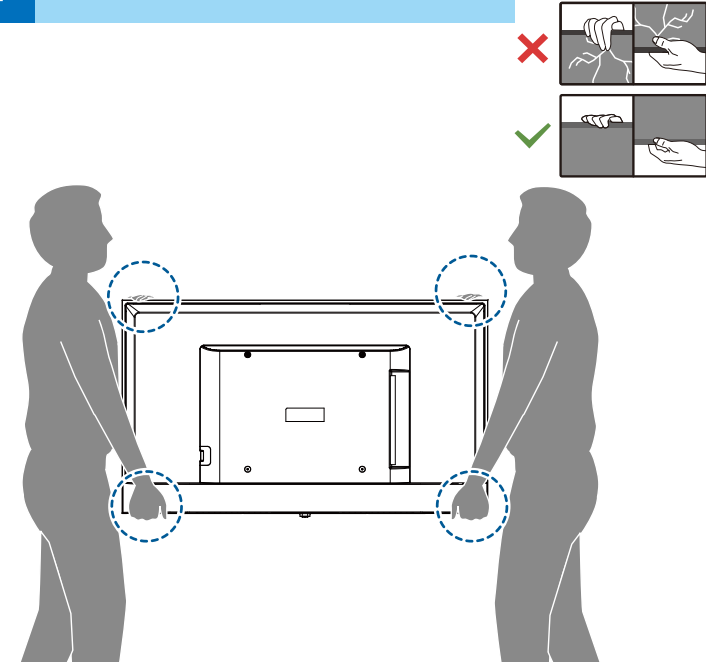


A Desk Placement

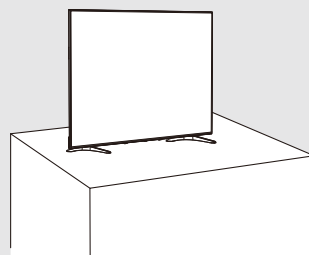

B Wall Placement

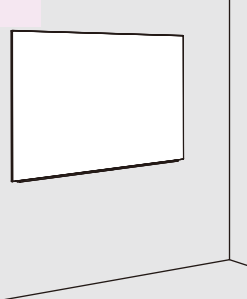


86"

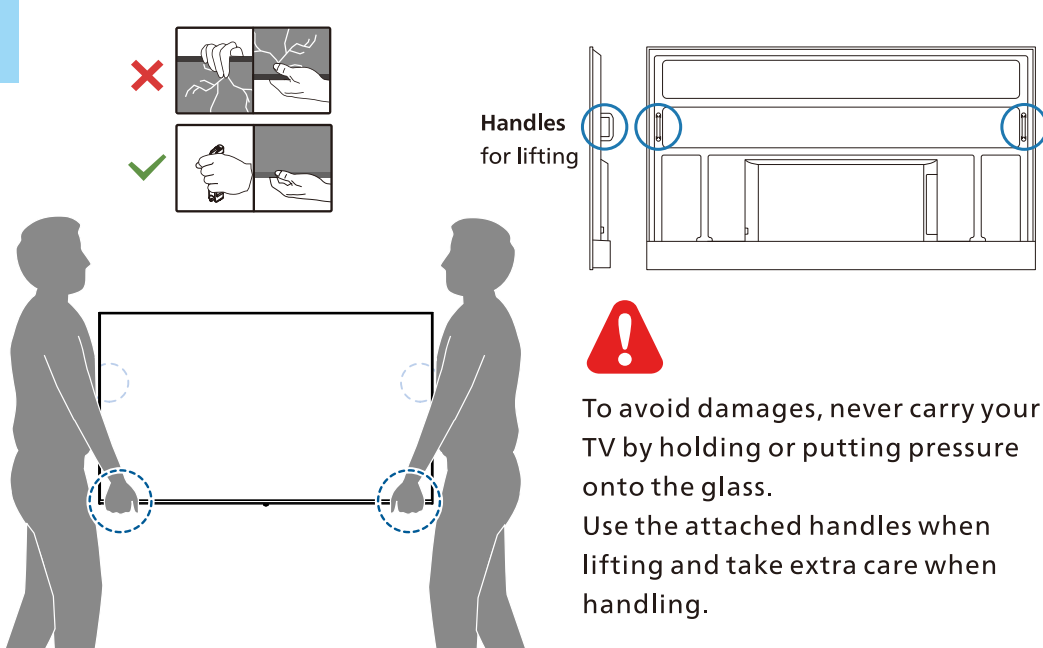


To avoid damages, never carry your TV by holding or putting pressure onto the glass. Use the attached handles when lifting and take extra care when handling.


3

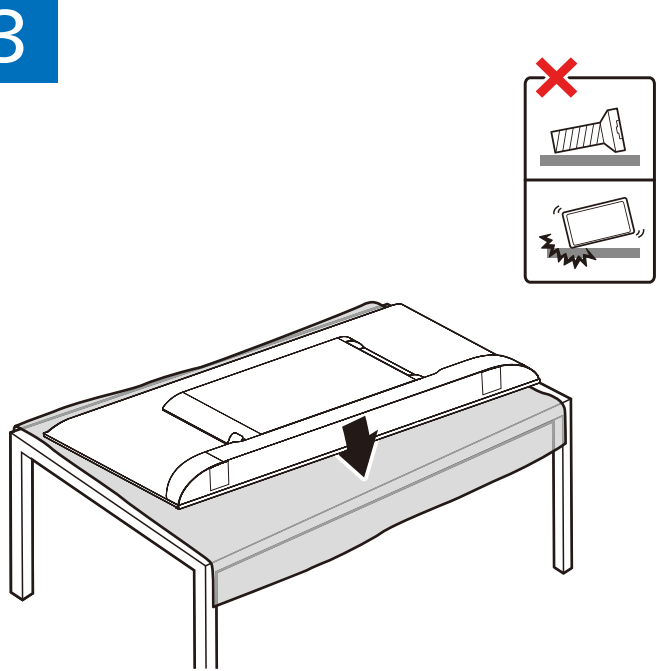


A 43"/50"/55"/65" 75"

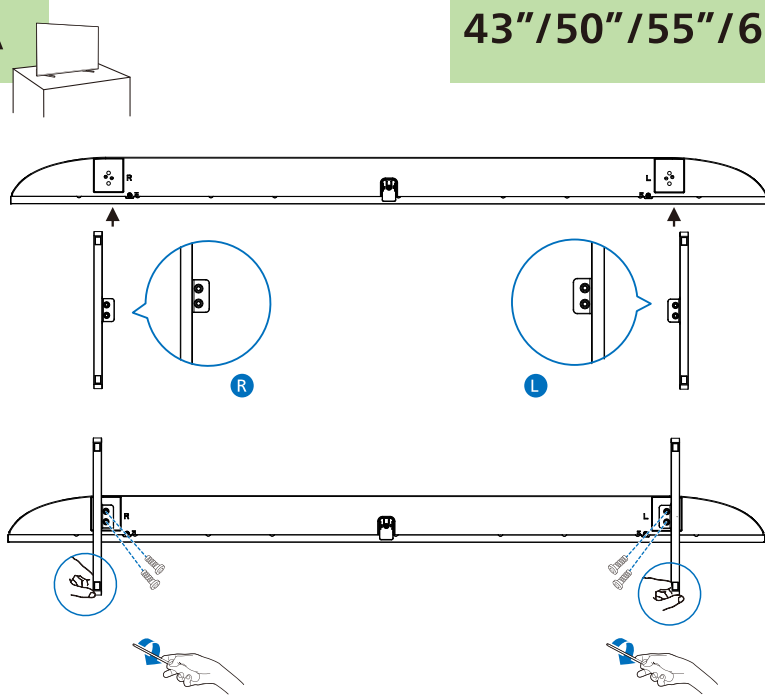



75"

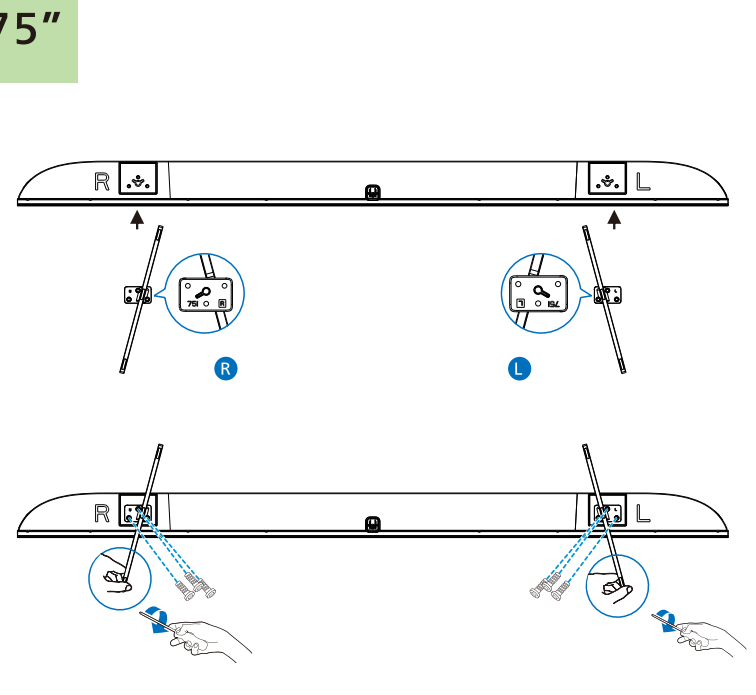

Desk Placement (using table stand)

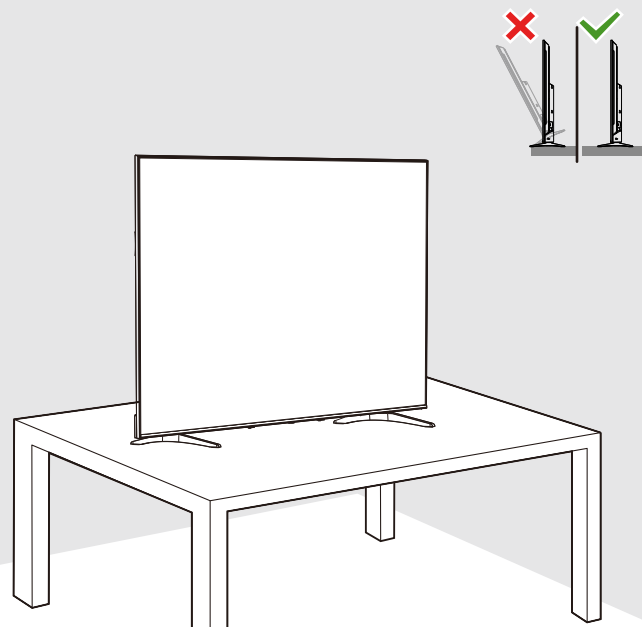


86"

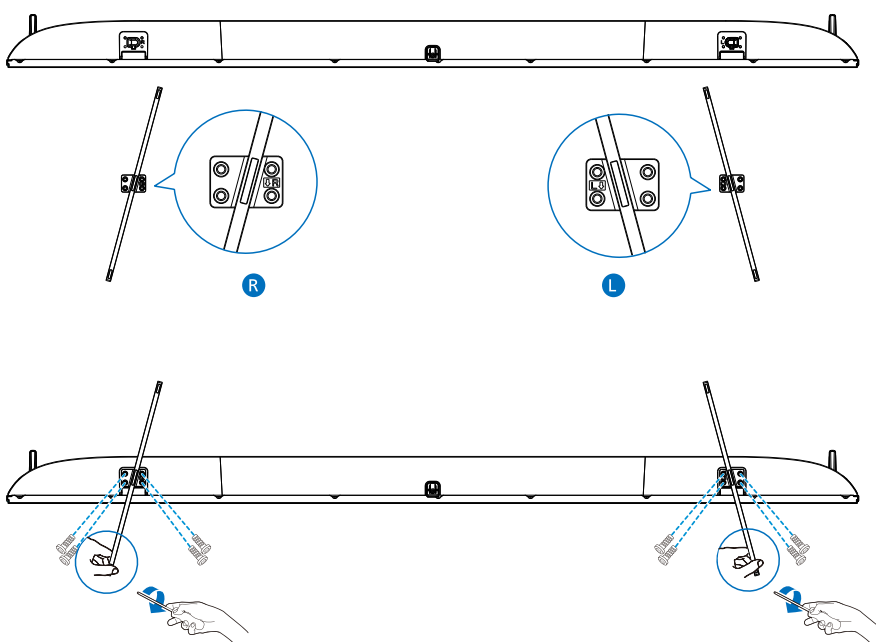


Diagonal (inch/cm)	X (mm)	Y (mm)	Screw Size	Screw Length (mm)
43" / 108	300	300	Up:M4 Down:ST4	9.5~10.5 9.5~10.5
50" / 126	300	300	Up:M6 Down:ST6	20.5~32 8~11.5
55" / 139	300	300	Up:M6 Down:ST6	20.5~32 8~11.5
65" / 164	300	300	Up:M6 Down:ST6	20.5~32 8~11.5
75" / 189	500	300	Up:M8 Down:M8	22~29 22~29
86" / 217	500	300	Up:M8 Down:M8	22~29 22~29

Screw Length (mm)

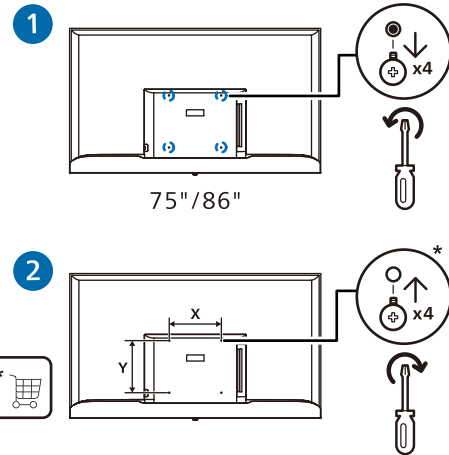

Recommended Wall Distance

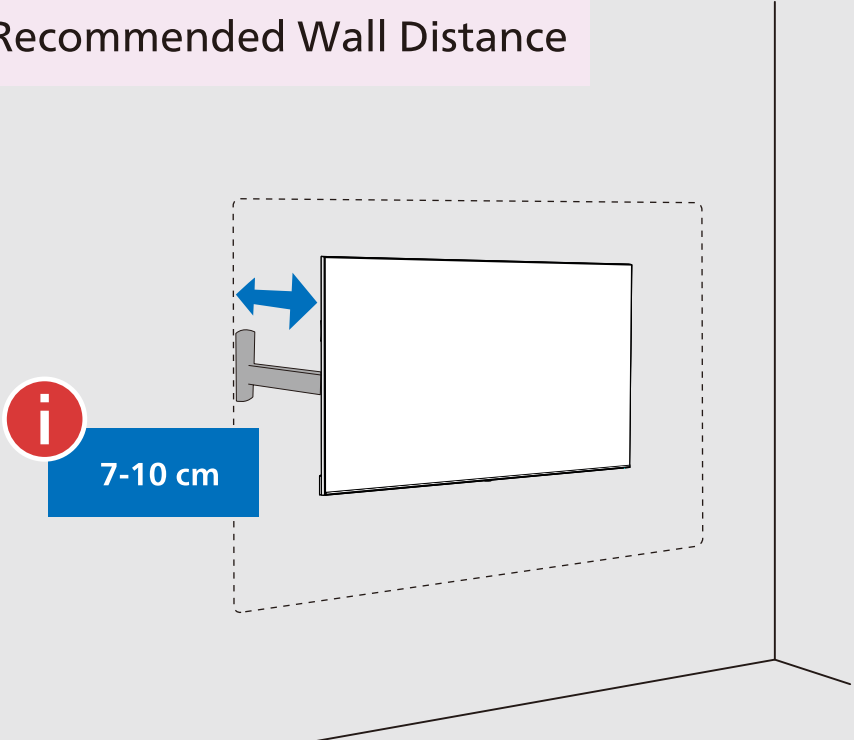

4

Register and Support




www.philips.com/TVsupport

Register your TV, find out more, download the user manual and get support




1




To install batteries, slide the battery door up.

2



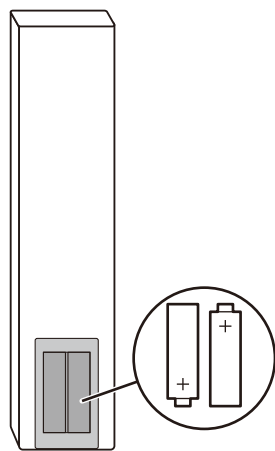


Use 2x AAA (LR03) 1.5V (included)

3



Click
Slide battery door back in place.

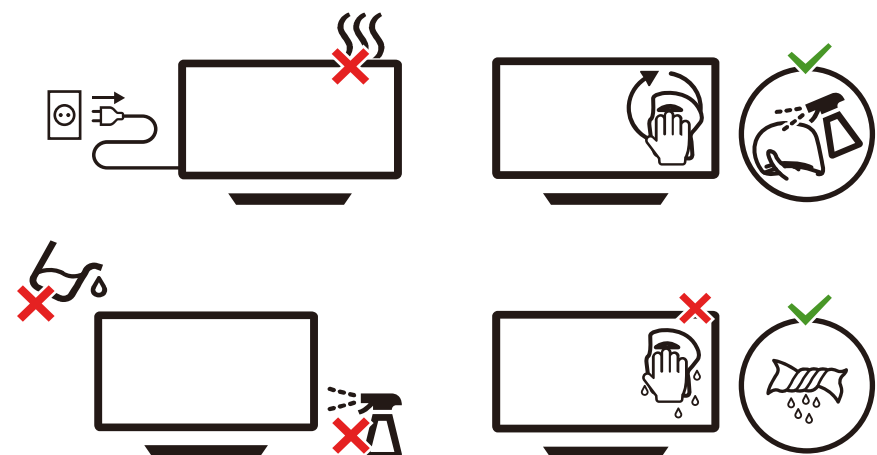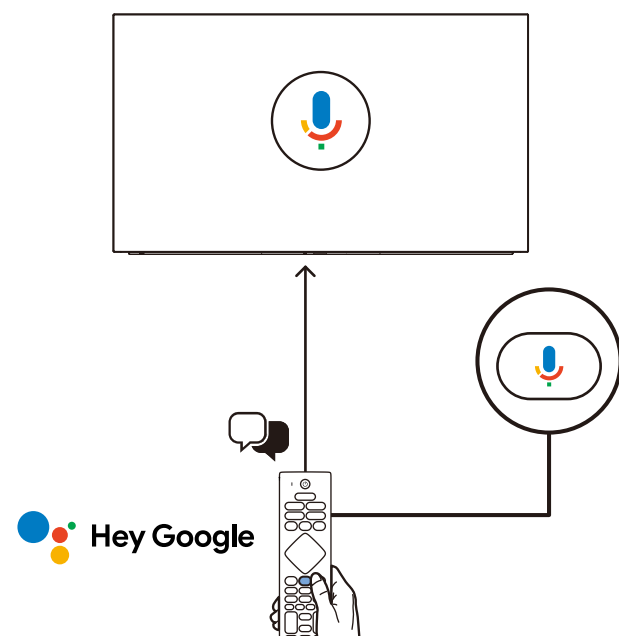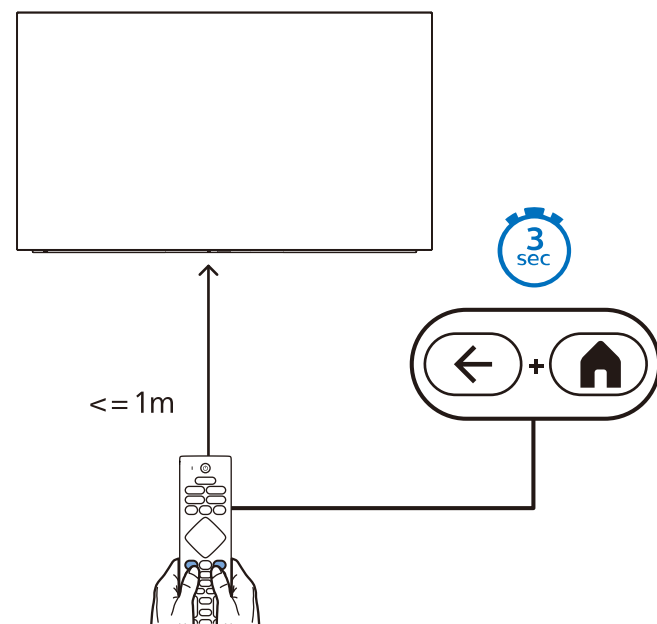

English

Read the safety instructions.

Bahasa Malaysia

Baca arahan Keselamatan.

Bahasa Indonesia

Baca petunjuk keselamatan.

Deutsch

Lesen Sie die Sicherheitshinweise.

Français

Lisez les consignes de sécurité.

Português

Leia as instruções de segurança.

ภาษาไทย

โปรดอ่านคำแนะนำด้านความปลอดภัย

Tiếng Việt


Hãy đọc chỉ dẫn an toàn.

简体中文


请阅读安全说明。

العربية قراءة تعليمات السلامة.

43"/50"/55"/65"/75"/86"

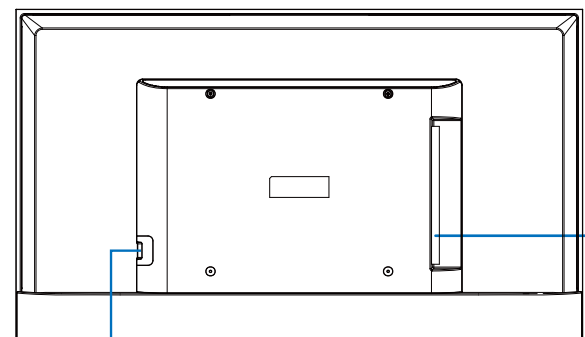


POWER
43"/75"

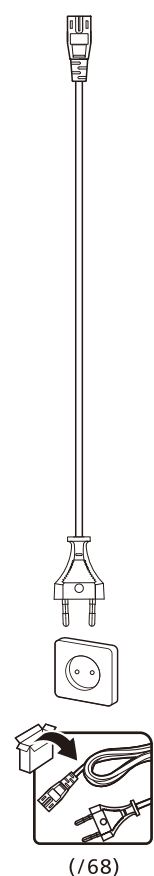


(/68)

POWER
50"/65"

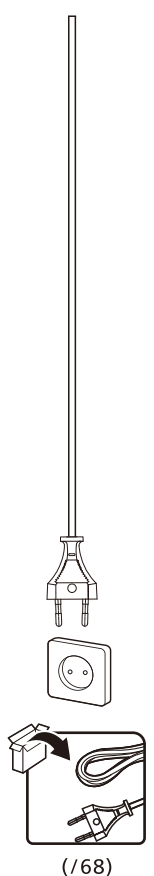


(/68)

POWER
55"

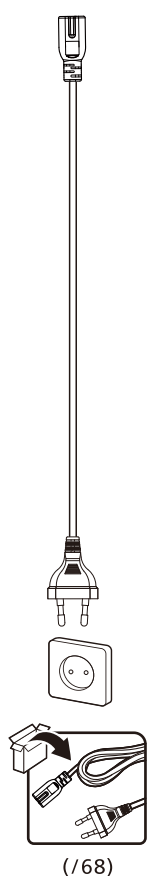


(/68)

POWER
86"

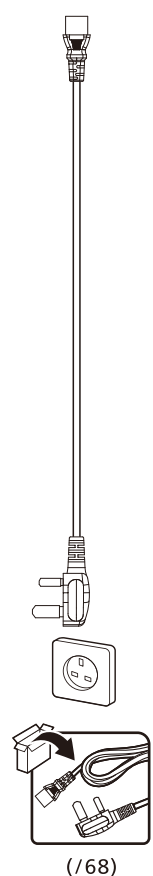

(/68)

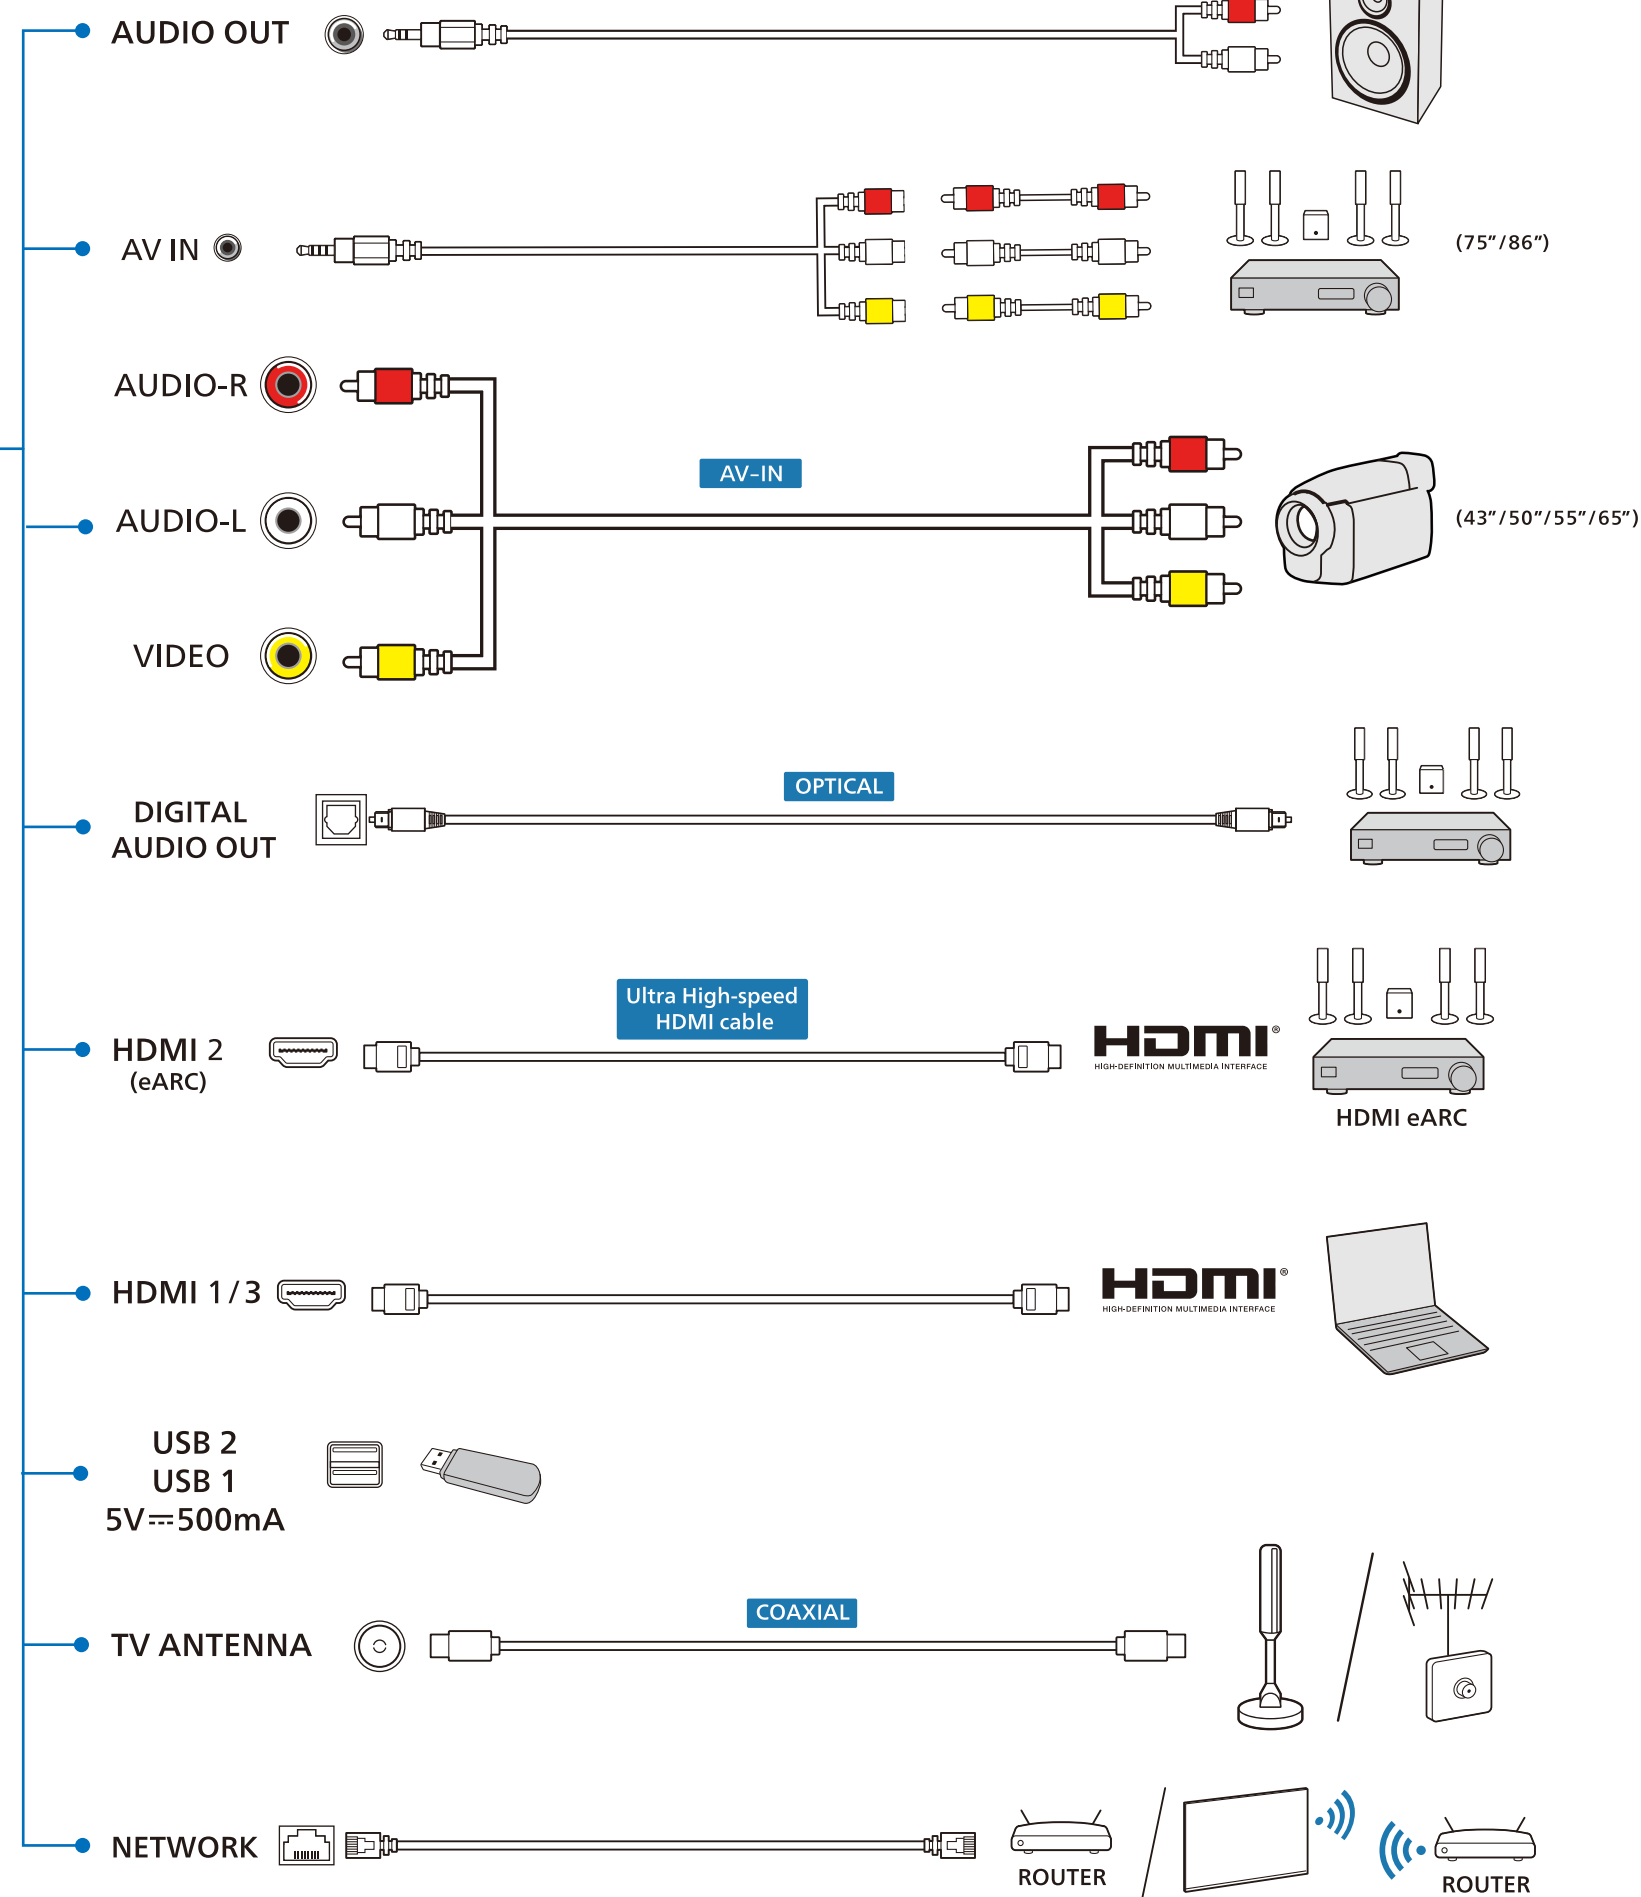

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2025 © TP Vision Europe B.V. All rights reserved. www.philips.com/welcome