

PHILIPS



Portable Radio

CENTURY

Classic design, modern sound

FM digital tuning

Bluetooth® 5.4

User-replaceable battery



TAV2000FB

The Janet

Poetry for the eyes and ears! This portable home radio is designed to delight with its bold looks and rich, warm sound. Enjoy crystal-clear FM radio and easily stream playlists: there's a headphone jack for private listening too.

CENTURY range. FM portable home radio.

- Looks from back then, sound from now
- 2.5" full-range driver. 5 W of rich, warm sound
- FM digital tuner with up to 20 presets
- Two presets can be allocated to quick-access buttons
- Bluetooth® 5.4 for a stable, longer-range connection

The Janet celebrates 100 years of Philips sound

- Classic 1950s rounded form factor
- Modern colorful display with adjustable brightness
- Telescopic antenna for clear reception
- 3.5 mm audio-out for wired headphones

Classic looks. Modern features and performance

- Easily replaceable built-in rechargeable battery
- Dual alarms and Sleep Timer
- GRS-certified recycled plastic. Responsible packaging

Highlights

Classic design, modern sound



Come for the classic design, stay for the warm sound. This portable radio brings back the rounded design and tactile volume knob of 1950s radios, and adds a dash of warm, surprisingly powerful sound from its 2.5" full-range driver. It's the perfect blend of legacy and innovation.

FM radio with up to 20 presets



Music, news, drama, or sports? Whatever you love to listen to, this FM radio gives you crystal-clear reception thanks to its telescopic antenna. Digital tuning makes stations super-easy to find—plus you can store 20 presets and allocate your two favorites to the quick-access buttons marked 1 and 2 on the front of the radio.

Bluetooth® 5.4



This classic-looking radio does more than just radio. Bluetooth® 5.4 connectivity lets you stream podcasts, playlists, and more from your

smart device to the radio. You'll enjoy a stable connection with high-quality sound, even if your playlist is streaming from the phone you left in the other room.

Replaceable built-in battery




With a built-in rechargeable lithium-ion battery that's easily replaceable when it reaches the end of its life, you can depend on The Janet radio for years to come! You get approx. 15 hours play time from a full charge, and it takes around 3.5 hours via USB-C to fully recharge the battery.

Colorful TFT display



The clear TFT display gives you station icons in full color, plus text information from the station you're listening to. A digital clock shows the time, and you can adjust the brightness to suit your room or dim the display at night.

Dual alarms and Sleep Timer

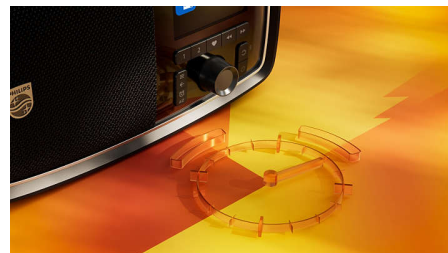

If you like falling asleep to the sound of the radio, you can use the Sleep Timer to control how long the radio plays for—and set two alarms to ensure you wake up. Alarms can use an alarm tone or the radio, and the volume starts low before gradually increasing.

Audio out

Want to enjoy your favorite radio show while your partner watches TV? A 3.5 mm audio-out jack means you can plug your wired headphones into the radio and keep your sounds to yourself.

Responsible design



We're continually working to make our supply chain more sustainable and transparent. This clock radio is made with post-consumer recycled plastics, and our packaging uses FSC-certified recycled cardboard and soy-based ink.

Specifications

Sound

Output power (RMS): 5W
Sound System: Mono
Volume control: rotary (digital)
Output power (MAX): 10W
Total harmonic distortion: <10%

Loudspeakers

Full range driver diameter: 2.5"
Number of full range drivers: 1

Connectivity

Bluetooth: Yes, support SBC & AAC streaming
Bluetooth version: 5.4
Bluetooth profiles: A2DP, AVRCP
Bluetooth range: 25m (free space)
3.5mm headphone jack
Audio in: No

Tuner/Reception/Transmission

Antenna: Telescopic
Auto digital tuning
Tuner bands: FM
Station presets: 20 FM
RDS: Yes.

Convenience

Backlight color: black
Display type: TFT display

Power

Battery Capacity: 3.65V, 2600mAh
Battery type: Li-ion polymer (replaceable)
Input: 5V, 2A
Standby power consumption: <0.8W
Operating time on battery: 15 hour(s)
Power type: DC in (via USB-C)
Charging time: 3.5 hour(s)

Packaging dimensions

Height: 12.5 cm
Packaging type: Box
Type of shelf placement: Standing
Width: 21.5 cm
Depth: 11.5 cm
Number of products included: 1
Gross weight: 0.761 kg
Nett weight: 0.618 kg
Tare weight: 0.143 kg

Product dimensions

Height: 11.16 cm
Width: 19 cm
Depth: 9.15 cm
Weight: 0.55 kg

Accessories

Included accessories: USB cable, Quick start guide, Warranty certificate

Alarm

Alarm source: FM radio, Buzzer
No. of alarms: 2
Sleep timer: 15/ 30/ 60/ 90/ 120 mins
Snooze (repeat alarm): 10/ 20/ 30/ 40/ 50/ 60 mins
Gentle Wake
Kitchen timer
Alarm frequency:
Once/Daily/Weekday/Weekend

Clock

Display: TFT
Type: Digital
Time format: 12H, 24H
Brightness control (Dim): High/Medium/Low

Sustainability

Plastic shell: contains 92% GRS-certified recycled post-consumer Acrylonitrile Butadiene Styrene (ABS) TE-00132492

