

PHILIPS



Cordless epilator;
Wet & Dry

Epilator Series 8000

Wet & Dry use

For legs and body

Efficient epilation

3 attachments in total



BRE708/00

Bye Hair. Efficient Epilation. Gentle Care.

Free from hair removal routine for up to 4 weeks.

Our most efficient epilator, your smoothest skin. Introducing world's first epilator with ProGuide with 360° visibility for efficient and gentle results.

Your me-time moment at home

- Effortless. 60 min on one charge. Cord-free.

Our most efficient epilator

- Smoothness for up to 4 weeks
- Efficient and fast. Light it. See it. Catch it.
- 100% showerproof
- Buy once. Use for years**

More skin comfort*

- ProGuide. Less pain, more skin comfort*

Epilator Series 8000

Cordless epilator; Wet & Dry

BRE708/00

Highlights

Smoothness for up to 4 weeks



Enjoy to be free from hair removal routine. No more waiting for hair to grow: removes hair 3 times shorter than wax.

Less pain, more skin comfort*



World's first epilator with ProGuide with 360° visibility for efficient and gentle results. ProGuide perfects your 75° epilation angle for best results and keeps your skin tight for more skin comfort. 360° LED light helps you spot and remove more hairs.


Efficient and fast



Efficient and fast results with Double Action Technology. Catches even the shortest hair with ceramic tweezers. Grips and remove hairs as short as 0.5mm. No need to press. Simply glide.


Integrated LED light makes sure no hair hides from you. Get it done in less than 6 mins on both lower legs.

Wet & Dry

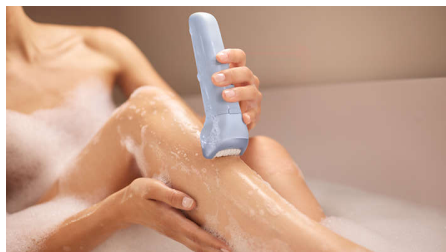

From the shower to the sink - epilate wet or dry, your choice, your convenience. Warm water relaxes your skin and makes the treatment more comfortable. Handle with non-slip patterns improves the grip in the shower.

More powerful battery

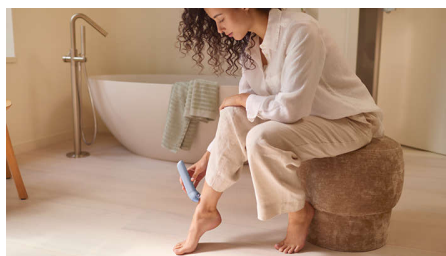

Stay powered for 60 min on one charge. No interruptions. No cord holding you back - effortlessly reach every spot. New design comes with matt finishing & non-slip patterns for improved grip in the shower.

Buy once. Use for years**



A one-time purchase that lasts for years.

Specifications

Accessories

Pouch
Epilator head
ProGuide

Power

Battery type: Li-ion
Charging: 3 hours
Quick charge
Battery usage time: 60 minutes

Technical specifications

Voltage: 5V / 1.5A
Number of tweezers: 32
USB-A cable
Tweezing actions speed 1: 64000 per minute
Tweezing actions speed 2: 70400 per minute
Power adapter: No

Features

Speed settings: 2
Cordless

Ease of use

Wet & Dry use
LED light

