

# PHILIPS



## Bluetooth party speaker

120 W max (60 W RMS), Bass+

Beat-synced party lights

Bluetooth® Auracast™ and TWS

Up to 10 hours play time



TAX3000

## Born for basslines and karaoke

Bring the fun with the portable speaker that loves any excuse to party! Beat-synced LEDs vibe to the music while Bass+ delivers deep, precise bass at any volume. Two mic inputs let you connect to other speakers for bigger sound.

### Portable party speaker. Deep, controlled bass.

- Loves a bassline. 60 W RMS of rich sound and Bass+
- 8" woofer, 2x 2" tweeters, 120 W max (60 W RMS)
- Cue the tunes! Bluetooth®, aux-in, and USB playback
- TWS and Auracast™ for multi-speaker setups

### LED lightshow and karaoke effects

- Mic inputs and stands
- Beat-synced lightshow. Rainbow LEDs pulse to the music
- 13 different lighting modes let you set the perfect vibe

### Rock up ready to party

- Easy control via speaker panel or our companion app
- Up to 10 hours play time and built-in carry handle

# Highlights

## 120 W max (60 W RMS), Bass+



Love a good bassline? With its 8" woofer and our exclusive Bass+ technology, the bass on this party speaker will sound deep, rich, and full—even if you're listening at lower volumes while chilling out at the end of the night. You get 120 W max (60 W RMS) of bold sound, and two 2" tweeters mean vocals don't just sing, they soar.

## Bluetooth® 6.0

Stream your playlists, plug in a USB drive, or go ahead and hook up your DJ decks or CD player via audio-in. If you're streaming tunes, Bluetooth® 6.0 brings you a faster, steadier connection for better sound quality that won't dip. It also gives you a wider range so you can control those playlists from practically anywhere in the party.

## TWS and Auracast™ compatible

Want more? For a wider soundstage, you can pair with another TAX3000 speaker via True Wireless Stereo (TWS). For bigger events or the ultimate house party, you can broadcast the tunes to as many Auracast™ compatible


speakers as you could ever need! Send the beats around the house or create a wall of sound in one room.

## Mic inputs and stands



There's nothing like a karaoke session or even some impromptu club vocals for bringing everyone together. This party speaker comes equipped with two mic inputs: you can control the respective mic volume using physical controls on the speaker panel, or our companion app. There are two mic stands built in the back of the product and can be pulled out to hold the mics when the mics are not in use.

## Beat-synced party lights

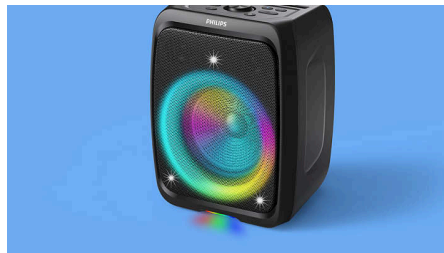

When the tunes are pumping, a rainbow of colorful RGB LED lights shimmer and pulse on the surface of this speaker's woofer. With 13

light-effect modes to choose from, you get to set the perfect vibe: simply press the light button on the speaker panel or use our companion app to get the lightshow started.

## Up to 10 hours play time

Rock up ready to party all night! The built-in carry handle makes it easy to take this party speaker with you, and the rechargeable battery gives you up to 10 hours play time from a full charge. Recharging the battery fully takes approximately 3.5 hours.

## Easy control

Philips Entertainment



You can take control of the volume, lights, and karaoke effects via the speaker panel—or use the Philips Entertainment app, which also lets you fine-tune bass and treble frequencies. Want to keep the neighbors happy? You can turn Bass+ off and scale back the bass via our app or the Bass+ button on the speaker.

# Specifications

## Sound

**Output power (RMS):** 60W (Based on IEC 60268 standard. Not tested under the FTC standard.)

**Sound enhancement:** Bass+

**Frequency response:** 20Hz - 20kHz,  $\pm 3$ dB

**Output power (MAX):** 120W

**Total harmonic distortion:** 10%

**Speaker impedance:** 4 ohm

## Loudspeakers

**Driver configuration:** 1-way

**Number of sound channels:** 1

**Number of tweeters:** 2

**Number of woofers:** 1

**Tweeter diameter:** 2"

**Woofer diameter:** 8"

## Connectivity

**Bluetooth version:** 6.0

**Bluetooth profiles:** A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC

**Bluetooth range:** 10M (free space)

**USB:** Type-A (playback); Type-C (charging)

**Audio in:** 1x 3.5mm Line in

**USB charging:** 5V, 2A

**Mic in:** 2x (6.3mm w/ vol control)

**DLNA Standard:** No

**Multiple speaker connection**

**Multiple speaker scenario:** Stereo, Broadcasting, Receiving

**Multiple speaker technology:** TWS, Auracast

**Smart Home:** None

## Supported Audio Formats

**Bluetooth:** SBC

**USB:** MP3

## Convenience

**Ease of Use:** Mic stands (built-in)

**Karaoke:** MIC volume, (on app) echo, voice fader, voice changer

**Buttons and controls:** Lighting switch, Play/Pause, Power on/off, Bluetooth, Main unit volume, Mic volume, Auracast, Bass+

**Volume control:** Rotary

**Light Effect:** Yes, 13 light effects

## Compatibility

**Smartphone/tablet APP control**

## Power

**Battery Capacity:** 2600 mAh, 7.3 V

**Input:** 5V, 2A

**Standby power consumption:** <0.5W

**Battery Type:** Lithium-ion (built-in)

**Operating time on battery:** 10 hour(s)

**Charging time:** 3.5 hour(s)

## Packaging dimensions

**Height:** 47 cm

**Packaging type:** Box

**Type of shelf placement:** Standing

**Width:** 35 cm

**Depth:** 32 cm

**Number of products included:** 1

**Gross weight:** 6 kg

**Nett weight:** 4.35 kg

**Tare weight:** 1.65 kg

## Product dimensions

**Height:** 36.45 cm

**Width:** 28 cm

**Depth:** 24.8 cm

**Weight:** 4.26 kg

## Accessories

**Included accessories:** Quick start guide, Warranty certificate, Safety warranty sheet, USB cable

## Design

**Color:** Black

