

PHILIPS

4K UHD monitor

Business monitor

3000 series

27" (68.6 cm)

3840 x 2160 (4K UHD)

27B1N3800



Daily routine simplified

This 27-inch monitor showcases beautiful imagery in 4K resolution and a 1.074 billion color gamut. In addition, its DisplayPort connectivity and IPS panel make for a great all-around option for your workspace.

Excellent performance


- IPS technology for full colors and wide viewing angles
- SmartImage presets for easy optimized image settings
- UltraClear 4K UHD (3840x2160) resolution for precision
- 1.074 billion colors for smooth color gradations and detail

Designed for the way you work

- Built-in stereo speakers for multimedia
- SmartErgoBase enables people-friendly ergonomic adjustments
- DisplayPort connection for maximum visuals
- HDMI ensures universal digital connectivity
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity
- EasyRead mode for a paper-like reading experience
- TUV Eye Comfort certified to reduce eye fatigue


Highlights

IPS technology

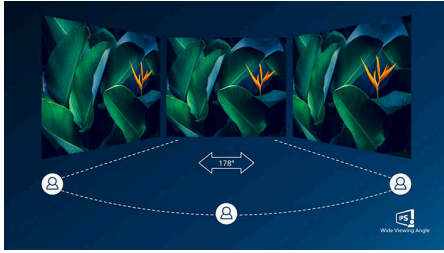


IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle - even in 90 degree Pivot mode! Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

10-bit colors

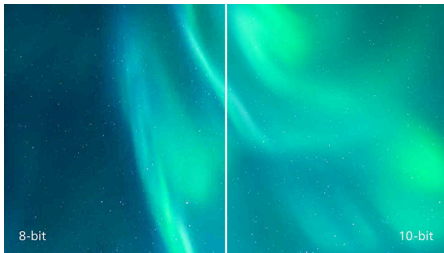

The 10-bit display delivers rich color depth with 1.074 billion colors and 12-bit internal processing for re-creating smooth, natural colors without gradations and color banding.

UltraClear 4K UHD Resolution

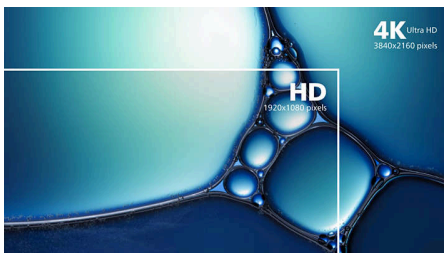

These Philips displays utilize high performance panels to deliver UltraClear, 4K UHD (3840 x 2160) resolution images. Whether you are demanding professional requiring extremely detailed images for CAD solutions, using 3D

graphics applications or a financial wizard working on huge spreadsheets, Philips displays will make your images and graphics come alive.

SmartImage



SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

DisplayPort connection



DisplayPort is a digital link from PC to Monitor without any conversion. With higher capabilities than DVI standard, it is fully capable to support up to 15meter cables and 10.8 Gbps/sec data transfer. With this high performance and zero latency, you get the fastest imaging and refresh rates - making DisplayPort the best choice for not only general office or home use, but also for the demanding gaming and movies, video editing and more. It also keeps interoperability in mind via use of various adapters.

HDMI Ready




An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

LowBlue Mode

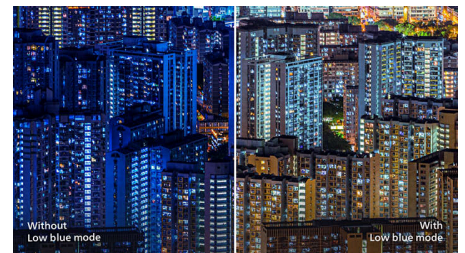


Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.




Highlights

EasyRead mode

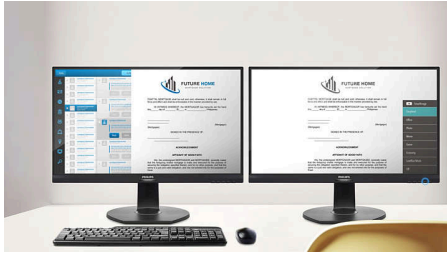


EasyRead mode for a paper-like reading experience

Built-in stereo speakers

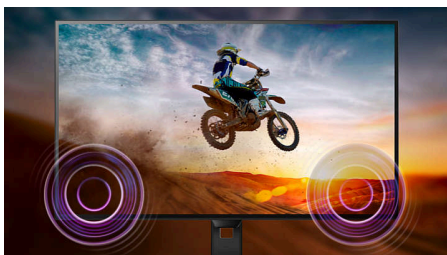

A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

SmartErgoBase

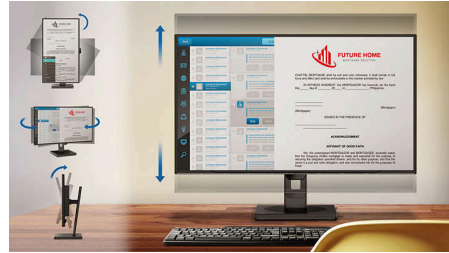

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height adjustable stand guarantees the optimal viewing level, reducing the physical strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.

TUV Rheinland Eye Comfort



Philips display meet TUV Rheinland Eye Comfort standard to prevent eye strain caused by prolonged computer use. With TUV Eye Comfort certification, Philips displays ensure flicker-free, low blue mode, no disturbing reflections, wide viewing angle and less reduction of image quality from different angles and ergonomic stand designs for ideal viewing experience. Keep your eyes healthy and boost work productivity.



Built-in Speaker

Specifications

Picture/Display

Panel Size: 27 inch / 68.6 cm
Aspect ratio: 16:9
LCD panel type: IPS technology
Backlight type: W-LED system
Pixel pitch: 0.1554x0.1554mm
Optimum resolution: 3840x2160@60Hz
Brightness: 350 cd/m²
Display colors: 1.07B (10 bits)*
Color gamut (typical): sRGB 99.9%, NTSC 116%
Contrast ratio (typical): 1000:1
SmartContrast: 50,000,000:1
Response time (typical): 4 ms (Gray to Gray)*
Viewing angle: 178° (H) / 178° (V), @ C/R > 10
Picture enhancement: SmartImage
Effective viewing area: 596.736 (H) x 335.664 (V) mm
Scanning Frequency: 30 - 140 kHz (H) / 23 - 75 Hz (V)
sRGB
Flicker-free
Pixel Density: 163 PPI
LowBlue Mode
Display Screen Coating: Anti-Glare, 3H, Haze 25%
EasyRead
HDR: HDR10

Connectivity

Signal Input: HDMI 2.0 x2, DisplayPort 1.4 x1
Sync Input: Separate Sync, Sync on Green
Audio (In/Out): Audio out
HDCP: HDCP 1.4/ 2.2 (DP/HDMI)
USB Hub: USB3.2, Gen1, 5G Upstream: USB-B x1
 Downstream: USB-A x4 (with x1 fast charge B.C 1.2)

Convenience

Built-in Speakers: 2Wx2
Plug & Play Compatibility: DDC/CI, Mac OS, sRGB, Windows 11 / 10
User convenience: SmartImage, Input, Brightness, Menu, Power On/Off
OSD Languages: Brazil Portuguese, Czech, Dutch, English, French, Finnish, German, Greek, Hungarian, Italian, Japanese, Korean, Portuguese, Polish, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian

Other convenience: Kensington lock, VESA mount (100x100mm)
Control software: SmartControl

Stand

Height adjustment: 130 mm
Pivot: -/+ 90 degree
Swivel: -/+ 180 degree
Tilt: -5 ~ 25 degree

Power

ECO mode: 20.6 W (typ.)
Power supply: Built-in, 100-240VAC, 50-60Hz
Off mode: 0.3 W (typ.)
On mode: 32.2 W (typ.)
Standby mode: 0.3 W (typ.)
Power LED indicator: Operation - White, Standby mode- White (blinking)
Energy Label Class: E

Dimensions

Packaging in mm (WxHxD): 700 x 456 x 215 mm
Product without stand (mm): 613 x 366 x 51 mm
Product with stand(max height): 613 x 524 x 205 mm

Weight

Product with packaging (kg): 9.28 kg
Product with stand (kg): 6.05 kg
Product without stand (kg): 4.15 kg

Operating conditions

Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
Temperature range (operation): 0°C to 40 °C
Relative humidity: 20%-80 %
Temperature range (storage): -20°C to 60 °C
MTBF (demonstrated): 70,000 hrs (excluded backlight)

Sustainability

Environmental and energy: Energy Star, RoHS, EPEAT*
Recyclable packaging material: 100 %
Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

Regulatory Approvals: CB, CE Mark, TUV/GS, TUV Ergo, TCO Certified, EAC, EAEU RoHS, MEPS, PSB, UKCA, EMF, FCC, ICES-003, TUV Eye Comfort certified

Cabinet

Finish: Texture
Foot: Black/Black
Front bezel: Black/Black
Rear cover: Black/Black

What's in the box?

Cables: HDMI cable, DP cable, Power cable
Monitor with stand
User Documentation

