PHILIPS

Water Dispenser



Setup & Installation



Leave at least 20cm of space behind the unit for ventilation.

Install the base and the drip tray.

tank to the "Max" line.

② Press and hold the " Clean " for 3 seconds

until the " (1) " lights up to begin flushing.



1) Place the tap water tank firmly into position against the back panel.

At 0-80% (while the "%" icon blinks), empty


When " \bigwedge_{x} " blinks, empty the tap water tank

and refill it with tap water to the "Max" line.

the filtered water jug and place it back.

(Repeat this 8 times.)

② Insert the filtered water jug straight down until it clicks into place.

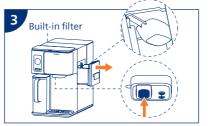


- 1 Confirm the filter is pre-installed.
- ② Open the ice box and ensure the ice scoop is inside.
- 3 Check that the spout cover is properly attached.



At 90%, place a large container under the spout. Press the " () " to dispense water until the process reaches 100%. (Press the " (again to pause if needed.)

Product Overview

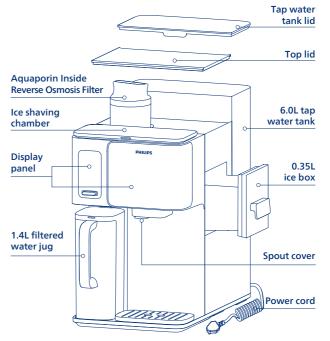

Status Light Instructions

	Status	Meaning
ואַ	Solid white light	UV sterilization in progress.
Δ	Solid white light	Filtration in progress.
	Blinking white light	Low filtered water level, please try to dispense water later.
\ \ X	Blinking white light	The water in the tap water tank has not been changed for an extended period, please replace it.
	Blinking red light	The water in the tap water tank is at a low level or the water quality is poor, please discard the remaining wastewater and refill the tank.
	* The water remaining in the tank is RO concentrate (wastewater). Please empty the tap water tank before adding fresh tap water to ensure filter life and filtration effectiveness.	
<u>6</u>	Solid white light	Ice box is in place.
	Blinking white light	Ice box is not in place, please return it promptly after use.
J	Solid white light	Filtered water jug is in place.
	Blinking white light	Filtered water jug is not in place, please reposition it correctly to dispense water.
<u>ו</u>	Solid white light	Filter is within its service life, feel free to use.
	Blinking red light	Filter life is nearing its end, please purchase a new filter promptly.
	Solid red light	Filter life has expired, please replace the filter.
۵	Solid white light	Water quality is excellent, safe for drinking.
	Solid white+ yellow light	Water quality is fair, please discard the water in the filtered water jug.
	Solid yellow light	Water quality is poor, please discard the water in the filtered water jug and replace the water in tap water tank.

尺寸: 540×140mm 单页尺寸: 180×140mm

128g铜版纸,双面覆哑膜,彩色印刷

Ice Cube / Cold Water Function Indicators



Progress Display on the Light Ring

Ice Cube Making: preparation progress of each ice batch. Cold Water Making: cold water preparation progress.

Ice Cube / Cold Water Function



Ice Cube Function

Simultaneous ice cube and cold water production.

Turn on: Press and hold " for 3s to " 🔏 " and " 💥 blinking.



- to drain cooling tank and wait until the drainage progress reaches 100%.
- 3 If turn off the ice cube function, please empty the ice

Ice Shaving Function

- for shaved ice.
- ② Open the ice shaving chamber lid, add ice cubes up to the max line, and close the lid.

Water Dispensing Operation





Status Light | Meaning lce shaving in progress -----Solid to | Ice shaving light off complete

Default shaving time is 60 seconds. If no shaved ice comes out, press the lever

Cleaning

(Recommennd cleaning before and after each use)

- 1) Attach the spout cover and place a large container under the spout.
- ② Use the filtered water jug to gently rinse the ice shaving chamber.



Important Safety Instructions

- (1) Use only municipal tap water (5–38°C) in the tap water tank. Do not add other liquids or foreign materials.
- (2) For ice shaving, use only ice cubes made by this unit. Do not add other ice or food.
- (3) Do not put hands into the ice shaving chamber or attempt to remove the blades.
- (4) Do not put other ice into the ice box or place electrical devices in it.
- (5) Keep the appliance out of reach of children and pets. Operate only under supervision.
- (6) Handle with care to avoid injury or damage from dropping.
- (7) For household use only. Not for commercial purposes.
- (8) For indoor use only. Connect to a properly grounded outlet.
- (9) Place in a cool, dry indoor location away from sunlight, heat sources, and flammable gases.
- (10) If malfunction or cord damage occurs, unplug immediately. Do not use. Contact authorized Philips service personnel for repair. Do not disassemble or repair yourself.
- (11) Due to product updates, some text may differ from the actual product. Please rely on the physical unit for accurate information.

WARNING:

- 1. Keep area around appliance clear for proper ventilation.
- 2. Do not use non-recommended means to accelerate defrosting.
- 3. Do not damage the refrigerant circuit.
- 4. Do not use unauthorized electrical appliances inside the unit.
- 5. If damaged, the power cord must be replaced by qualified personnel.
- 6. Do not store explosive substances (e.g., aerosol cans) in the appliance.

₩ (-I_I % Chilled

Cold Water Function

Produce cold water only.

Turn on: Press and hold " Chilled " for 3s to " # " blinking.



Turn Off Ice Cube/Cold Water Function

- ② Place a large container under the spout, press " () "
- tray during drainage.
- △ To switch between ice cube and cold water functions, press and hold the corresponding button.







Dispensing Water

- 1) Press the selected button repeatedly to choose the corresponding temperature or volume.
- ② For precise settings, adjust with " " or " + " for decreasing or increasing the temperature or volume.
- ③ Unlock: When selecting warm/hot/boiling water ≥45°C, press " $\frac{1}{\text{Safety Lock}}$ " \rightarrow " \bigcirc " in sequence.