

PHILIPS

Car headlights bulb

Ultinon Pro6000 Boost HL

H1-LED

Road-legal LED bulb

Broad fleet compatibility

Superior brightness

11258U60BX2



Ultimate road-legal LED bulb

Ultra-compact with high performance

Discover the Philips Ultinon Pro6000 Boost series, the new benchmark in automotive road-legal LED bulbs. Explore the next generation of retrofit LED lighting and enter a new era where performance and light quality reach new heights.

Accredited LED range

- Accredited by automotive experts

Easy-to-fit design

- Compatible with a wide range of vehicles

Improved brightness

- More brightness on the road

Exclusive Philips technology

- High-quality light improves on-road vision
- Long-term durability and warranty

Reliable Philips quality

- Trust Philips know-how

Ultinon Pro6000 Boost HL

Car headlights bulb

LUM11258U60BX2/10


Highlights

Accredited LED range



The Philips Ultinon Pro6000 Boost range has been approved for road use in several European Union countries*, making it compliant with road-traffic regulations. As a result, Philips Ultinon Pro6000 Boost LED bulbs can safely replace traditional bulbs in a broad range of vehicles, from cars to two-wheelers, motor homes, vans and light commercial vehicles. Drive in confidence with our new Philips Ultinon Pro6000 Boost LED bulbs.

Wide compatibility

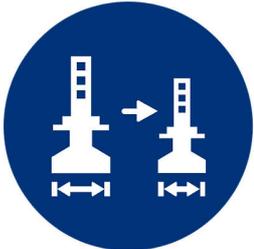


The Philips Ultinon Pro6000 Boost H1-LED bulb features an ultra-compact footprint, allowing fitting in the narrowest headlights. This easy-to-fit design makes light replacement easier for both high- and low-beam functions*, offering drivers greater versatility and functionality. Check out our Philips Ultinon Pro6000 Boost compatibility list at [Philips.com/roadlegalLED](https://www.philips.com/roadlegalLED) and get the best LED replacement for your halogen bulbs!

Improved brightness



Get more brightness from even lower light output! The Philips Ultinon Pro6000 Boost H1-LED bulb offers an optimal beam pattern in a revolutionary, highly compact architecture that delivers outstanding optical performance. Philips Ultinon Pro6000 Boost H1-LED bulbs are also equipped with our cutting-edge SafeBeam technology, producing a glare-free beam of light guaranteed not to dazzle oncoming drivers. Upgrade your headlights to peak LED automotive brightness with our Philips Ultinon Pro6000 Boost bulbs.

Exclusive light quality

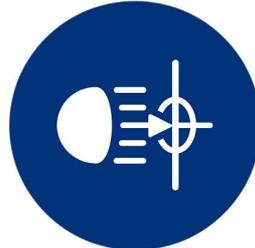

The Philips Ultinon Pro6000 Boost features a brilliant white light beam achieved through a unique 5800 Kelvin colour temperature. Its optimal spectrum enhances the visibility of road signs, making them more easily discernible for drivers. With Philips Ultinon Pro6000 Boost bulbs, you can now enjoy clearer vision from exceptional lighting.

Long-term durability



Featuring advanced cooling technology, the Philips Ultinon Pro6000 Boost range is designed to improve heat dissipation, providing an LED bulb life of up to 3000 hours. Its unique design offers consistent, reliable performance, lasting six times longer than comparable halogen bulbs. For peace of mind, the Philips Ultinon Pro6000 Boost range has a full 5 year warranty, including a 2 year standard warranty and an additional 3 years of extended protection**. Benefit now from all of the advantages of improved light and the assurance of long-lasting performance.

Trust Philips know-how



With our extensive expertise in building premium automotive lighting products that prioritise safety and reliability, we excel in maintaining high-quality standards. Our range of Philips LED bulbs meets the strict requirements for electromagnetic compatibility (EMI) with vehicle systems and offers stable, professional-quality lighting. Rely on the world-renowned expertise of an automotive specialist.

Ultinon Pro6000 Boost HL

Car headlights bulb

LUM11258U60BX2/10

Specifications

Marketing specifications

Product highlight: Ultra-compact, SafeBeam
Expected benefits: Road-legal, More brightness, Easy to fit

Product description

Application: High Beam, Low Beam
Base: P14.5s
Colour temperature: 5800 K
Designation LED Type: H1-LED
Ingress protection rating (IP): IP54
Operating Temperature: -40 to +105°C
Range: Ultinon Pro6000 Boost HL
Technology: LED
Type: H1
ECE R37 certification: No
ECE R10 certification:
Polarity free: Not relevant
Designation: LED H1 11258 U60B P14,5s X2
Homologation: National approval*
Compliance to ROHS

Compliance to EU ELV
Vibration and shock Resistance (IEC 60810)
Light performance: Up to +100%

Lifetime

Life time: 3,000 hours

Light characteristics

Lumens: 1550 lm

Electrical characteristics

Wattage: 13 W
Voltage: 12 V

Ordering information

Order entry: 11258U60BX2
Ordering code: 2759794

Packaging Data

Packaging type: Carton
Packing: Set box
EAN1: 8719018027597
EAN3: 8719018027603

Packed product information

Length: 5 cm
Width: 13.5 cm
Height: 11.1 cm
Net weight per piece: 27 g g
Net weight: 54 g
Pack Quantity: 2 pcs
Gross weight: 0.111 kg

Outer pack information

Length: 23.6 cm
Width: 11.6 cm
Height: 15.4 cm
Gross weight [kg]: 0,501
Quantity: 8 pcs
MOQ (for professional): 8 pcs (4 sets)

© 2025 Koninklijke Philips N.V.
All Rights reserved.

Issue date 2025-11-20
Version: 8.8.1

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

EAN: 87 19018 02759 7

www.philips.com



* * The Philips Ultinon Pro6000 LED Boost range is approved for road traffic in the respective countries where approval exists and for the listed range of vehicle models and lighting functions only. For more information about the legal requirements that apply in your country and to consult our latest compatibility list, visit Philips.com/roadlegalLED. You are responsible for complying with legal requirements applicable in your country.

* ** The Philips Ultinon Pro6000 LED Boost range is covered by a 2-year guarantee on purchase + 3 years' free extended warranty upon registration. Visit philips.com/auto-warranty to know more about our warranty policy. The Philips warranty covers manufacturing defects and non-commercial use only.