

# PHILIPS

## Smart safe box


Keyless unlocking

Handle frozen after lockout

Backup system

Abnormal alert

SBX702BCGX

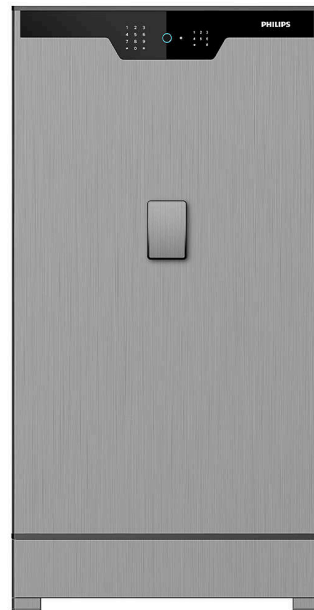

## Secure your valuables

### With backup unlocking system

Enjoy fast unlocking at fingertips. Philips SBX702 supports fingerprint and PIN code unlocking. 2 independent unlocking systems are designed to protect your valuables. The backup system is for emergency use and gives upgraded security.

#### **Keep your valuables neatly organized**

- Keep your watches at pristine condition
- Offer special care to your small valuables

#### **Convenient unlocking at fingertips**

- With fingerprints and PIN codes
- Provide enhanced security

#### **Craftsmanship ensures safety and security**

- Leave no hidden risk
- Prevent forced unlocking
- Locked tight at 4 sides for upgraded protection

#### **Caring details make worry-free experience**

- For easy use in dark space
- Give full-time protection

# Highlights

## 32 mm solid deadbolts



32 mm solid deadbolts at four sides of the door provide enhanced security. The deadbolts are made of stainless steel, making it resistant to rusting and corrosion.

## Abnormal alert



SBX702 supports multiple alerts such as vibration alert, false alert, low-voltage alert, etc. In case of potential risks, it makes high-pitch siren to protect your valuables.

## Backup system



The safe box has 2 independent unlocking systems. The backup system ensures the safe can be normally operated in case of primary system failure. You'll no longer have to worry about your valuables getting stuck in the safe.

## Handle disabled after lockout



After the safe is locked, the handle separates from gearing and freezes. It is for preventing forced unlocking that try to enter the safe by breaking the handle.

## Interior light



The safe has interior light that turns on once the safe door opens. This ensures worry-free using experience in dark environment.

## Keyless unlocking



Getting rid of mechanical unlocking, this safe adopts a semi-conductor fingerprint sensor and a touch keypad, allowing unlocking with both fingerprints and PIN codes. A light touch to wake up the system and have quick identification. Biometric lock brings smoother and faster than ever unlocking experience.

## One-piece cabinet



The safe is solid and secure thanks to the cabinet that is made with single piece of metal sheet. A built-in touch keypad gives it a simplistic look and protects the electronic circuit board. All makes this safe highly functional, stylish, secure and trustworthy.

## Quad watch winder



SBX702 are equipped with 4 craftily made watch winders, allowing you to keep your previous watches safe and clean when you are not wearing them.

## Sliding drawer



The safe has a sliding drawer designed for storing small valuables, such as jewelry. The soft fabric protects delicate items from scratches and keep them at best condition.

# Specifications

**Color scheme**

Space gray

**Power supply**

Power supply of locking system: 4 AA batteries

Emergency power supply: External power box

Power supply of watch winder: Adaptor 3V1A

Battery life\*: 6-12 months

Working voltage: 4.5 ~ 6 V

**Net weight of product**

234 kg

**Dimensions of product (HxWxD)**

1,200x630x550 mm

**Unlocking methods**

Fingerprint: maximum 30 sets

PIN code: maximum 10 sets

**Indicator lights**

Blue: normal working

Green: recognition succeeded

Red: recognition failed

Red light flashing: low voltage, abnormal alert

**Watch winder**

4 pcs

