

PHILIPS

Micro Music System

Bass-reflex speakers

100 W

Bluetooth® 5.4

DAB+/FM, CD, USB, Audio-in

TAM4555



All your music, loud and proud!

DAB+/FM radio, CDs, streaming and more! This compact micro system with bookshelf-style speakers fills larger rooms with rich, 100 W sound—and Auracast™ is supported so you can broadcast what you play to compatible speakers around the house.

Compact micro system. Rich stereo sound.

- Powerful stereo sound for everything you love
- Bass-reflex loudspeakers for powerful low tones
- 2-way speakers. 4" woofer, 0.75" tweeter. 100 W (RMS) output
- Digital Sound Control. Choose a preset sound style

Easy to use. Plays from any source.

- Plays all of your music
- DAB+/FM radio, CD player, USB port, audio-in
- Bluetooth® 5.4 and Auracast™ streaming at home
- Philips Entertainment app. Simple sound control

Made with environmentally friendly materials

- Compact and classic stereo design
- GRS-certified recycled plastic. Responsible packaging
- Main unit dimensions: 220 x 105 x 231 mm
- Speaker dimensions: 148 x 240 x 203 mm

Highlights

Powerful sound

Get lost in music! Bookshelf-style 2 way speakers give you rich, immersive stereo sound from 4" woofers, 0.75" tweeters and bass-reflex ports. The system's powerful 100 W (RMS) output lets you pump up the volume for a party or a larger room. Perfect for big lounges and open-plan living spaces.

All your music


Music, podcasts, news, dramas, sports—the list is endless! You can tune in to crystal-clear DAB+/FM radio, stream your sounds via Bluetooth®, or connect to other sources like flash drives via USB or turntables via audio-in. The digital radio tuner with 20 presets delivers crystal-clear reception and the CD player can read both MP3 CDs and recorded CDs.

Bluetooth® 5.4 and Auracast™

Support for Auracast™ lets you broadcast the sound from this micro system to multiple Auracast™ compatible speakers around the

house. Plus, Bluetooth® LE Audio and the LC3 codec are supported so you'll enjoy noticeably better sound when streaming from your smart device to the micro system.

Philips Entertainment app

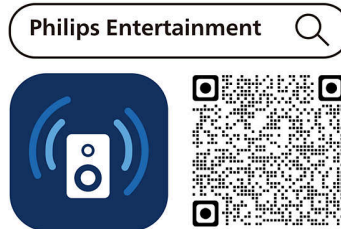

Got wide-ranging tastes? You won't even have to get out of your chair to get the best sound for what you're listening to! Download our companion app and you can use your smart device to select preset sound styles from the Digital Sound Control menu, switch between sources and more.

Classic design

With its subtly two-toned central unit and speaker cabinets, this handsome micro system recalls the design of classic hi-fi separates. The compact build makes the system easy to position in your home, and there are buttons on the front of the unit for playback and source selection.

Recycled materials



We use post-consumer recycled plastics in this product and our packaging is plastic-free. Inserts are printed on recycled paper with soy-based ink, and the packaging itself is made from FSC-certified recycled cardboard.

Specifications

Sound

Output power (RMS): 100 W

Sound enhancement: digital sound control, bass reflex speaker system, treble and bass control, Custom equaliser (on app)

Volume control: rotary

Frequency response: 66 Hz - 20 kHz

Sound mode: Powerful, Clear, Bright, Warm, Balanced

Speaker impedance: 4 ohm

Loudspeakers

Driver configuration: 2-way

Number of sound channels: 2.0

Number of tweeters: 2

Number of woofers: 2

Tweeter diameter: 0.75"

Woofer diameter: 4"

Connectivity

USB: USB host

Bluetooth version: 5.4

Bluetooth profiles: A2DP, AVRCP, Streaming

Format: SBC, LC3

Bluetooth range: Line of sight, 30 m or 100 ft

Audio in: 3.5 mm

DLNA Standard: n.a.

Multiple speaker connection

Multiple speaker scenario: Receiving, Broadcasting

Multiple speaker technology: Auracast

Smart Home: n.a.

Audio playback

Disc playback modes: fast forward/reverse, next/previous track search, repeat/shuffle/programme

Playback media: CD, MP3-CD, USB flash drive, CD-R/RW

USB Direct playback modes: fast reverse/fast forward, play/pause, previous/next, repeat, shuffle, stop

Audio supported formats: MP3, WMA, WAV, FLAC

Max sample rate: 24-bit/48 kHz

Tuner/Reception/Transmission

Antenna: Detachable pigtail (75 ohm)

Tuner bands: FM stereo, FM mono, DAB/DAB+

Station presets: 20 (FM) + 20 (DAB)

RDS: Yes.

Tuner enhancement: auto digital tuning, auto scan, Easy set (plug and play)

Tuner type: Digital

Convenience

Clock: On main display, 24/12-hour display

Remote Control

Loader type: tray

Display type: LED display

Sleep timer

No. of alarms: 1

Alarms: Yes, DAB, FM, CD, USB

Compatibility

Smartphone/tablet APP control

Power

Power supply: 100-240 VAC, 50/60 Hz

Standby power consumption: <0.8 W (clock display on)

Packaging dimensions

Height: 31.6 cm

Packaging type: Box

Type of shelf placement: Standing

Width: 48.7 cm

Depth: 27.9 cm

Number of products included: 1

Gross weight: 7.05 kg

Net weight: 5.5 kg

Tare weight: 1.55 kg

Accessories

Included accessories: AC power cord, FM antenna, Remote Control, AAA Battery (x1), Quick start guide, Warranty Leaflet

Power cord: Length: 1.5 m

Design

Colour: Black

Wall mountable: No

System components: Main control unit, Speakers

Dimensions

Main Unit (W x H x D): 220 x 105 x 231 mm

Main Unit Weight: 1.5 kg

No. of speaker unit: 2

Set (W x H x D): 516 x 240 x 231 mm

Set Weight: 5.3 kg

Speaker Unit (W x H x D): 148 x 240 x 203 mm

Speaker Weight (per Unit): 1.9 kg

Sustainability

Plastic shell: contains 85% GRS-certified recycled post-consumer Acrylonitrile Butadiene Styrene (ABS) TE-00132492

