

The Philips logo is displayed in a bold, blue, sans-serif font. It is positioned in the top left corner of the page, partially overlapping a white rectangular area that also contains a green lantern. The background of the entire page is a photograph of a grassy field with a body of water in the distance, where several people are sitting and enjoying the outdoors. A wooden picnic table is in the foreground, and a black portable speaker with a red strap is resting on it. The speaker's LED lights are illuminated, showing a colorful pattern.

Wireless speaker

LED lightshow

Bass+ and Auracast™

20 hours play time

Wrist strap and splash proof



TAS2000B

Lights up and packs a punch

Get out there with the splash-proof compact speaker that gives you up to 20 hours play time on a single charge. Funky LED lights set the vibe, Bass+ delivers deep bass at any volume, and you can connect to other speakers for bigger sound.

Portable speaker. Plays long, packs easy

- Bold sound with surprisingly deep bass at any volume
- 20 W max (10 W RMS), Bass+ tech, and passive radiators
- Plays long, travels easily, and doesn't mind a little rain
- 20 hours play time and built-in mic for calls

Anywhere you go. Your music, your way.

- Wrist strap and IPX5 splash proof
- Bluetooth® streaming, multipoint, USB playback
- TWS and Auracast™ for multi-speaker setups
- Philips Entertainment app. Smart control for your speaker

Funky, compact, and made responsibly

- Beat-synced lightshow. Rainbow LEDs pulse to the music
- GRS-certified recycled plastic
- Responsible packaging
- Dimensions: (WxHxD) 18.1x7.1x7.1 cm

Highlights

Bold sound, Bass+




This compact portable speaker packs a punch for its size with 20 W max (10 W RMS) of rich sound. Twin passive radiators and our exclusive Bass+ technology keep the bass deep and tight—even if you're listening at lower volumes. There's also a built-in mic, so if a call comes in you can take it hands-free.

Up to 20 hours play time



With up to 20 hours play time on a single charge, you can keep the tunes coming all day and into the night. The handy wrist strap makes it easy to carry this speaker, and the IPX5 splash-proof build protects from raindrops and spills. A 30-minute charge gets you 5 hours of play time, and a full recharge takes around 2.5 hours.

Bluetooth® 5.4, USB playback

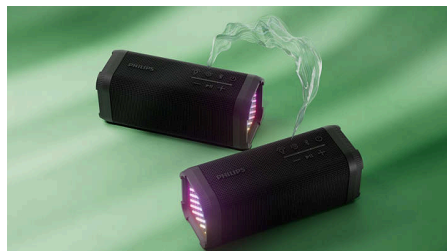

Playlists ready? Bluetooth® 5.4 brings you a steady connection for seamless streaming. Multipoint lets you connect to two Bluetooth® devices at the same time, and you can plug a portable music player or a thumb drive into the USB-A port on the speaker.


TWS and Auracast™ compatible

Want more? You can pair with another TAS2000 speaker for True Wireless Stereo (TWS). Or go bigger and use Auracast™ to broadcast what you're playing out to other compatible speakers: the LC3 codec is supported for better sound, and setup is simple via our companion app.

Beat-synced party lights

As the beats flow, colorful RGB LED lights pulse over and around the twin passive radiators. There are five different light modes to choose from. Simply press the light button on the speaker or use our companion app to get started—and let everyone know you came to party.

Philips Entertainment app

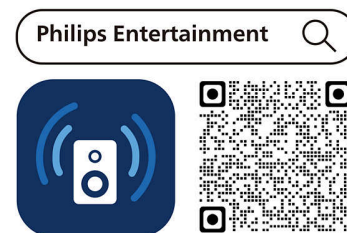

Our handy companion app lets you select a source, control playback and Bass+, switch between different light modes, check battery life, and more. Plus, an in-app PartyLink mode makes it simple to connect to other speakers via Auracast™ for even bigger sound.

GRS-certified recycled plastic



We use post-consumer recycled plastics in this product, and our packaging is plastic-free.

Responsible packaging



Inserts are printed on recycled paper with soy-based ink, and the packaging itself is made from FSC-certified recycled cardboard.

Specifications

Sound

Output power (RMS): 10W
Sound System: Mono
Sound enhancement: Bass+
Frequency response: 90 Hz - 20 KHz
Output power (MAX): 20W

Loudspeakers

Full range driver diameter: 48mm
Number of full range drivers: 1
Driver configuration: Full range
Number of sound channels: 1
Passive radiators: 2

Connectivity

Type of cable: USB charging cable (Type-C)
USB: Type-A (playback), Type-C (charging)
Bluetooth version: 5.4
Bluetooth profiles: A2DP, AVRCP, HFP, Multipoint
(Multipair) support, Streaming Format: SBC
Bluetooth range: Line of sight, 30m or 100ft
DLNA Standard: No
Multiple speaker connection
Multiple speaker scenario: Broadcasting,
Receiving, Stereo
Multiple speaker technology: Auracast TX/RX,
TWS

Supported Audio Formats

Bluetooth: SBC
USB: MP3

Convenience

Automatic power off
Ease of Installation: Automatic pairing
Call Management: Answer/End Call
Volume control: Tact switch
Water resistance: IPX5
Built-in microphone
Light Effect: Yes, 5 light modes
Display screen: No
Handsfree calling

Compatibility

Smartphone/tablet APP control

Power

Battery Capacity: 2500mAh, 3.7V
Battery type: lithium (built-in)
Operating time on battery: 20 hour(s)
Charging time: 2.5 hour(s)
Power bank: No

Packaging dimensions

Height: 20.7 cm
Packaging type: Box
Type of shelf placement: Laying

Width: 8.9 cm
Depth: 8.2 cm
Number of products included: 1
Gross weight: 0.622 kg
Nett weight: 0.524 kg
Tare weight: 0.098 kg

Product dimensions

Height: 7.1 cm
Width: 18.1 cm
Depth: 7.1 cm
Weight: 0.477 kg

Accessories

Included accessories: Quick start guide, World
Wide Warranty leaflet, Safety warranty sheet
Cable: USB charging cable

Design

Color: Black

Sustainability

Plastic shell: contains 53% GRS-certified recycled
post-consumer polycarbonate acrylonitrile
butadiene styrene

