


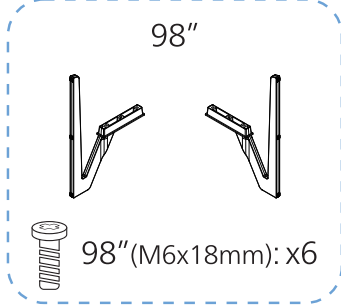
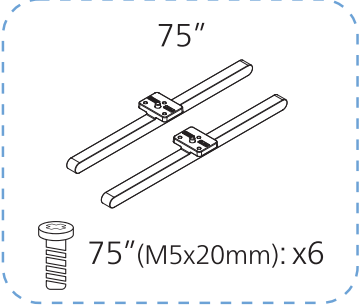
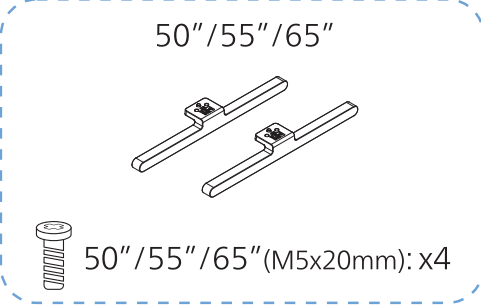
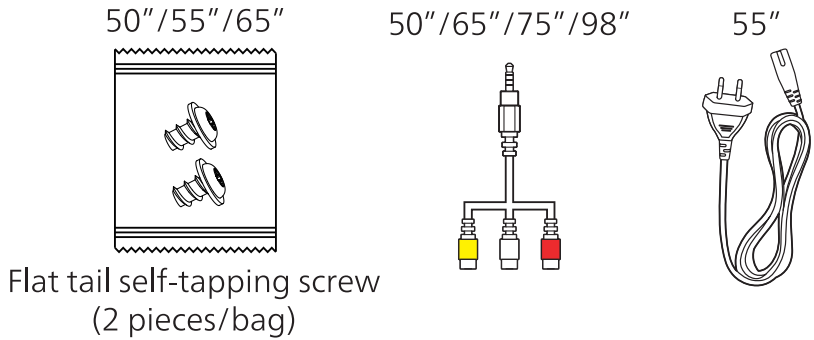


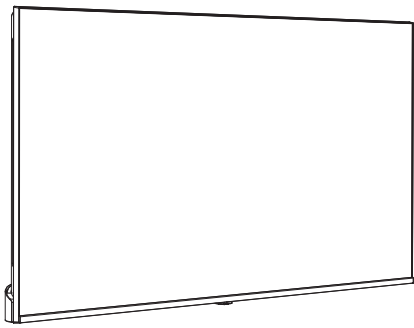

Tool needed
for assembly

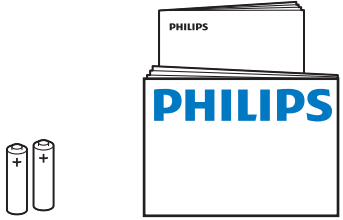


M: Machine screw




The actual accessories may differ from the illustrations, which are for reference purposes only.


1 50"/55"

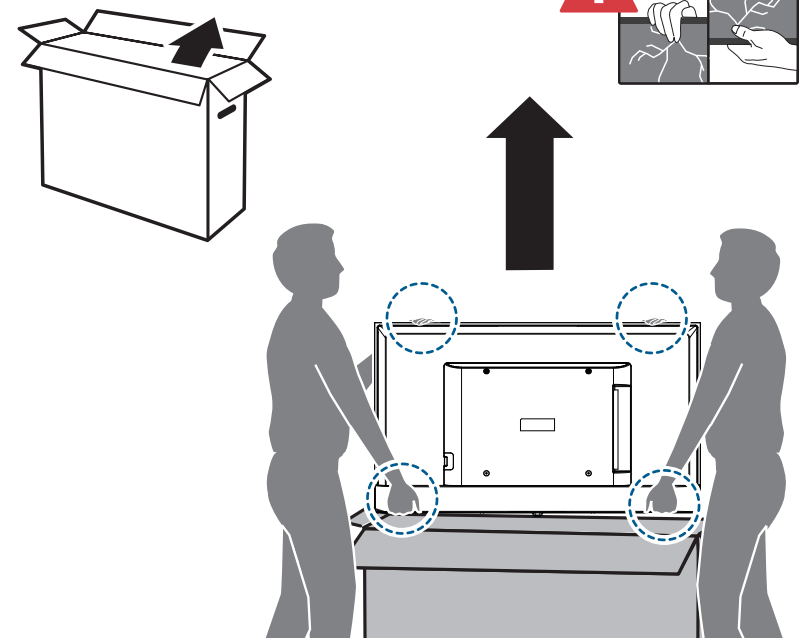


65"/75"

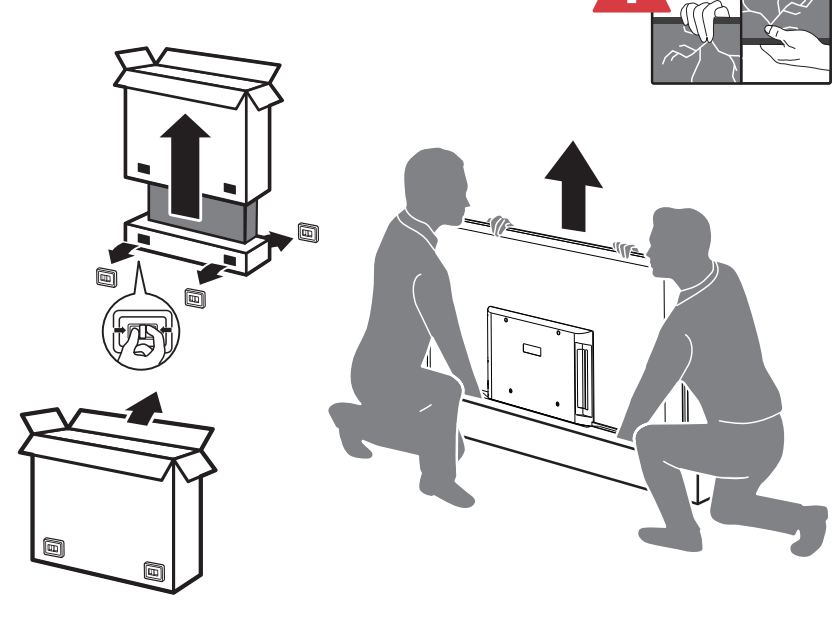


98"

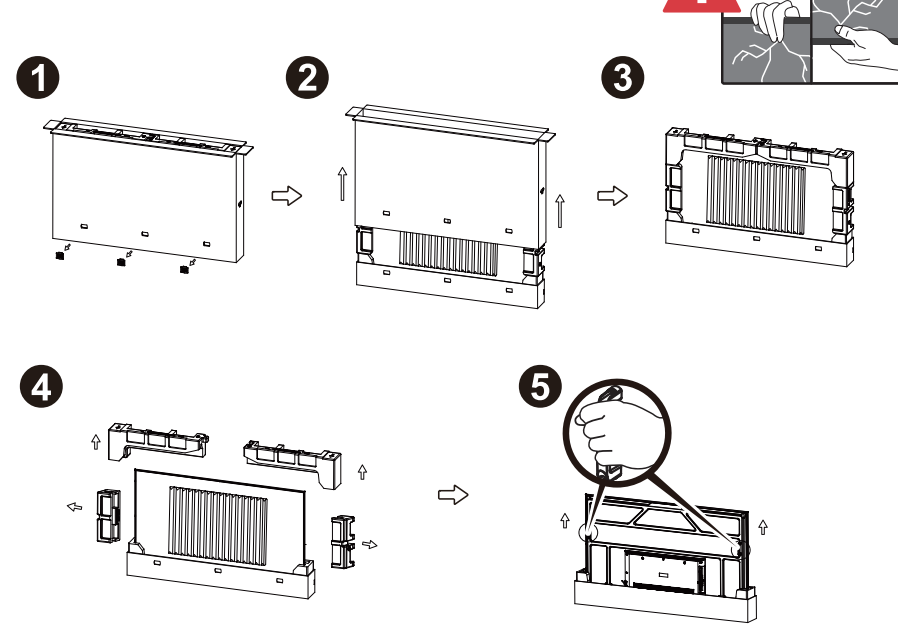


2 50"/55"/65"/75"

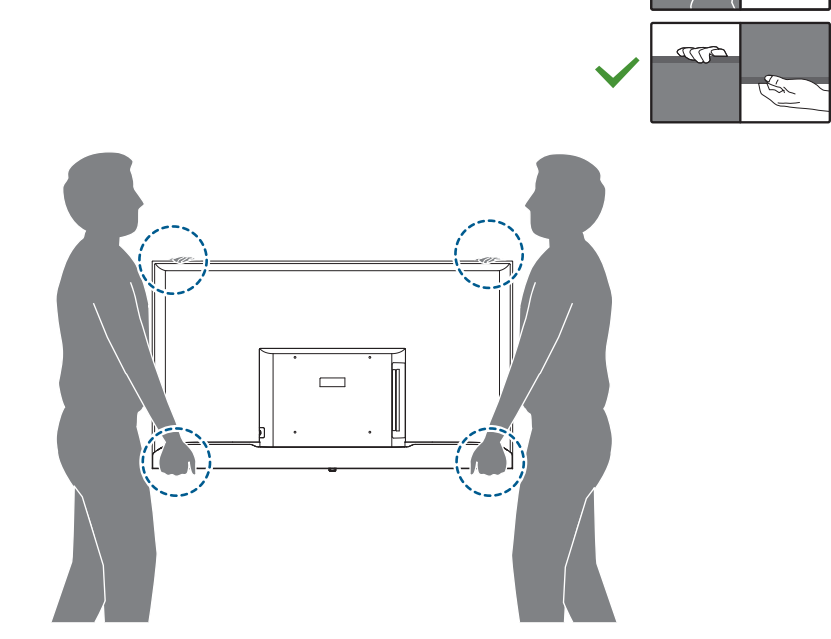


A Desk Placement

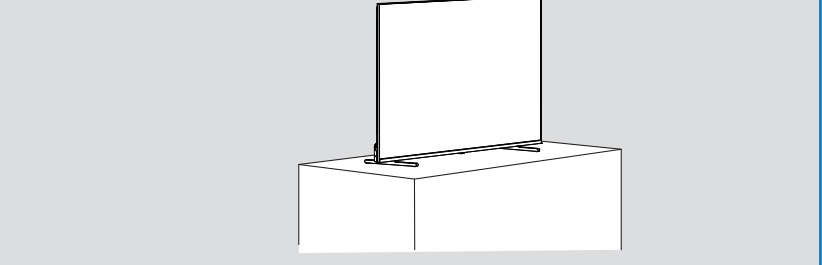


B Wall Placement

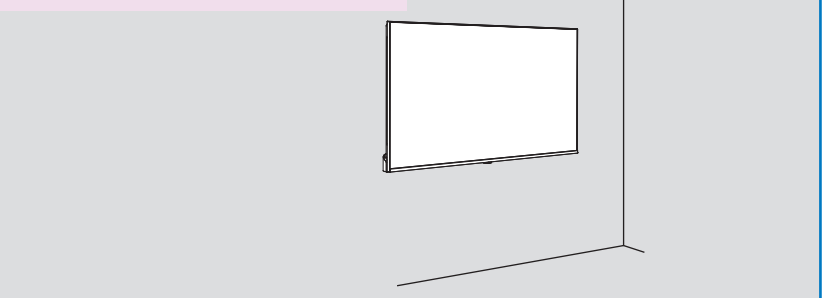


98"

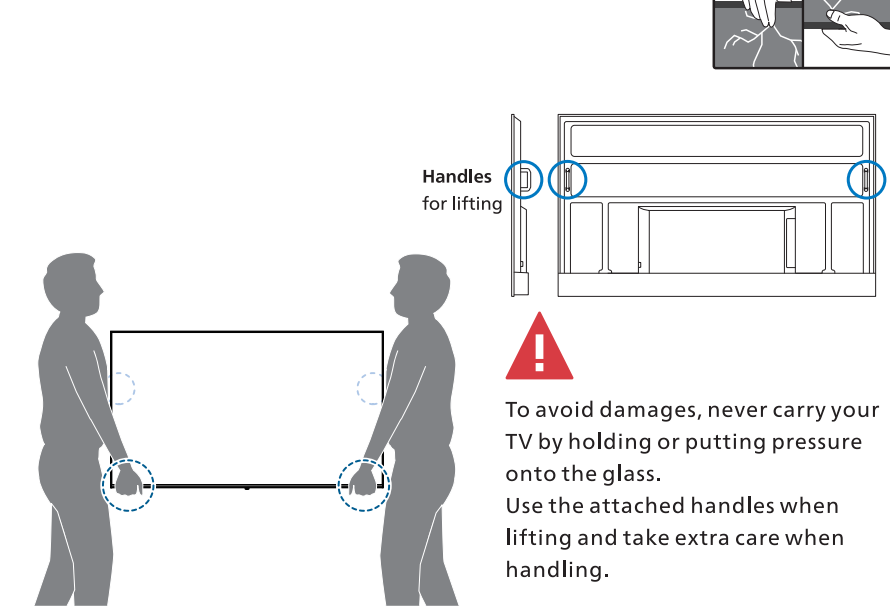


3

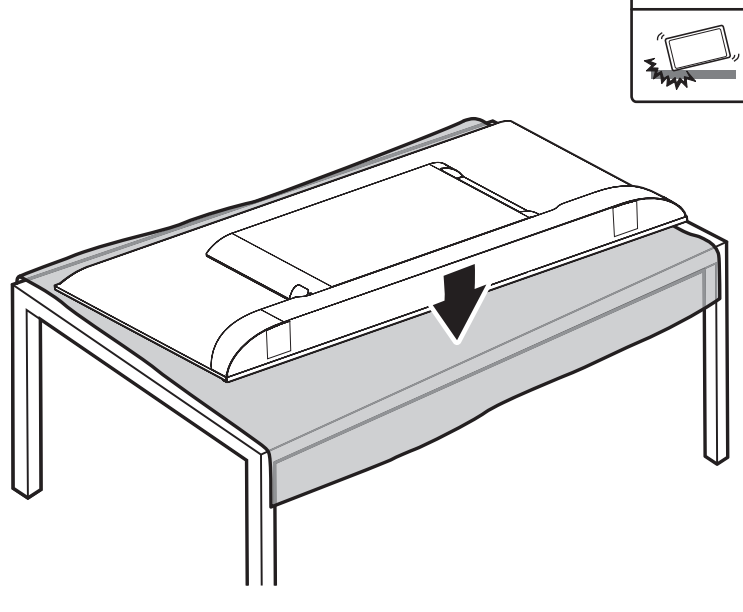


A

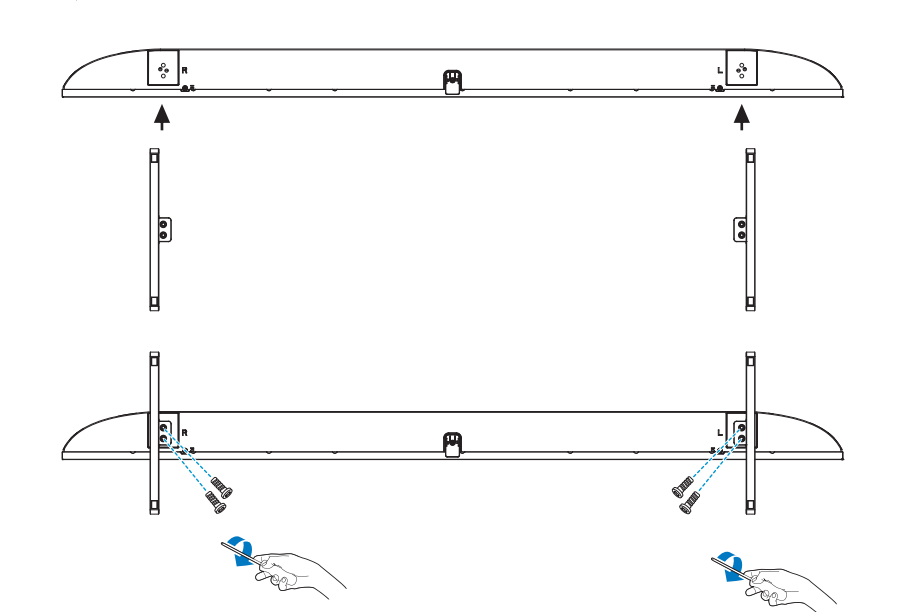


75"

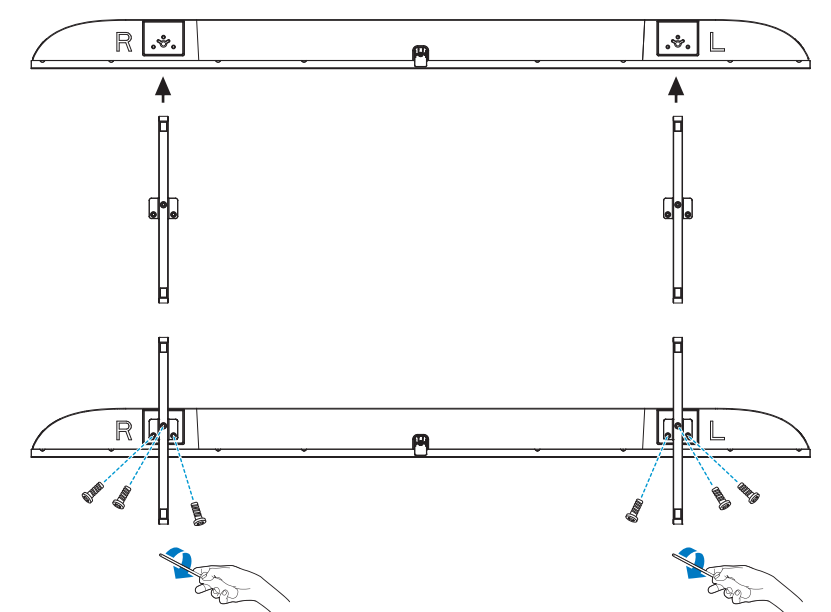

Desk Placement (using table stand)


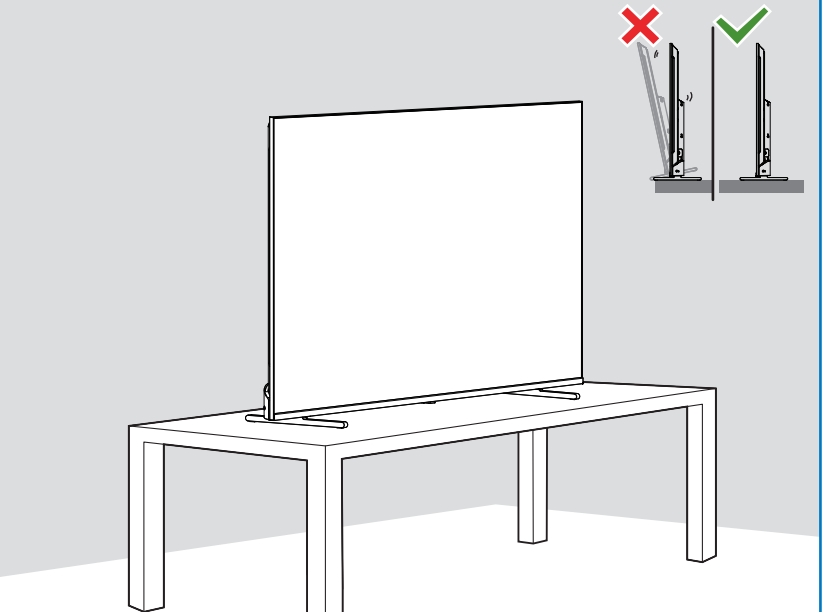


98"

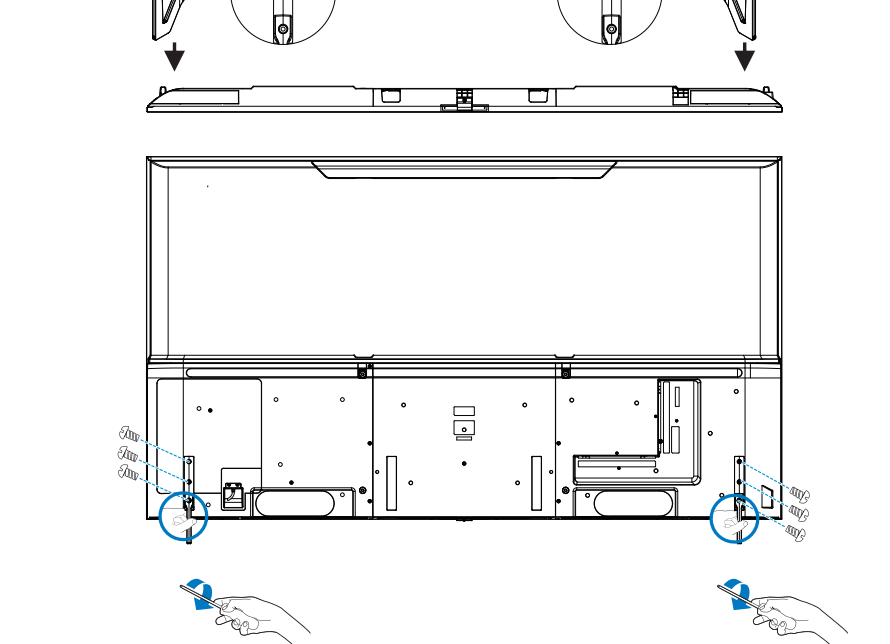


B

Diagonal (inch/cm)	X (mm)	Y (mm)	Screw Size	Screw Length (mm)
50"/126	300	300	Up: M6 Down: ST6	20.5~32 8~11.5
55"/139	300	300	Up: M6 Down: ST6	20.5~32 8~11.5
65"/164	300	300	Up: M6 Down: ST6	20.5~32 8~11.5
75"/189	500	300	Up: M8 Down: M8	22~29 22~29
98"/248	700	400	Up: M8 Down: M8	10.5~22.5 10.5~22.5

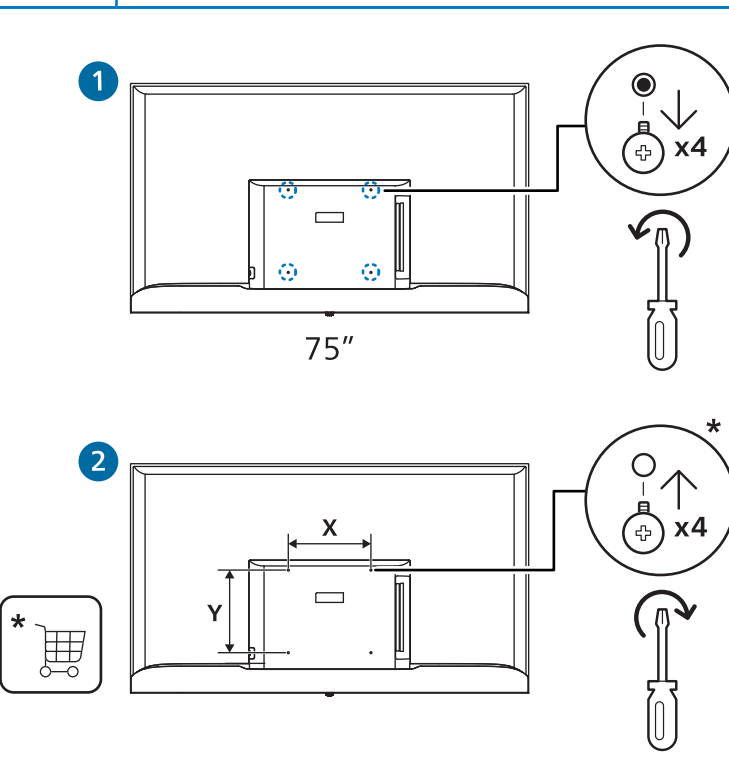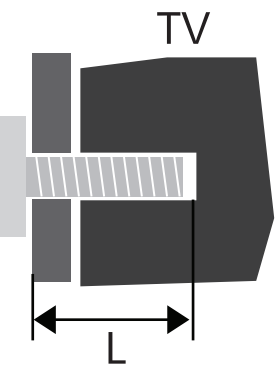

Recommended Wall Distance

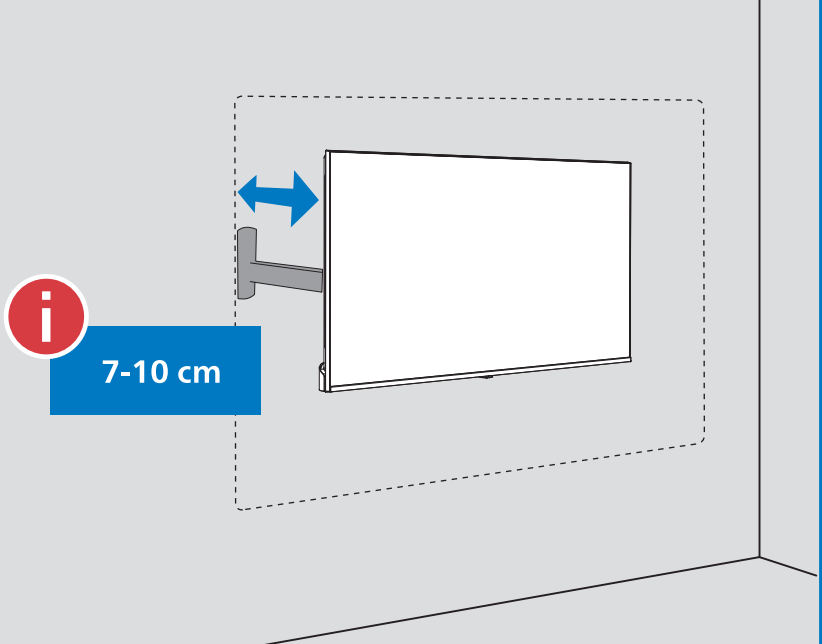

Register and Support




www.philips.com/TVsupport

Register your TV, find out more, download the user manual and get support

- 1
- 2
- 3





To install batteries, slide the battery door up.



Use 2x AAA LR03 1.5V (included)






Click
Slide battery door back in place.

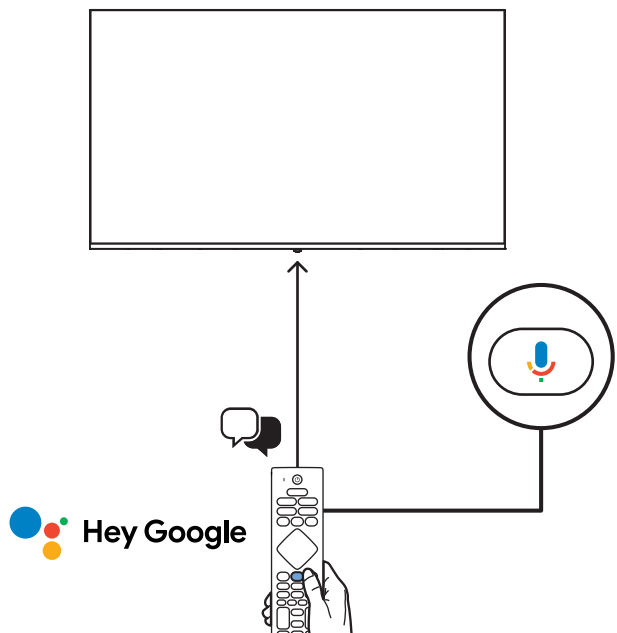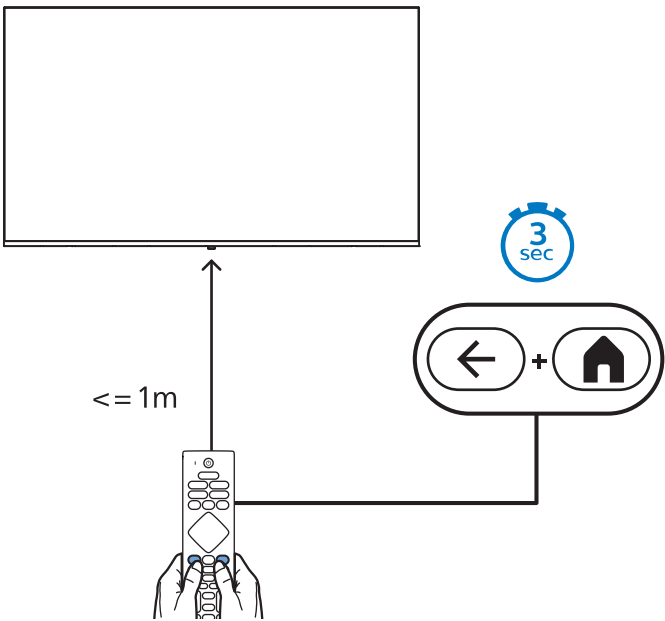

- English
- Bahasa Malaysia
- Bahasa Indonesia
- Deutschh
- Français
- Português
- ภาษาไทย
- Tiếng Việt
- 简体中文

50"/55"/65"/75"/98"

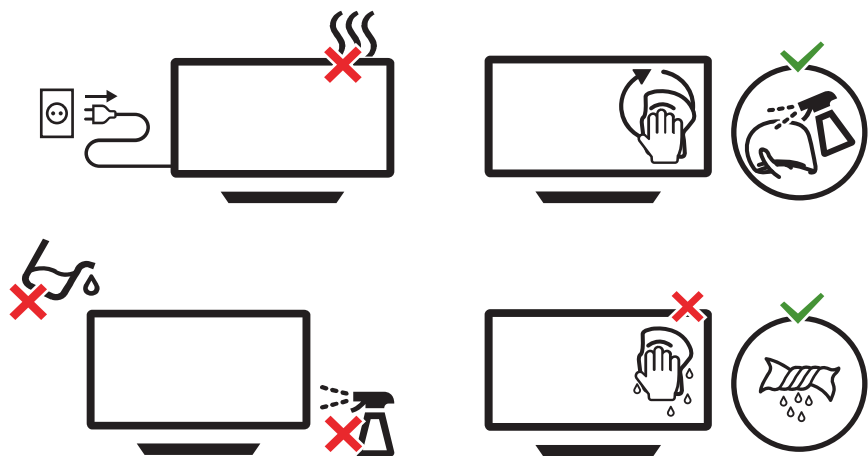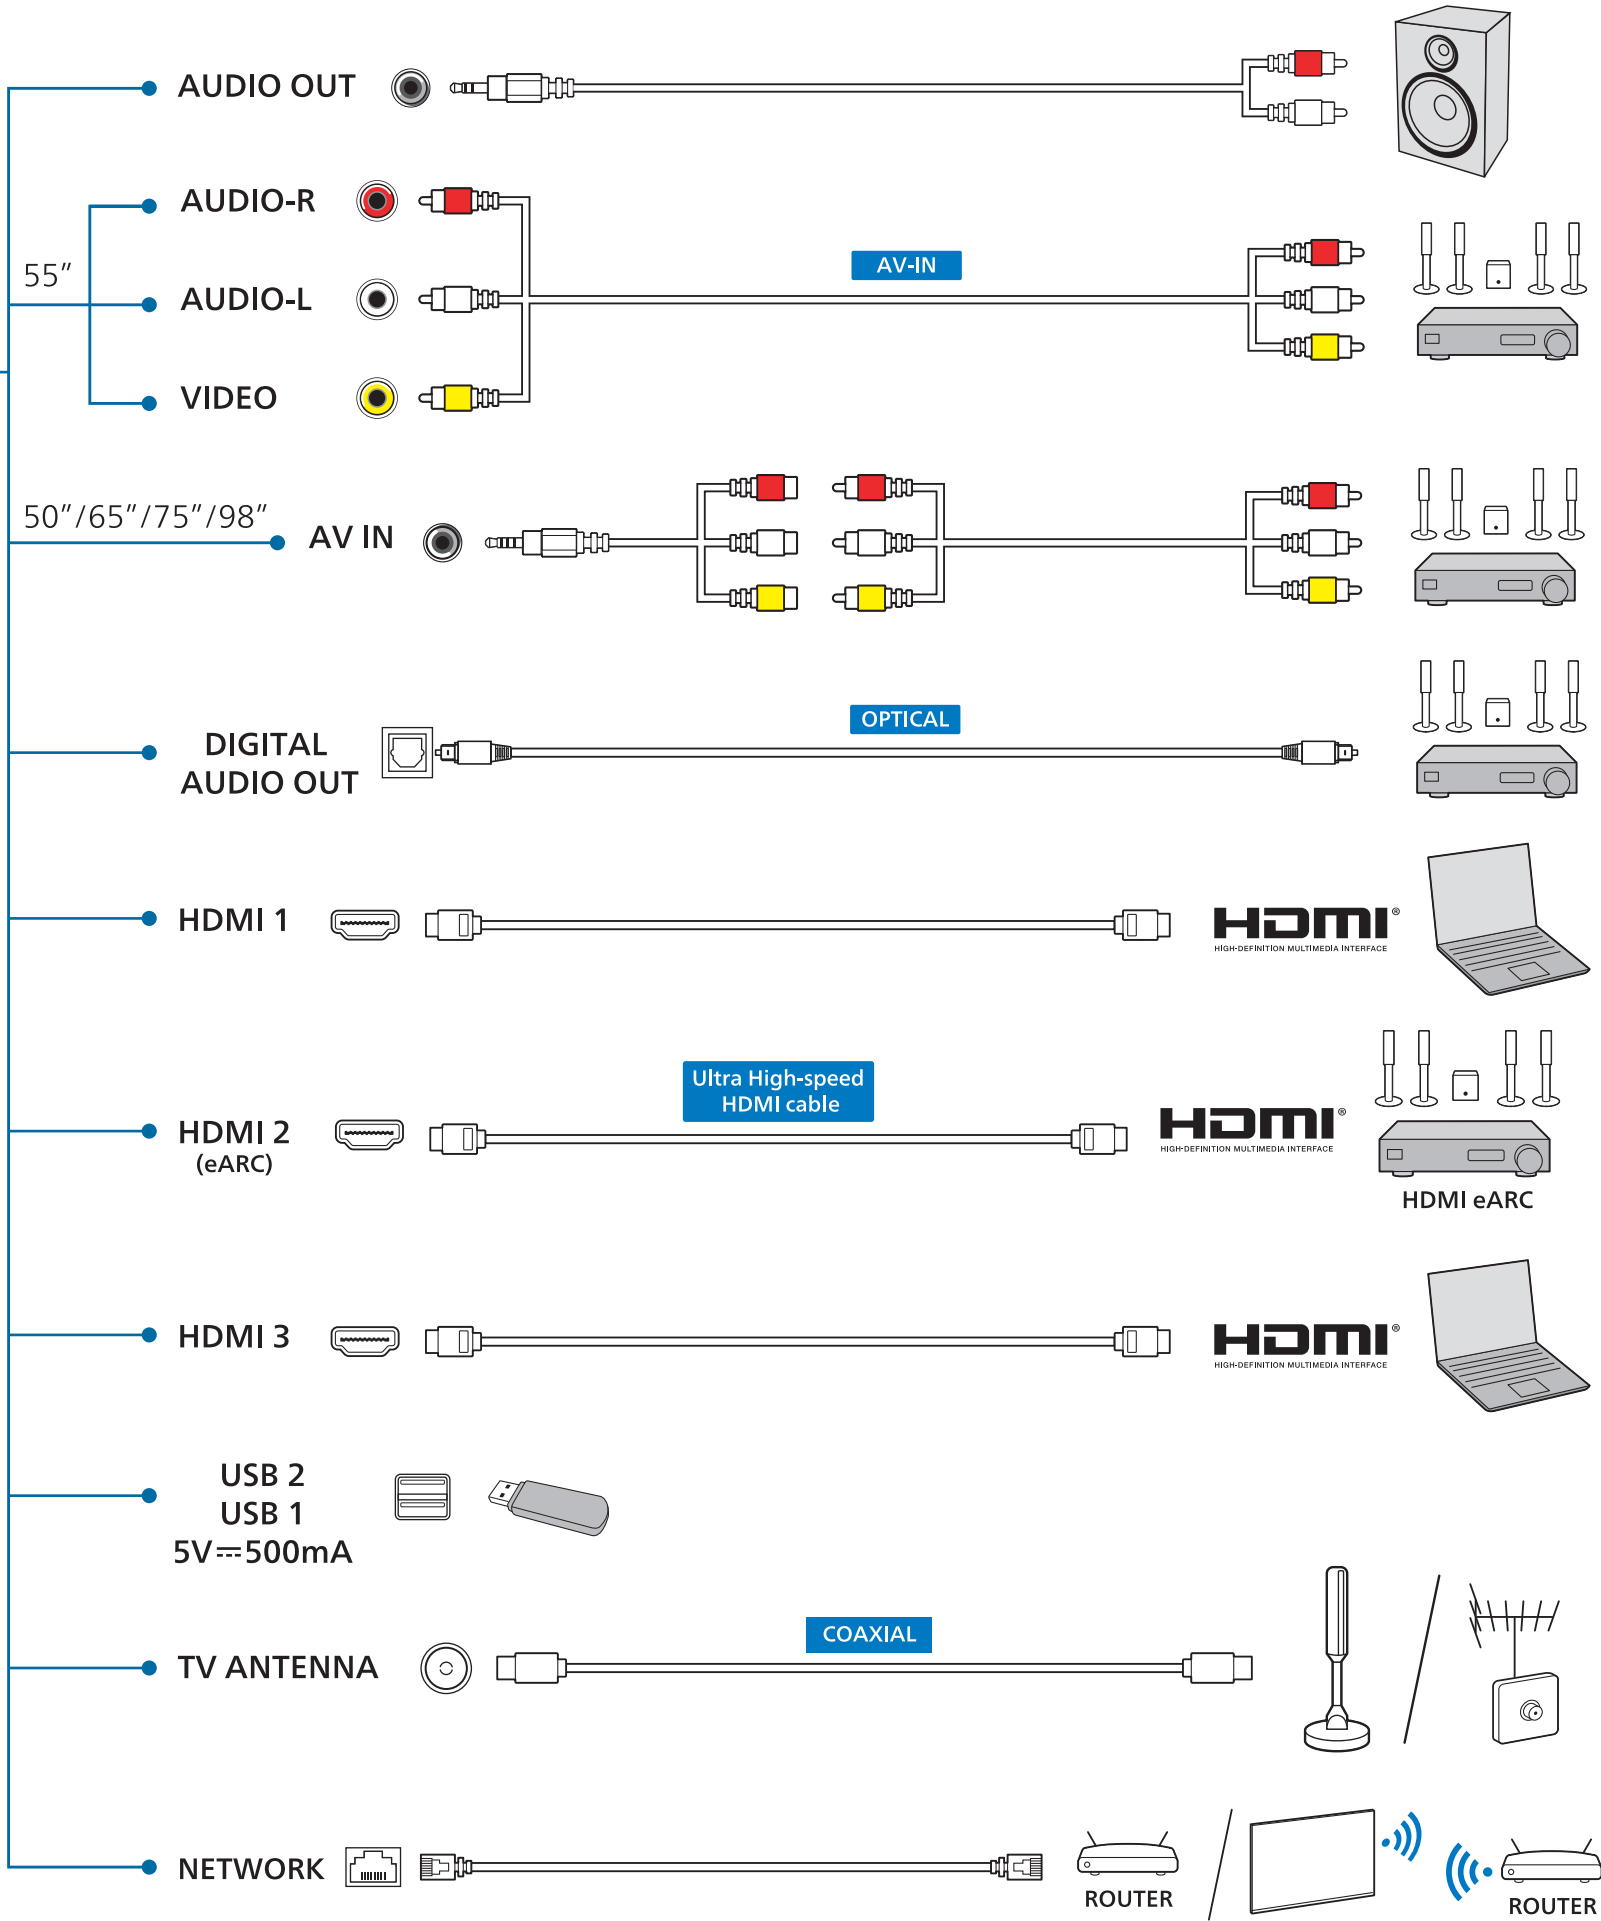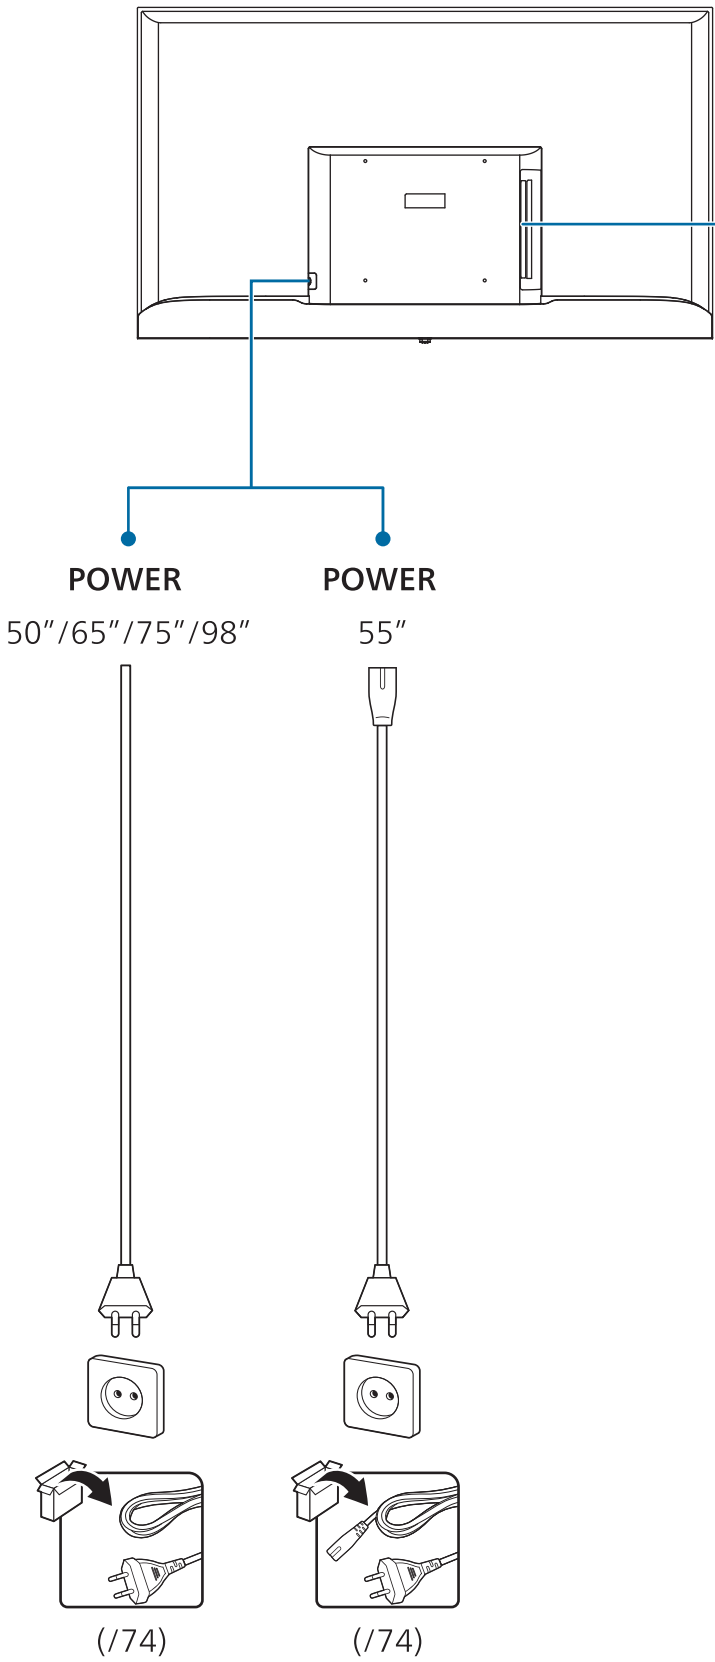

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2025 © TP Vision Europe B.V. All rights reserved. www.philips.com/welcome