

C:30 M:0 Y: 42 K:0


C:5 M:14 Y: 1 K:0

C:41 M:0 Y: 0 K:0

C:100 M:44 Y: 0 K:0

C:0 M:96 Y: 90 K:2

折叠方式：
飞利浦LOGO正面朝上

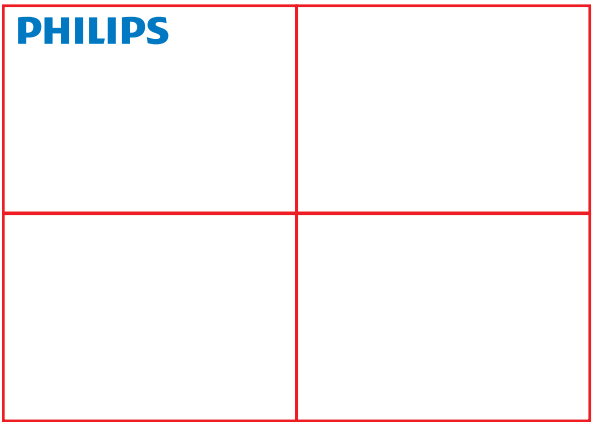

展开尺寸：420X280mm



折叠后尺寸：
210×140mmmm

Material information 物料信息			Technical Parameters 技术参数		BOM NO. 生产批号		Electronics 电子审核	
Material name 物料名称	快速安装指南 QSG		1、材质：80g双胶纸, 双面CMYK四色印刷 2、尺寸：如图所示，公差+/-0.2mm； 3、单机用量：1PCS； 4、左右折叠，飞利浦LOGO朝上，折叠好后送货，印刷清晰，无不良； 5、此料必须符合ROHS要求。		CUSTOMER 客户名称 非洲摩洛哥PHILIPS		structural 结构审核	
Material code 物料编码					TRADEMARK 客户商标		Safety 安规审核	
Change 变更说明	更改时间	更改内容			MODEL NO. 客户型号 43PFS6700/40		Salesman 业务承认	
					MODEL NO. 本厂机型 43T1		Designer 美工制作 Sherry	
Remark 备注	注：如采购订单描述的内容与美工图纸不符的，供应商需及时反馈给到我司，如未反馈，造成的损失由供应商承担。 非洲摩洛哥PHILIPS/43T1/420*280mm/80g双胶纸/彩色印刷/内容见墨稿/43PFS6700/40/左右对折/ROHS				SCALE 比例	UNIT 单位	REVISION 版本	
					1:1	mm	A5	

PHILIPS

Television



Quick Start Guide

6700 series

The actual accessories may differ from the illustrations, which are for reference purposes only.




Tool needed for assembly

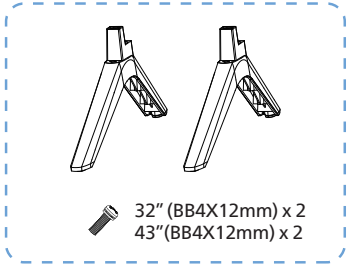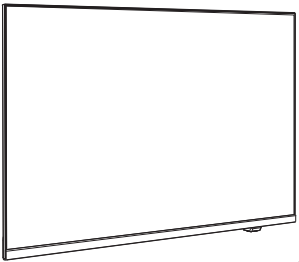


M:Machine screw


ST:Flat tail self-tapping screw

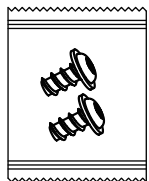



M:Machine screw
(32"/1 Pieces/bag)
(43"/1 Pieces/bag)




(/40)




(/40)

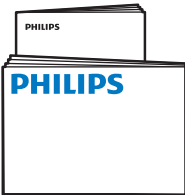


1 32"/43"

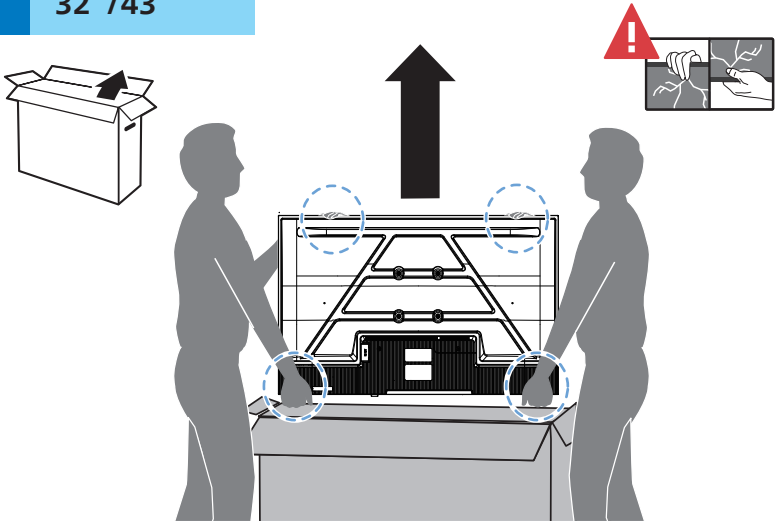


2

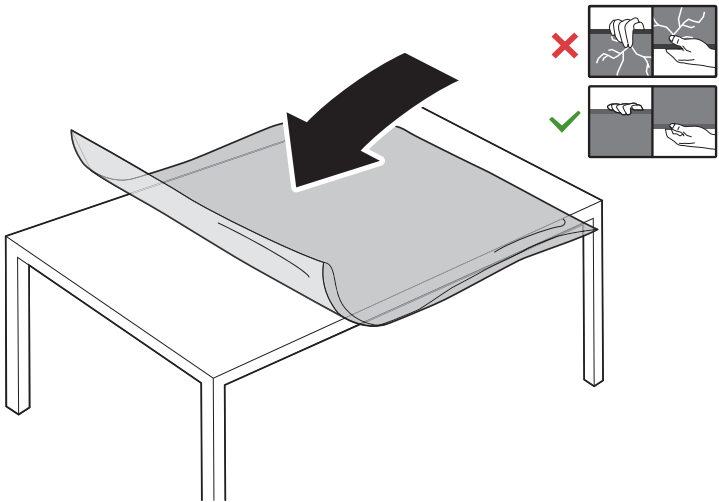


3

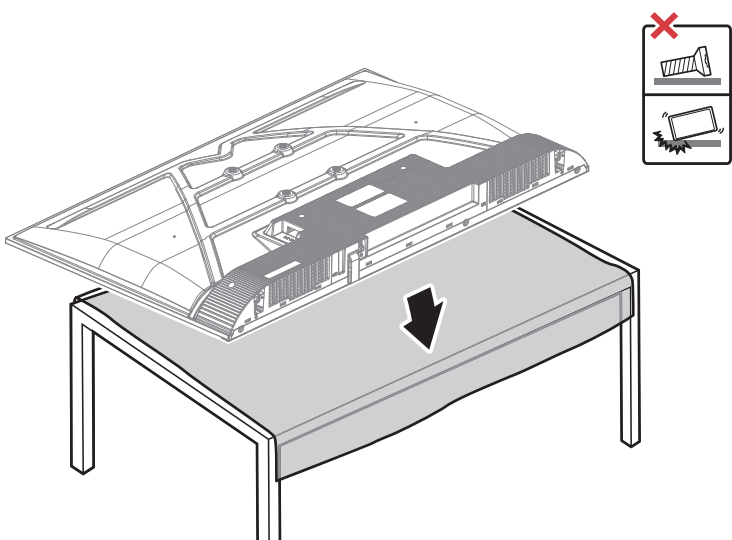


A Desk Placement

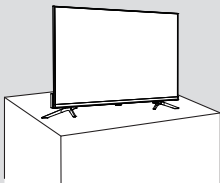

B Wall Placement

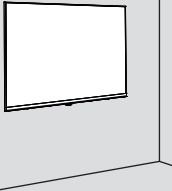


4

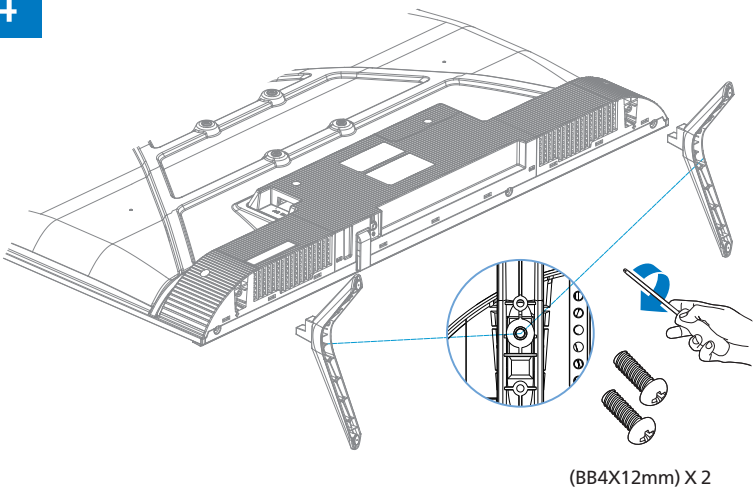


(BB4X12mm) X 2


A

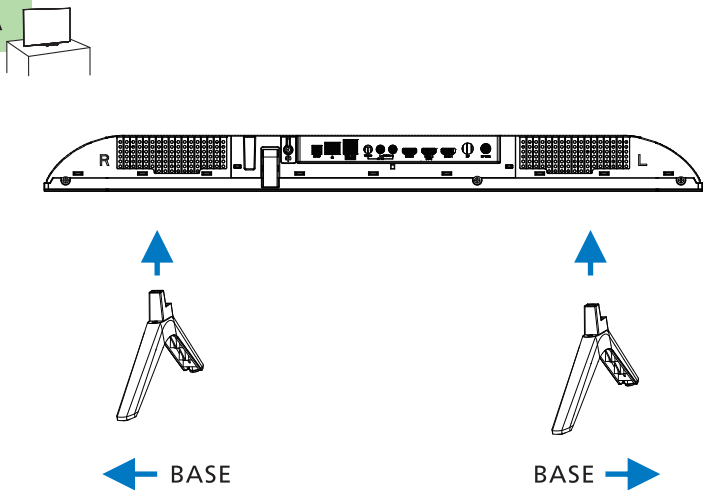

32"/43"


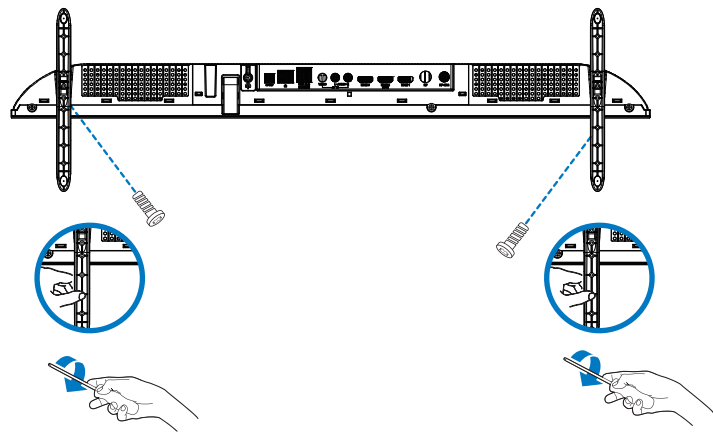


Desk Placement (using table stand)

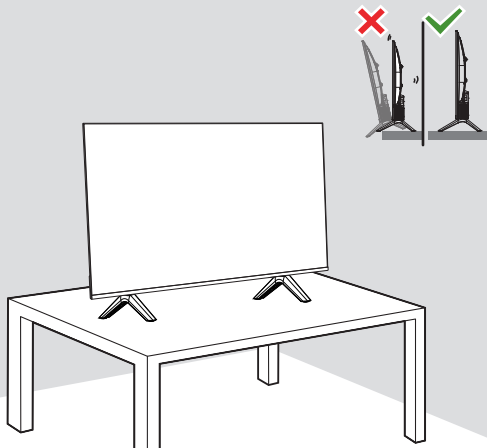


B

Diagonal (inch/cm)	X (mm)	Y (mm)	Screw Size	Screw Length (mm)
32"/80	100	100	M4	7~8mm
43"/108	200	200	M6	7~8mm

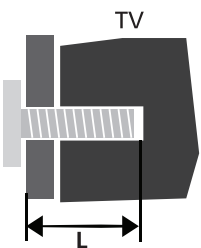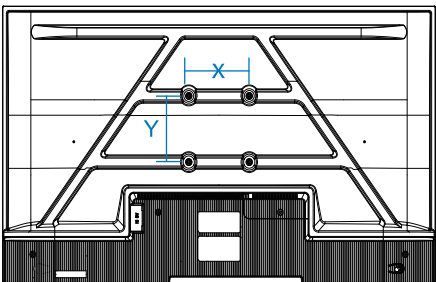

Recommended Wall Distance

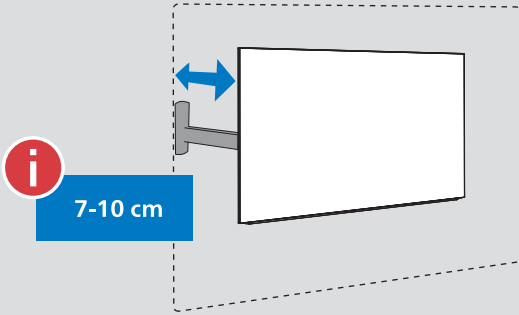

4

Register and Support




www.philips.com/TVsupport

Register your TV, find out more,
download the user manual and
get support



1




To install batteries, slide the battery door up.

2



Use 2x AAA LR03 1.5V (included)

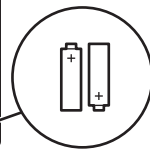

3



Slide battery door back in place.

Click






English Read the safety instructions.
Bahasa Malaysia Baca arahan Keselamatan.
Bahasa Indonesia Baca petunjuk keselamatan.
العربية قراءة تعليمات السلامة.

Deutsch Lesen Sie die Sicherheitshinweise.
Français Lisez les consignes de sécurité.
Português Leia as instruções de segurança.





ภาษาไทย โปรดอ่านคำแนะนำด้านความปลอดภัย
Tiếng Việt Hãy đọc chỉ dẫn an toàn.
简体中文 请阅读安全说明。






32"

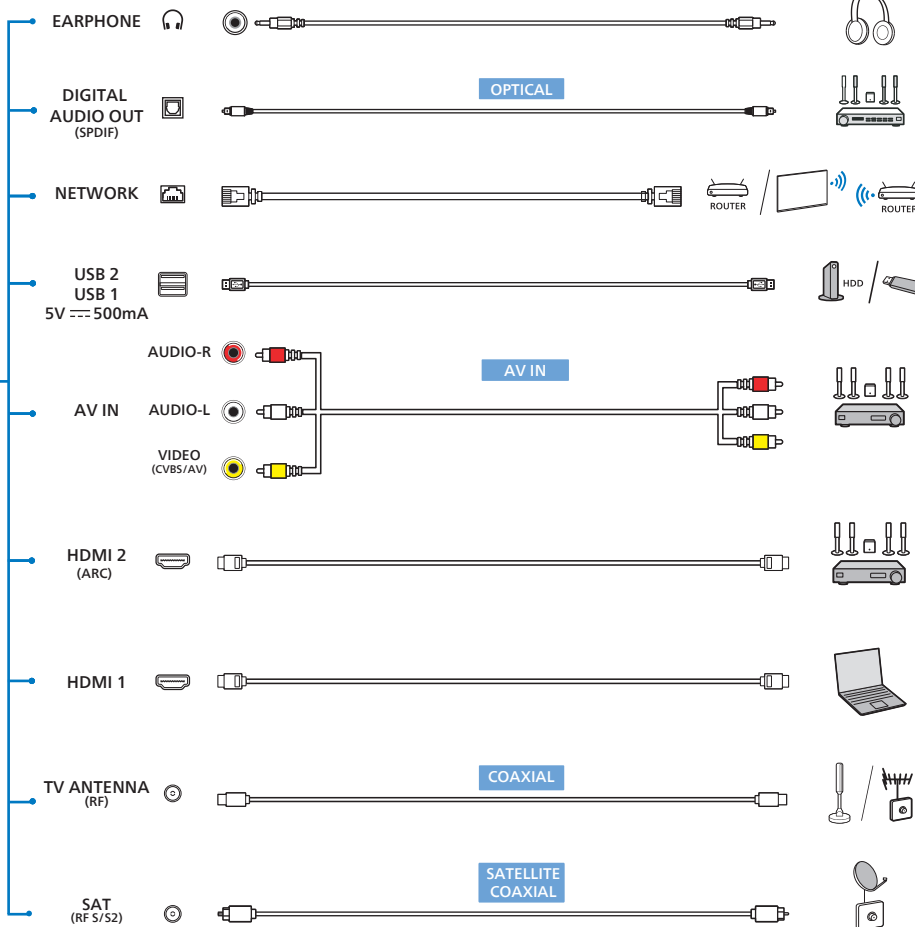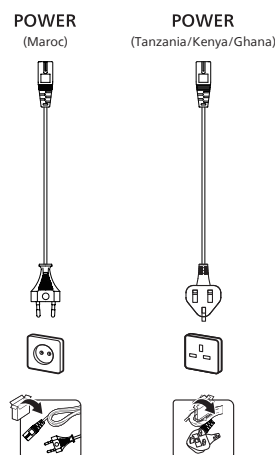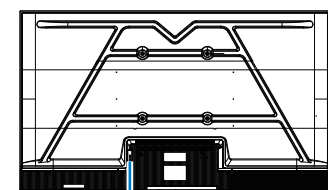

43"

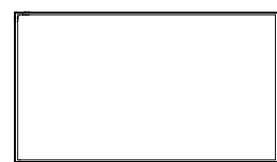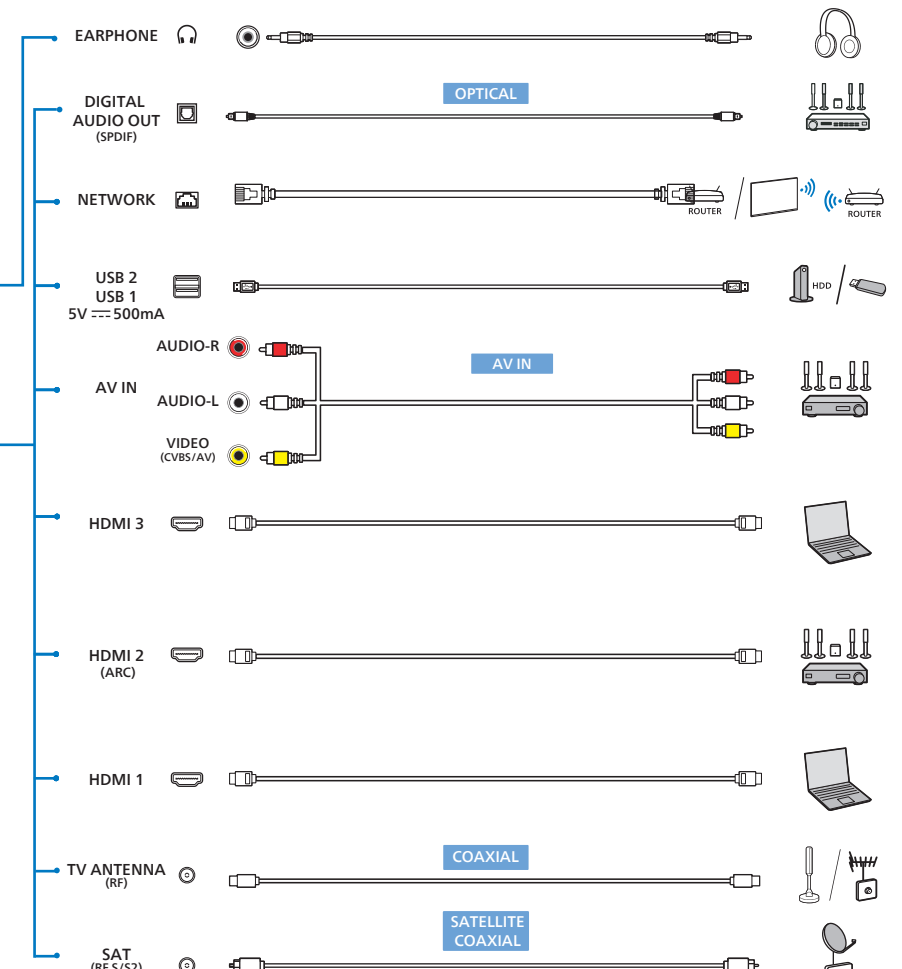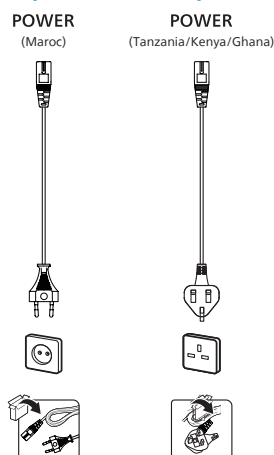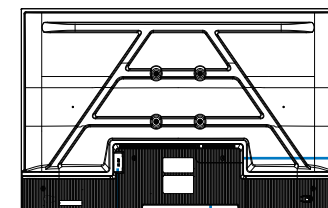

<= 1m

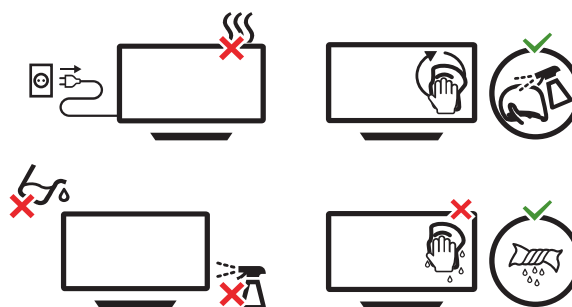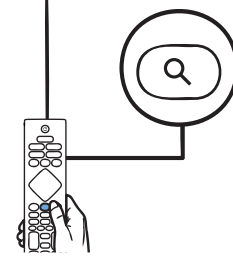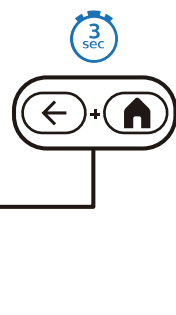

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2025 © TP Vision Europe B.V. All rights reserved. www.philips.com/welcome