

PHILIPS



Micro Music System

Bass reflex speakers

80 W

Bluetooth® 5.4

FM, CD, USB, Audio-in



TAM4205M2

Big sound for the music you love

Streaming, FM radio, CDs, and more! This compact micro system with bookshelf-style speakers fills larger rooms with rich, 80 W sound. Plus support for Auracast™ lets you broadcast what you're playing to compatible speakers around the house.

Compact micro system. Rich stereo sound.

- Powerful stereo sound for everything you love
- Bass-reflex loudspeakers for powerful low tones
- 2-way speakers. 4" woofer, 0.75" tweeter. 80 W (RMS) output
- Digital Sound Control. Choose a preset sound style

Easy to use. Plays from any source.

- CD classics, radio, streaming, and more
- Digital FM radio, CD player, USB port, audio-in
- Bluetooth® 5.4 and Auracast™ streaming at home
- Philips Entertainment app. Simple sound control

Made with environmentally friendly materials

- Compact and classic stereo design
- GRS-certified recycled plastic. Responsible packaging
- Main unit dimensions: 220x105x231 mm
- Speaker dimensions: 148x240x203 mm

Highlights

Powerful sound



Get lost in music! Bookshelf-style 2-way speakers give you rich, immersive stereo sound from 4" woofers, 0.75" tweeters, and bass-reflex ports. The system's powerful 80 W (RMS) output lets you pump up the volume for a party or a larger room. Perfect for big lounges and open-plan living spaces.

All your music



Music, podcasts, news, dramas, sports—the list is endless! You can stream your sounds via Bluetooth®, tune in to FM radio, or connect to other sources like flash drives via USB or turntables via audio-in. The digital radio tuner


with 20 presets delivers crystal-clear reception, and the CD player can read MP3 CDs and recorded CDs.

Bluetooth® 5.4 and Auracast™



Support for Auracast™ lets you broadcast the sound from this micro system to multiple Auracast™ compatible speakers around the house. Plus, Bluetooth® LE Audio and the LC3 codec are supported so you'll enjoy noticeably better sound when streaming sounds from your smart device to the micro system.

Philips Entertainment app

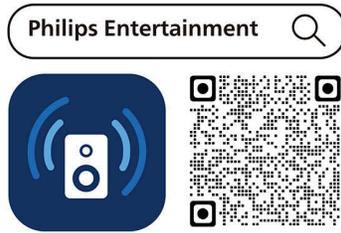

Got wide-ranging tastes? You won't even have to get out of your chair to get the best sound for what you're listening to! Download our

companion app and you can use your smart device to select preset sound styles from the Digital Sound Control menu, switch between sources, and more.

Classic design

With its subtly two-toned central unit and speaker cabinets, this handsome micro system recalls the design of classic hi-fi separates. The compact build makes the system easy to position in your home, and there are buttons on the front of the unit for playback and source selection.

Recycled materials



We use post-consumer recycled plastics in this product and our packaging is plastic-free. Inserts are printed on recycled paper with soy-based ink, and the packaging itself is made from FSC-certified recycled cardboard.



Specifications

Sound

Output power (RMS): 80 W (Based on IEC 60268 standard, not tested under the FTC standard)

Sound enhancement: digital sound control, bass reflex speaker system, treble and bass control, Custom equalizer (on app)

Volume control: rotary

Frequency response: 66Hz - 20kHz

Sound mode: Powerful, Clear, Bright, Warm, Balanced

Speaker impedance: 4 ohm

Loudspeakers

Driver configuration: 2-way

Number of sound channels: 2.0

Number of tweeters: 2

Number of woofers: 2

Tweeter diameter: 0.75"

Woofer diameter: 4"

Connectivity

USB: USB host

Bluetooth version: 5.4

Bluetooth profiles: A2DP, AVRCP, Streaming
Format: SBC, LC3

Bluetooth range: Line of sight, 30m or 100ft

Audio in: 3.5mm

DLNA Standard: n.a.

Multiple speaker connection

Multiple speaker scenario: Receiving, Broadcasting

Multiple speaker technology: Auracast

Smart Home: n.a.

Audio playback

Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program

Playback media: CD, CD-R/RW, MP3-CD, USB flash drive

USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat,

shuffle, stop

Audio supported formats: MP3, WMA, WAV, FLAC

Max sample rate: 24-bit/48kHz

Tuner/Reception/Transmission

Antenna: FM fixed pigtail antenna

Tuner bands: FM mono, FM stereo

Station presets: 20 (FM)

RDS: Yes.

Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)

Tuner type: Digital

Convenience

Clock: On main display, 24/12 hour display

Remote Control

Loader type: tray

Display type: LED display

Sleep timer

No. of alarms: 1

Alarms: Yes, CD, FM, USB

Compatibility

Smartphone/tablet APP control

Power

Power supply: 100-240VAC, 50/60Hz

Standby power consumption: <0.8W (clock display on)

Packaging dimensions

Height: 31.6 cm

Packaging type: Box

Type of shelf placement: Standing

Width: 48.7 cm

Depth: 27.9 cm

Number of products included: 1

Gross weight: 7.05 kg

Nett weight: 5.5 kg

Tare weight: 1.55 kg

Accessories

Included accessories: Remote Control (with battery), AC power cord, Quick start guide, Warranty Leaflet

Power cord: Length 1.5 m

Design

Color: silver (panel)

Wall mountable: No

System components: Main control unit, Speakers

Dimensions

Main Unit (W x H x D): 220x105x231 mm

Main Unit Weight: 1.5 kg

No. of speaker unit: 2

Set (W x H x D): 516x240x231 mm

Set Weight: 5.3 kg

Speaker Unit (W x H x D): 148x240x203 mm

Speaker Weight (per Unit): 1.9 kg

Sustainability

Plastic shell: contains 85% GRS-certified recycled post-consumer Acrylonitrile Butadiene Styrene (ABS) TE-00132492

