

PHILIPS



wireless portable
speaker

Bluetooth® and NFC

Splash-proof

Built-in microphone for calls

12W, Rechargeable battery

Small is Great

Big sound 360° around

Chuck the speaker down any way you like, vertical or horizontal. 360° sound means you get big sound all around, every time. Splash-proof, rugged and equipped with wireless music streaming it brings warm, natural sound wherever you go.

Designed to go places


- Splash-proof design ideal for outdoor use (IPX4)
- Built-in rechargeable Li-ion battery for playback anywhere

Advanced versatility

- Audio-in for easy portable music playback
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Built-in microphone for hands-free phone calls
- Wireless music streaming via Bluetooth


Sound that blows you away

- 2 x 6 W RMS total output power
- Two speaker drivers & passive radiators give immersive sound
- Digital Sound Processing for lifelike sound without distortion

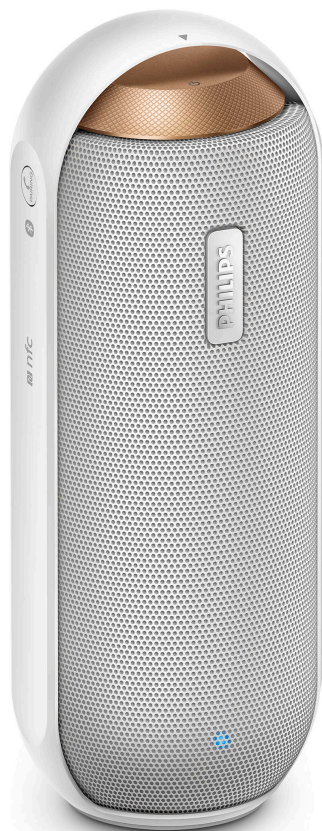

Highlights

Wireless music streaming

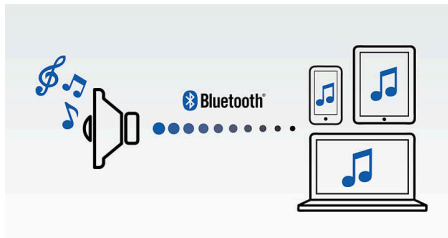


Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

Twin speaker drivers



Twin 1.5" Neodymium speaker drivers deliver natural, clear and balanced sound while dual opposing passive radiators extend and boost bass. Front and back full-range speaker drivers create even 360-degree sound, offering the freedom to enjoy the same quality sound wherever the speaker is facing.

Digital Sound Processing

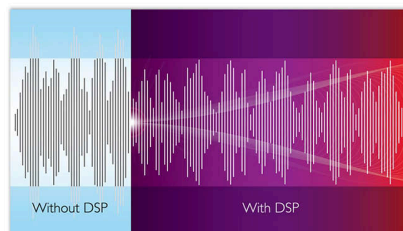


Advanced sound processing technology enhances the reproduction of your music so that each note resonates with crystal-clear accuracy, and each pause is sealed with pristine silence. Philips' proprietary Digital Sound Processing technology optimises the performance of compact speaker boxes, delivering sound that is clear, detailed and powerful without any distortion.

Splash-proof design



Water-resistant design allows enjoyment in wet and rainy environments. Tested to stringent IPX4 standards, internal components are proven to be protected from exposure to the elements, allowing for music enjoyment indoors in the bathroom, kitchen or even outdoors whatever the weather.

NFC technology

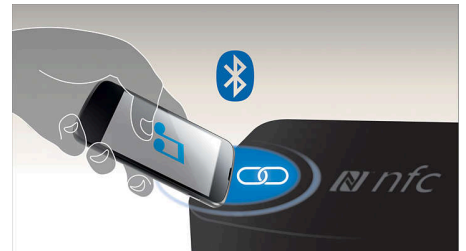

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

AUDIO-IN (3.5 mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device into the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

Specifications

Sound

Output power (RMS): 2 x 6 W

Sound System: Stereo

Volume Control: rotary

Speakers: 2 x 1.5"

Design and finishing

Colour: White

Loudspeakers

Speaker drivers: Neodymium magnet system

Connectivity

Bluetooth profiles: A2DP, AVRCP, HFP

Bluetooth range: Line of sight, 10 m or 30 ft

Audio in (3.5 mm)

NFC: Tap-to-pair Bluetooth; works with Android 4.0 or above, and Windows phone 8 or above

Outer Carton

Length: 29.2 cm

Number of consumer packages: 2

Width: 22.6 cm

Gross weight: 1.8 kg

Height: 11.8 cm

GTIN: 1 48 95185 61283 3

Net weight: 1.316 kg

Tare weight: 0.484 kg

Convenience

Water resistance: IPX4

Built-in microphone: for speaker conference

Compatibility

Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above

iPod touch: 3rd generation or later

Works with: most Bluetooth smartphones, tablets, music devices

iPad: iPad 1, iPad 2, new iPad, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3, iPad mini

iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus

other music devices: with Bluetooth 2.1 or above

Power

Battery type: Lithium-ion (built-in)

Power supply: 5V, 2A (USB adapter)

Operating time on battery: 8 hour(s)

Product dimensions

Height: 7.05 cm

Width: 18.83 cm

Depth: 6.97 cm

Weight: 0.486 kg

Accessories

Included accessories: USB adapter, USB cable for PC charging, Quick install guide, Warranty certificate, World Wide Warranty leaflet

Dimensions

Weight incl. Packaging: 0.79 kg

Product dimensions (WxDxH): 188 x 71 x 70 mm

Packaging dimensions (WxDxH): 282 x 105 x 108 mm

Product weight: 0.49 kg

