

PHILIPS

大型顯示器

快速使用指南







7000系列

7314-4301U-114FLP14


使用產品前請閱讀用戶手冊(具體操作詳見操作導引)並請保留備用!
本手冊所有示意圖僅供參考,請以實際機型與實物為準!





安裝所需工具

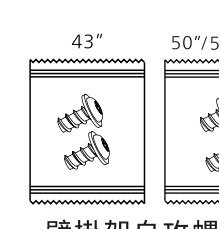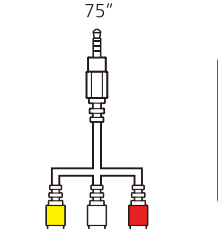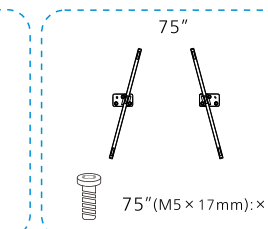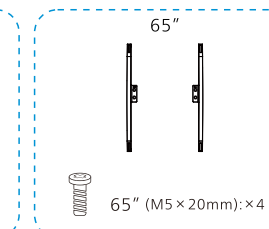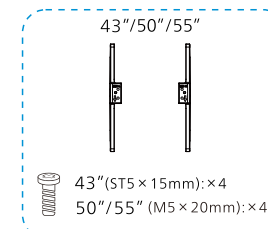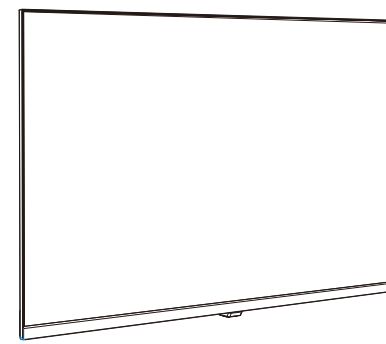

壁掛架自攻螺釘
1包(2顆)

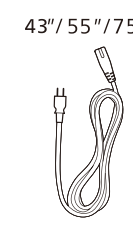


(/96)

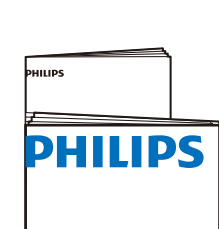
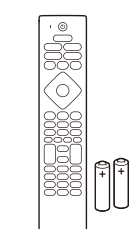


ST: 平尾自攻螺釘 M: 機械螺釘



1 43"/50"/55"

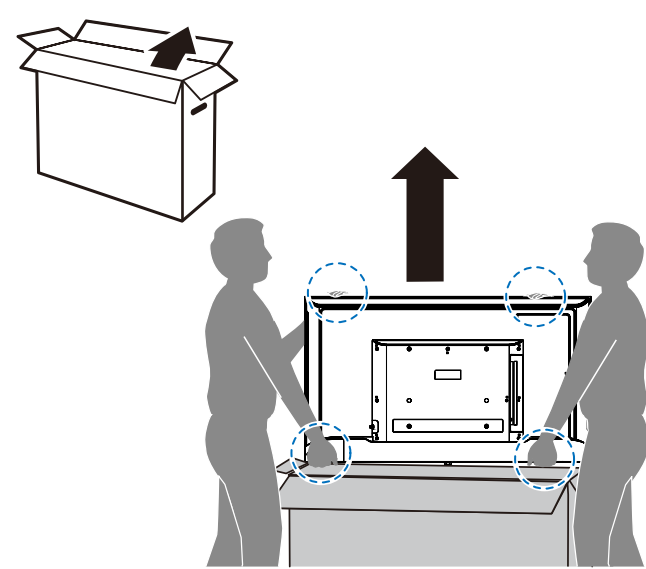


65"/75"

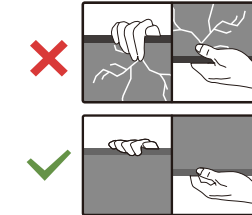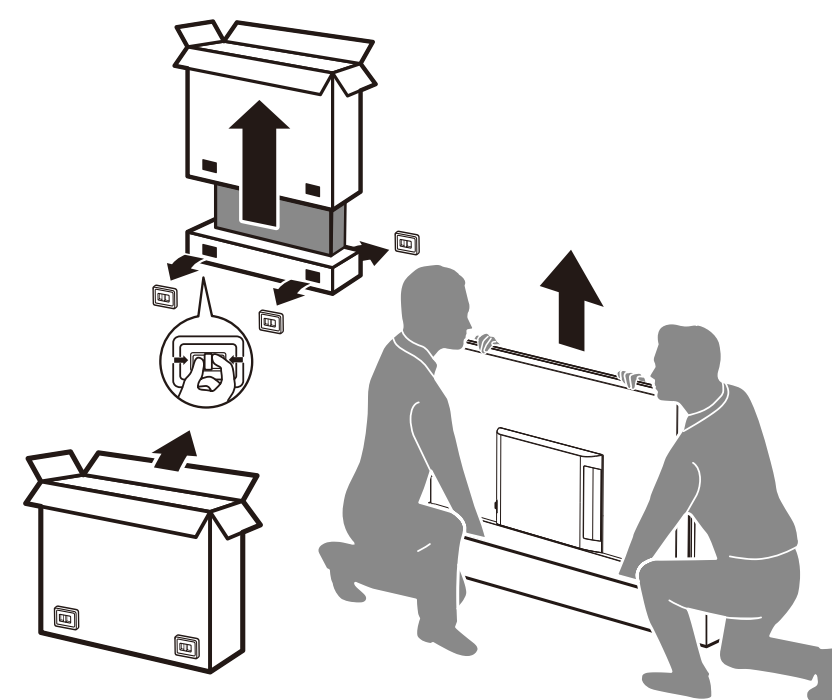


2

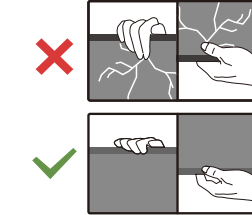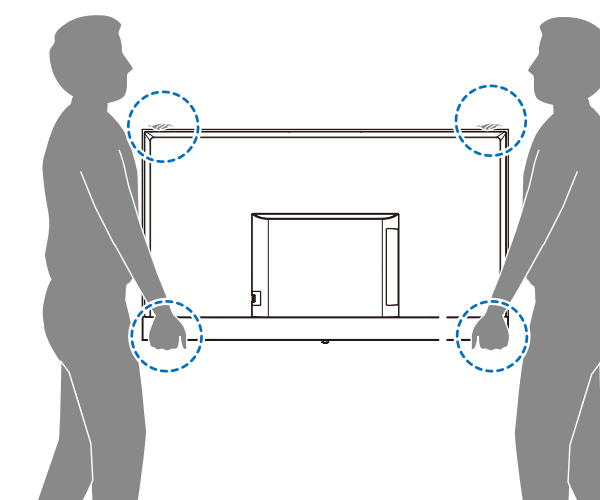


A 放置桌面

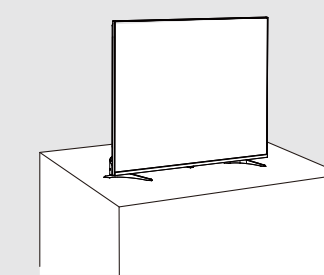


B 放置牆面

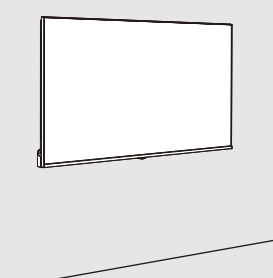


3

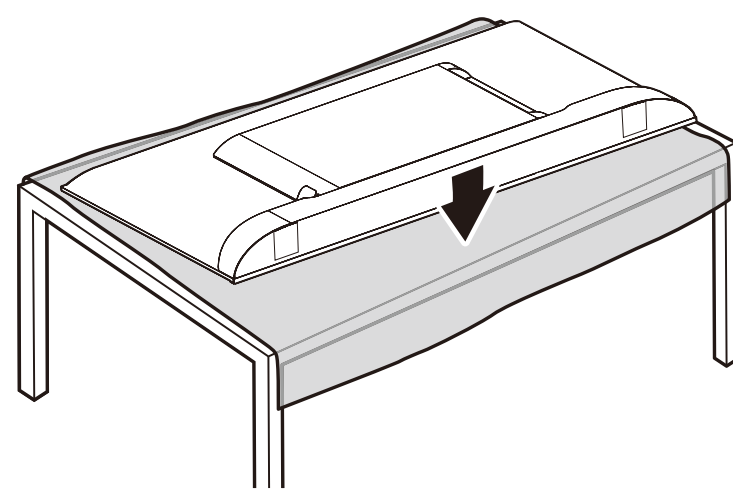


A

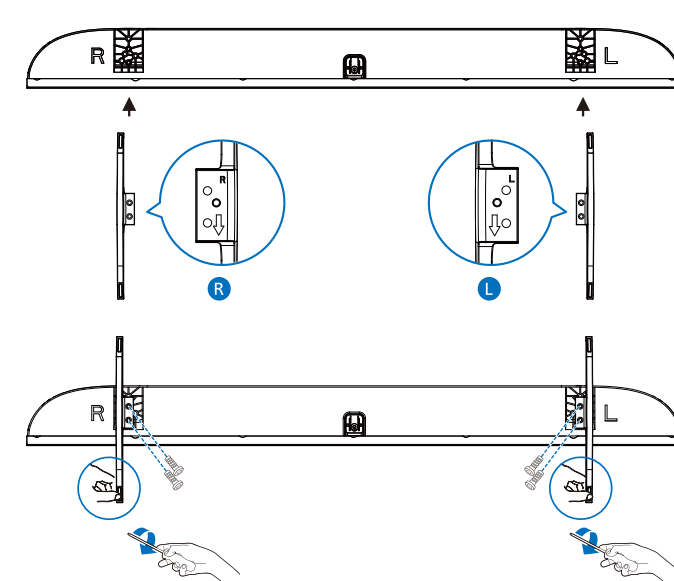


43" 50"/55"

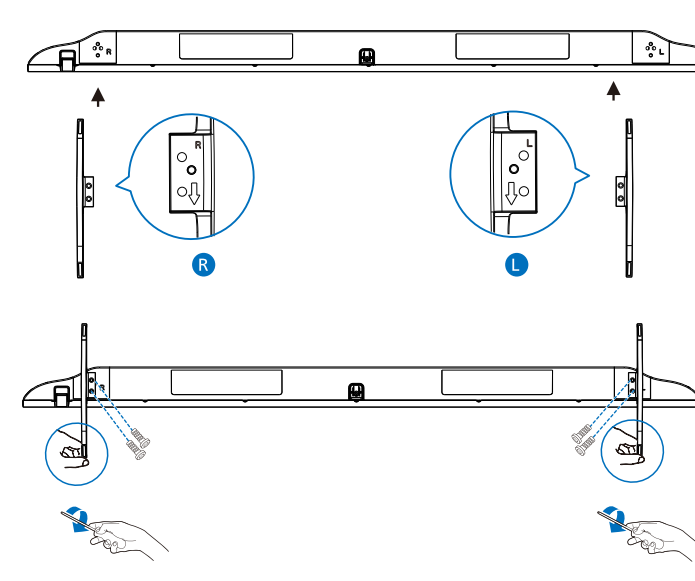


65"

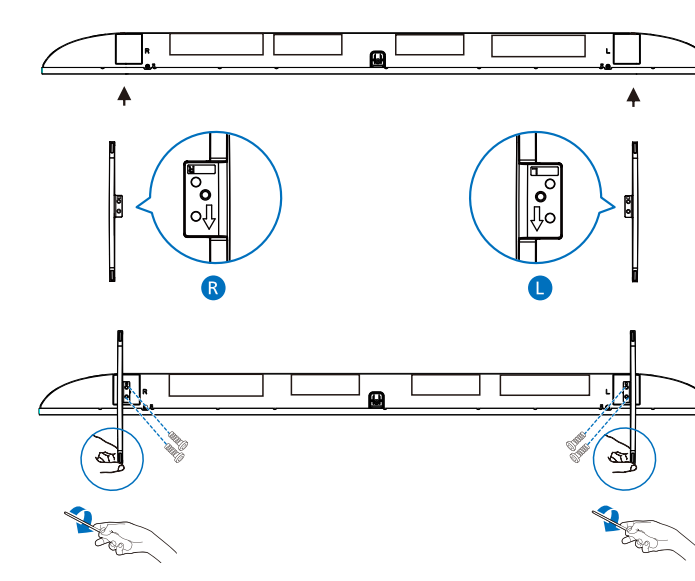

放置桌面 (使用底座)

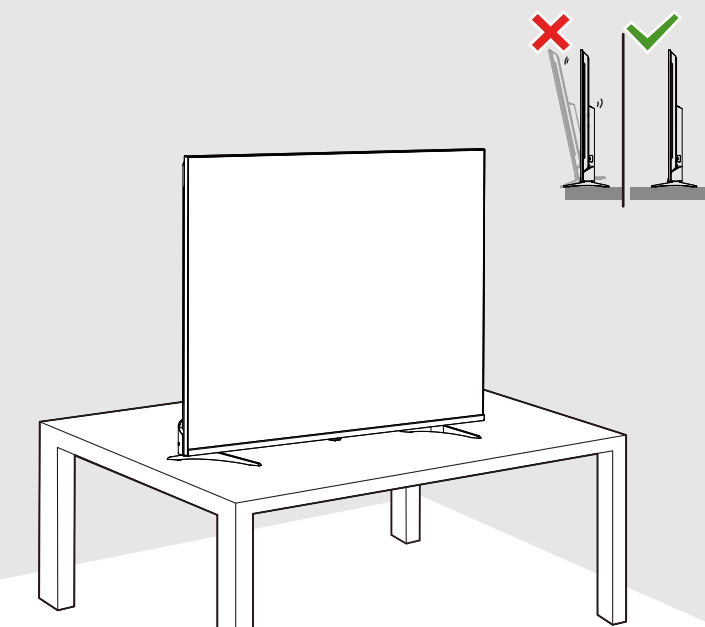

75"

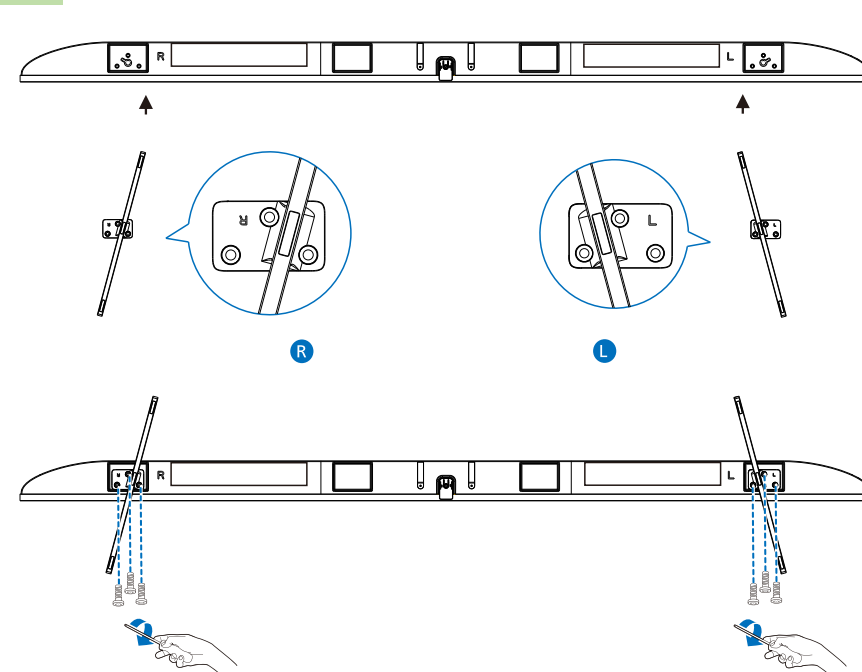

B

尺寸/對角線(inch/cm)

43"/108

X (mm)

300

Y (mm)

300

螺釘大小

Up: M4

Down: ST4

螺釘長度

9.5~10.5

9.5~10.5

Up: M6

Down: ST6

20.5~32

8~11.5

Up: M6

Down: ST6

20.5~32


8~11.5

Up: M8

Down: M8

22~29

22~29

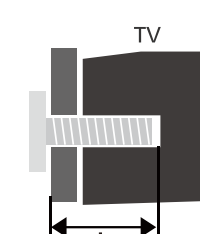

75"

1

x4

x4


2

x4

x4

x4

推薦的離牆距離

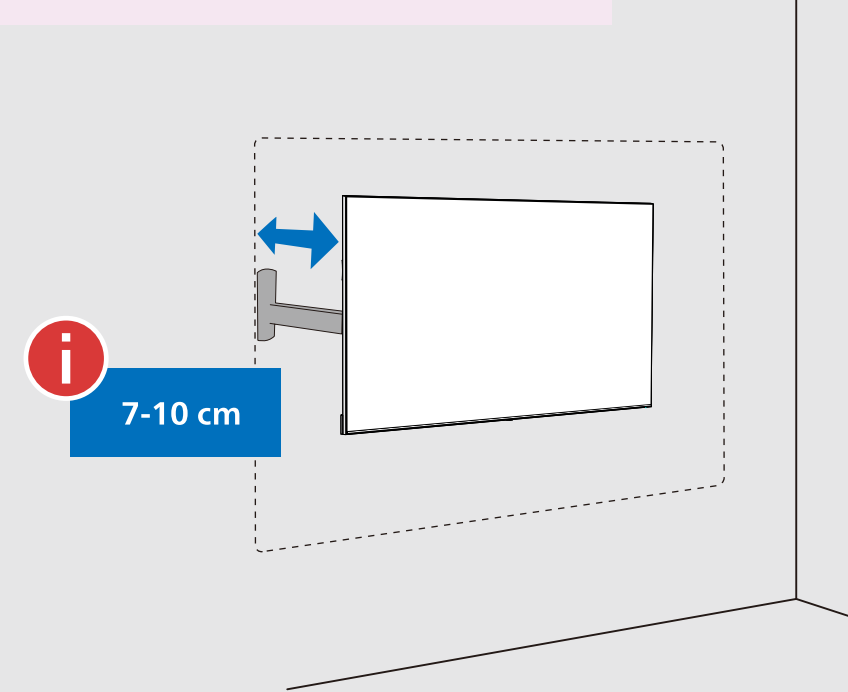

4

注冊和支持



www.philips.com/TVsupport

注冊您的電視, 了解更多信息,
下載用戶手冊獲得支持

1

安裝電池時，
將電池蓋向上
滑動。

2

使用2x AAA (LR03)
1.5V

3

點擊
將電池蓋推回
原位

English

Read the safety instructions.

繁體中文

請閱讀安全說明。

43"/50"/55"/65"/ 75"

AUDIO OUT

AV IN

AUDIO-R

AUDIO-L

VIDEO

DIGITAL AUDIO OUT

HDMI 1

HDMI 2 (eARC)

HDMI 3

USB 2

USB 1

5V 500mA

NETWORK

75"

43"/50"/55"/65"

AV-IN

OPTICAL

HDMI

Ultra High-speed HDMI cable

HDMI eARC

HDMI

ROUTER

ROUTER

設備名稱：Philips LED智慧大型顯示器						
型號（型式）：43PUH7700/96/43PUH7630/96/43PUH7650/96/50PUH7630/96/50PUH7650/96/50PUH7700/96/50PUH7710/96/55PUH7700/96/55PUH7710/96/55PUH7630/96/55PUH7650/96/65PUH7650/96/65PUH7890/96/75PUH7890/96/65PUH7700/96/65PUH7710/96/75PUH7700/96/75PUH7710/96						
單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ⁺⁶)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
塑料外框	○	○	○	○	○	○
後殼	○	○	○	○	○	○
液晶面板	—	○	○	○	○	○
電路板組件	—	○	○	○	○	○
底座	○	○	○	○	○	○
電源線	—	○	○	○	○	○
其他線材	—	○	○	○	○	○
遙控器	—	○	○	○	○	○
備考1. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。						
備考2. “—” 係指該項限用物質為排除項目。						

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2025© TP Vision Europe B.V. All rights reserved. www.philips.com/welcome