

PHILIPS



AMBILIGHT tv

Quick Start Guide


6901 /6951 series




Tool needed for assembly

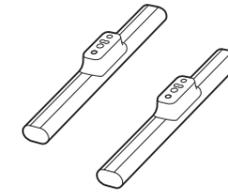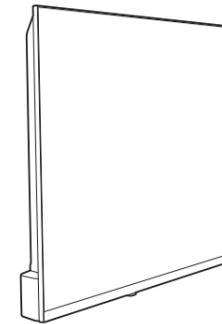



32" (Q4xL12) x 4
40" (Q4xL12) x 4

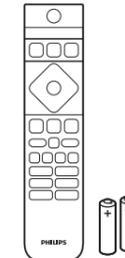


1 32"/40"

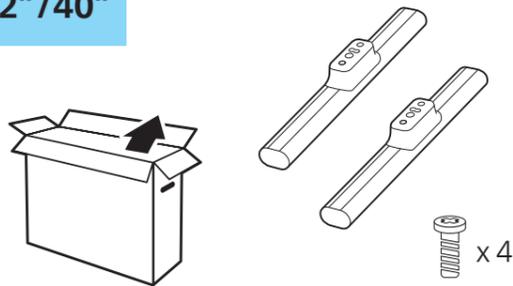

2

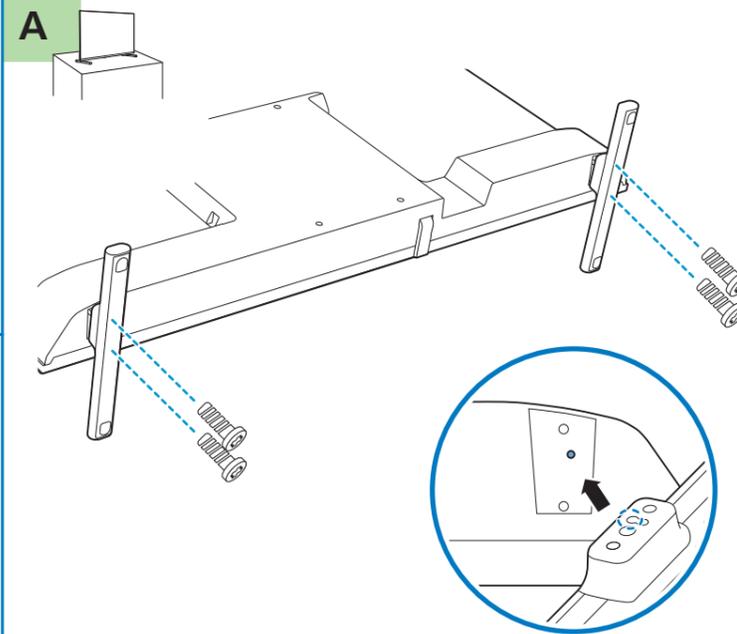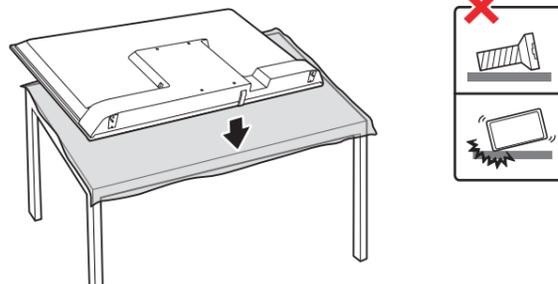

Recommended Wall Distance

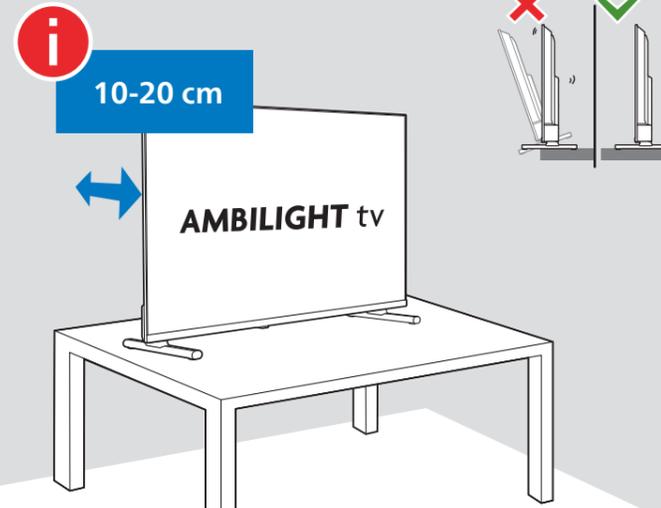

A Desk Placement





B Wall Placement



B

	A	B	C	D	E	F	G	H	I	J	K	L	M (kg)	N (kg)
32"	718.4	419	58.9	635	197	100	200	309.3	201.1	4xM6	8-10	(K) + *	3.4	3.5
40"	892.3	504.2	59.2	738.5	197	100	200	396.1	286.3	4xM6	8-10	(K) + *	4.6	4.7

(mm)

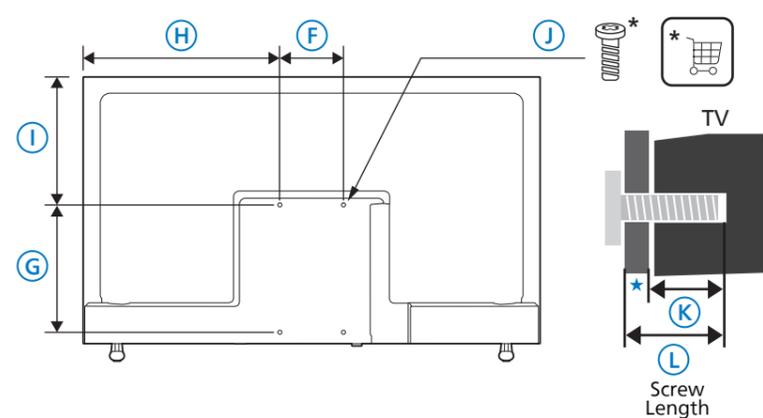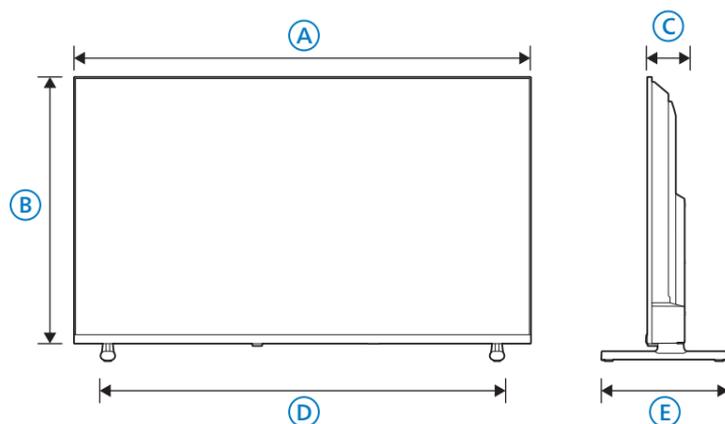

3

Get Connected



www.philips.to/smartTV

The Philips Smart TV app lets you switch channels and adjust the volume - just like a remote control.

4

Register and Support



www.philips.com/TVsupport

Register your TV, find out more, download the user manual and get support

1 To install batteries, slide the battery door up.

2 Use 2x AAA (Alkaline) LR03 1.5V (included)

3 Slide battery door back in place. Click

1 2 3 4

i

English	Read the safety instructions.	Español	Lea las instrucciones de seguridad.	Polski	Zapoznaj się z instrukcjami bezpieczeństwa.	Svenska	Läs säkerhetsinstruktionerna.
Български	Прочетете инструкциите за безопасност.	Français	Lisez les consignes de sécurité.	Português	Leia as instruções de segurança.	ภาษาไทย	โปรดอ่านคำแนะนำด้านความปลอดภัย
Čeština	Přečtěte si bezpečnostní pokyny.	Italiano	Leggere le istruzioni di sicurezza.	Română	Citiți instrucțiunile de siguranță.	Türkçe	Güvenlik talimatlarını okuyun.
Hrvatski	Pročitajte sigurnosne upute.	Қазақша	Қорғаныстық нұсқаулар.	Русский	Читайте инструкции по технике безопасности.	Українська	Читайте інструкції з техніки безпеки.
Dansk	Læs sikkerhedsforskrifterne.	Latviešu	Izlasiet drošības norādījumus.	Srpski	Pročitajte bezbednosna uputstva.		قراءة تعليمات السلامة.
Deutsch	Lesen Sie die Sicherheitshinweise.	Lietuvių	Perskaitykite saugos instrukcijas.	Slovenščina	Preberite varnostna navodila.		קראו את הוראות הבטיחות
Ελληνικά	Διαβάστε τις οδηγίες ασφαλείας.	Magyar	Olvassa el a biztonsági utasításokat.	Slovenský	Prečítajte si bezpečnostné pokyny.		עברית
Eesti	Lugege ohutusnõudeid.	Nederlands	Lees de veiligheidsvoorschriften.	Suomi	Lue turvaohjeet.		

FSC Logo H:12mm

FEUILLE
Séparez les éléments avant de trier

32" / 40"

i Recommended wall distance for the best Ambilight Experience

!

PHILIPS

All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product. 2026 © TP Vision Europe B.V. All rights reserved. www.philips.com/welcome