

PHILIPS

Micro Music System

100 W max (50 W RMS)

Bluetooth® 6.0, Auracast™

DAB+/FM radio

CD/USB/audio-in

TAM6500



Richer sound for all your music

Radio, CDs, streaming and more. This compact all-in-one micro system can fill a larger room with rich stereo sound. Turntables, USB devices and wired headphones connect easily, and Auracast™ is supported for multi-speaker setups.

Compact micro system. Stereo sound, deep bass.

- Powerful stereo sound for everything you love
- Integrated bass-reflex speaker system
- 2 x 3" full-range drivers. 100 W max (50 W RMS)

Easy to use. Plays from any source.

- Plays all of your music
- Easy streaming with Bluetooth® multipoint connectivity
- DAB+/FM radio, CD, USB, audio-in, headphone out
- Auracast™ for multi-speaker setups

At home in your home

- Compact all-in-one design
- Philips Entertainment app. Smart control for your system
- AC powered and physical remote control included
- GRS-certified recycled plastic. Responsible packaging
- Dimensions (W x H x D): 420 x 140 x 262 mm

Highlights

Powerful sound

You'll enjoy crisp, clear sound with deep bass thanks to 3" full-range drivers and the bass-reflex ports. The powerful 100 W max (50 W RMS) output is perfect for big lounges and open-plan living spaces.

All your music

You can tune in to crystal-clear DAB+/FM radio, stream your sounds via Bluetooth®, play music via USB or connect turntables via audio-in. The digital radio tuner with 20 presets delivers crystal-clear reception, and the CD player can read MP3 CDs and recorded CDs.

Bluetooth® 6.0

Bluetooth® 6.0 brings you a faster, steadier connection, and the LC3 codec is supported for noticeably better sound. The range is wide enough that you'll be able to control what you're streaming from practically anywhere in the house.

Auracast™


If you want even bigger sound, you can use Auracast™ to broadcast music from this micro system to as many compatible speakers as you

like. You can also make the system a receiver and send sound to it from your record player. Setup is simple via the PartyLink mode in our companion app.

Classic design

Stereo speakers are built directly into the wooden cabinet of this all-in-one micro system, and a clear colour display shows the source or station. Dials control volume, source selection and tuning. A physical remote control is included in the box, or you can use our companion app.

Philips Entertainment app

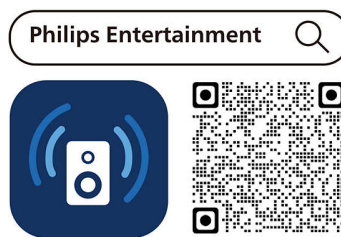

Got wide-ranging tastes? Download our companion app and you can use your smart device to select preset sound styles from the

Digital Sound Control menu, adjust treble and bass, switch between sources and more. Plus, the in-app PartyLink mode makes it simple to set up Auracast™ for even bigger sound.

Recycled materials



We use post-consumer recycled plastics in our products, and our packaging is made from FSC-certified recycled cardboard with inserts printed on recycled paper.

Specifications

Sound

Output power (RMS): 50 W (THD 10%)

Sound enhancement: digital sound control, bass reflex speaker system, treble and bass control, Custom equaliser (on app)

Volume control: rotary

Frequency response: 50 Hz - 20 kHz

Output power (MAX): 100 W

Sound mode: Powerful, Clear, Bright, Warm, Balanced

Speaker impedance: 6 ohm

Loudspeakers

Full-range driver diameter: 3"

Number of full-range drivers: 2

Driver configuration: Full range

Number of sound channels: 2.0

Connectivity

USB: USB host

Bluetooth version: 6.0

Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support in classic BT connection, Streaming Format: SBC, AAC, LC3

Bluetooth range: Line of sight, 30 m or 100 ft

Headphone jack: 1 x 3.5 mm

Audio in: 3.5 mm

USB charging

DLNA Standard: n.a.

Multiple speaker connection

Multiple speaker scenario: Broadcasting, Receiving

Multiple speaker technology: Auracast

Smart Home: n.a.

Audio playback

Disc playback modes: fast forward/reverse, next/previous track search, repeat/shuffle/programme

Playback media: CD, CD-R/RW, MP3-CD, USB flash drive

USB Direct playback modes: fast reverse/fast

forward, play/pause, previous/next, repeat, shuffle, stop

Audio supported formats: MP3, WAV, FLAC

Tuner/Reception/Transmission

Antenna: Detachable pigtail (75 ohm)

Tuner bands: FM, DAB/DAB+

Station presets: 20 (FM) + 20 (DAB)

RDS: Yes.

Tuner enhancement: auto digital tuning, auto scan, Easy set (plug and play)

Tuner type: Digital

Convenience

Clock: On main display, 24/12-hour display

Remote Control

Loader type: tray

Display Enhancements: Brightness Control

Display type: TFT display

Sleep timer

No. of alarms: 1

Alarms: Yes, DAB, FM, CD, USB

Compatibility

Smartphone/tablet APP control

Power

Power supply: 100-240 VAC, 50/60 Hz

Standby power consumption: <0.8 W (clock display on)

Packaging dimensions

Height: 21.6 cm

Packaging type: Box

Type of shelf placement: Standing

Width: 49 cm

Depth: 33.6 cm

Number of products included: 1

Gross weight: 6.25 kg

Net weight: 4.806 kg

Tare weight: 1.444 kg

Accessories

Included accessories: AC power cord, FM antenna, Remote Control (with battery), Quick start guide, Warranty Leaflet

Power cord: Length: 1.5 m

Design

Colour: Black

Wall mountable: No

System components: Main unit

Dimensions

Main Unit (W x H x D): 420 x 140 x 262 mm

Main Unit Weight: 4.53 kg

Sustainability

Plastic shell: contains 50% GRS-certified recycled post-consumer Acrylonitrile Butadiene Styrene (ABS) TE-00132492

