

PHILIPS

LCD monitor

Monitor

V Line

27" (68.6 cm)

1920 x 1080 (Full HD)

271V8LB



Vivid and crisp imagery that pushes boundaries

This monitor gives an unmatched viewing experience. Not only is it equipped with essential features, but it also has ones that stand out like its 100hz refresh rate, Adaptive Sync, LowBlue Mode, Flicker-Free, and VESA mount, and more.

Perfectly designed for your space

- Compact design saves space

Easy on the eyes

- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity

Experience true multimedia

- HDMI ensures universal digital connectivity

Vivid pictures every time

- SmartContrast for rich black details
- 16:9 Full HD display for crisp detailed images
- SmartImage presets for easy optimized image settings
- VA display delivers awesome images with wide viewing angles
- Effortlessly smooth action with Adaptive-Sync technology
- 100Hz refresh rates for ultra-smooth images


Monitor

LCD monitor

271V8LB/70

Highlights

VA display

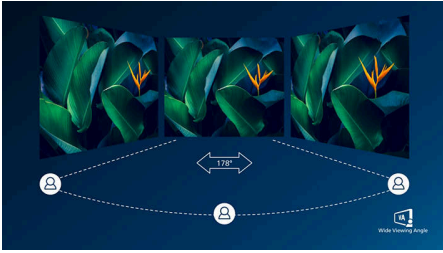

Philips VA LED display uses an advanced multi-domain vertical alignment technology which gives you super-high static contrast ratios for extra vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web-browsing, movies, gaming, and demanding graphical applications. It's optimized pixel management technology gives you 178/178 degree extra wide viewing angle, resulting in crisp images.

100Hz Fast refresh



This Philips display refreshes the screen image up to 100 times per second which makes this monitor much faster than a standard display. With a 100Hz frame rate, gamers are able to find those critical images on the screen that show enemy movement in an ultra-smooth motion so that they are easily targetable.

16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080

resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

SmartImage




SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

SmartContrast



SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

Adaptive-Sync technology

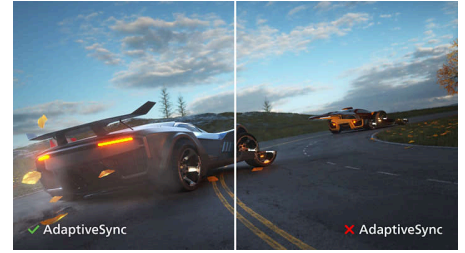

Gaming shouldn't be a choice between choppy gameplay or broken frames. Get fluid, artifact-free performance at virtually any framerate with Adaptive-Sync technology, smooth quick refresh and ultra-fast response time.

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.



Monitor

LCD monitor

271V8LB/70


Highlights

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

EasyRead mode

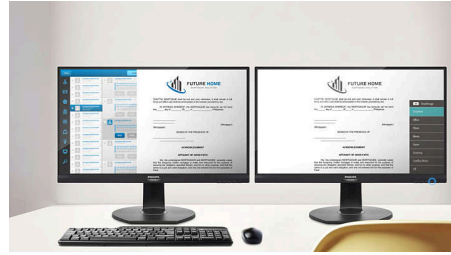

EasyRead mode for a paper-like reading experience

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

Monitor

LCD monitor

271V8LB/70

Specifications

Picture/Display

Panel Size: 27 inch / 68.6 cm

Aspect ratio: 16:9

LCD panel type: VA LCD

Backlight type: W-LED system

Pixel pitch: 0.3114 x 0.3114 mm

Brightness: 250 cd/m²

Display colors: 16.7 M (8 bit)

Contrast ratio (typical): 4000:1

SmartContrast: Mega Infinity DCR

Response time (typical): 4 ms (GtG)*

Viewing angle: 178° (H) / 178° (V), @ C/R > 10

Maximum resolution: 1920 x 1080 @ 100 Hz*

Effective viewing area: 597.9 (H) x 336.3 (V)

Scanning Frequency: 30 - 115 kHz (H) / 48 - 100 Hz (V)

sRGB

Flicker-free

Pixel Density: 81.59 PPI

LowBlue Mode

Display Screen Coating: Anti-Glare, 3H, Haze 25%

EasyRead

Adaptive sync (VRR)

Connectivity

Signal Input: VGA (Analog), HDMI 1.4

Sync Input: Separate Sync, Sync on Green

Audio (In/Out): Audio out

HDCP: HDCP 1.4 (HDMI)

Convenience

Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11 / 10 / 8.1 / 8

User convenience: Power On/Off, Menu/OK, Brightness/UP, Input/Down, SmartImage/Back

OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian

Other convenience: Kensington lock, VESA mount (100x100mm)

Stand

Tilt: -5/20 degree

Power

Power supply: Built-in, 100-240VAC, 50-60Hz

Off mode: 0.3 W (typ.)

On mode: 23.9 W (typ.)

Standby mode: 0.5 W (typ.)

Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

Packaging in mm (WxHxD): 730 x 446 x 123 mm

Product without stand (mm): 614 x 367 x 53 mm

Product with stand(max height): 614 x 457 x 231 mm

Weight

Product with packaging (kg): 5.35 kg

Product with stand (kg): 3.74 kg

Product without stand (kg): 3.28 kg

Operating conditions

Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)

Temperature range (operation): 0°C to 40 °C

MTBF: 30,000 (Excluded backlight) hour(s)

Relative humidity: 20%-80 %

Temperature range (storage): -20°C to 60 °C

Sustainability

Environmental and energy: RoHS

Recyclable packaging material: 100 %

Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

Regulatory Approvals: CB, CE Mark, CCC, CECP, CEL, FCC Class B, ICES-003

Cabinet

Color: Black

Finish: Textured

Design

Designed in Amsterdam, NL

