

PHILIPS

LCD monitor with
USB-C

Monitor

E Line

27" (68.6 cm)

3840 x 2160 (4K UHD)

279E1EW



Simply stunning

This Philips E line USB-C monitor offers both aesthetic and functional. Magnify your screen to enjoy UltraClear 4K UHD videos, and also power charge your smartphone, all with a single USB-C cable. MultiView boost your daily productivity.

Features designed for you

- HDMI ensures universal digital connectivity
- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity
- MultiView enables simultaneous dual connection and view

Single cable USB-C connection

- Magnify screen and recharge a device by one cable

Superb Picture Quality

- SmartContrast for rich black details
- IPS LED wide view technology for image and color accuracy
- UltraClear 4K UHD (3840x2160) resolution for precision
- SmartImage game mode optimized for gamers
- 1.07 billion colors for stunning color and finest gradations

Monitor

LCD monitor with USB-C


279E1EW/70

Highlights

USB-C connectivity


This Philips monitor features a built-in USB-C connector which meets USB Power Delivery standard. With intelligent and flexible power management, you can power charge your compatible device directly from the monitor using a single USB-C cable. Its slim, reversible USB-C allows for easy connection, you can watch high resolution video from your laptop.

IPS technology

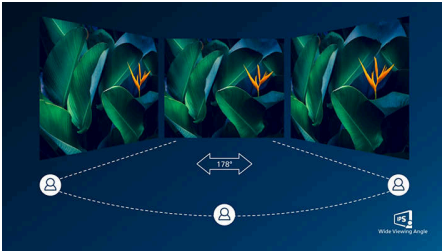


IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

UltraClear 4K UHD Resolution

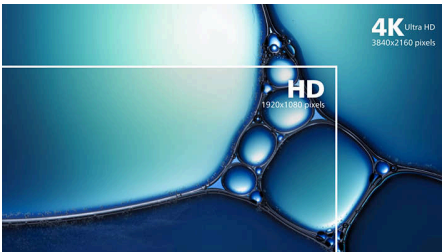

These Philips displays utilize high performance panels to deliver UltraClear, 4K UHD (3840 x 2160) resolution images. Whether you are demanding professional requiring extremely detailed images for CAD solutions, using 3D graphics applications or a financial wizard working on huge spreadsheets, Philips displays will make your images and graphics come alive.

1.07 billion colors

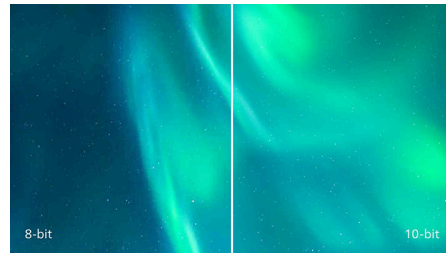

This display delivers outstanding color depth with 1.07 billion colors, and the finest gradation, for re-creating smooth, precise, and vivid image. Enjoy accurate and true-to-life visuals whether gaming, watching videos, or working on color critical work with graphics applications.

SmartImage Game mode



The new Philips gaming display has quick access OSD fine tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts display with fastest response time, high color, along with image adjustments. "RTS" mode (Real time strategy) has a special SmartFrame mode which enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customized settings based on different games, ensuring best performance.

Flicker-free technology




Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

MultiView technology

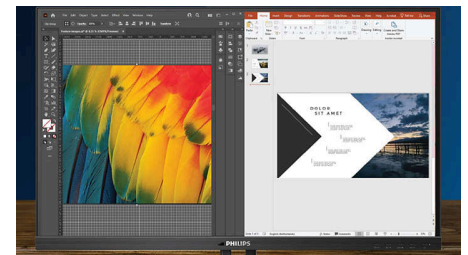

With the ultra-high resolution Philips MultiView display you can now experience a world of connectivity. MultiView enables active dual connect and view so that you can work with multiple devices like a PC and notebook simultaneously, for complex multi-tasking.



Monitor

LCD monitor with USB-C

279E1EW/70

Highlights

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

EasyRead mode



EasyRead mode for a paper-like reading experience

SmartContrast



SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.



Monitor

LCD monitor with USB-C

279E1EW/70

Specifications

Picture/Display

Panel Size: 27 inch / 68.6 cm

Aspect ratio: 16:9

LCD panel type: IPS technology

Backlight type: W-LED system

Pixel pitch: 0.1554 x 0.1554 mm

Brightness: 350 cd/m²

Display colors: Color support 1.07 billion colors

Color gamut (typical): NTSC 93%*, sRGB 111.5%*

Contrast ratio (typical): 1000:1

SmartContrast: Mega Infinity DCR

Response time (typical): 4 ms (Gray to Gray)*

Viewing angle: 178° (H) / 178° (V), @ C/R > 10

Picture enhancement: SmartImage game

Maximum resolution: 3840 x 2160 @ 60 Hz*

Effective viewing area: 596.74 (H) x 335.66 (V) mm

Scanning Frequency: 30 - 140 kHz (H) / 23 - 75 Hz (V)

sRGB

Delta E: < 2 (sRGB)

Flicker-free

Pixel Density: 163.18 PPI

LowBlue Mode

Display Screen Coating: Anti-Glare, 3H, Haze 25%

SmartUniformity: 93 ~ 105%

EasyRead

Adaptive sync (VRR)

Connectivity

Signal Input: HDMI 2.0 x1, DP 1.2 x 1, USB-C (DP Alt mode, PD up to 15W (5V/3A))

Sync Input: Separate Sync

Audio (In/Out): Audio out

Convenience

Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7

User convenience: Power On/Off, Menu, Brightness, Input, SmartImage Game

OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian

Other convenience: Kensington lock, VESA mount (100x100mm)

MultiView: PIP/PBP mode, 2x devices

Stand

Height adjustment: 100 mm

Tilt: -5/20 degree

Power

Power supply: External, 100-240VAC, 50-60Hz

Off mode: 0.3 W (typ.)

On mode: 34 W (typ.)

Standby mode: 0.5 W (typ.)

Power LED indicator: Operation - White, Standby mode - White (blinking)

Dimensions

Packaging in mm (WxHxD): 680 x 626 x 202 mm

Product without stand (mm): 613 x 368 x 41 mm

Product with stand(max height): 613 x 545 x 224 mm

Weight

Product with packaging (kg): 8.85 kg

Product with stand (kg): 6.10 kg

Product without stand (kg): 4.42 kg

Operating conditions

Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)

Temperature range (operation): 0 to 40 °C

MTBF: 50,000 hrs (excluding backlight) hour(s)

Relative humidity: 20%-80 %

Temperature range (storage): -20 to 60 °C

Sustainability

Environmental and energy: RoHS

Recyclable packaging material: 100 %

Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

Regulatory Approvals: CB, CE Mark, PSB

Cabinet

Color: White

Finish: Textured

