

PHILIPS

Smart safe box

6000 Series

Fingerprint unlocking

Electronic telescopic handle

WiFi connectivity

Two-factor authentication

SBX602C5GU



WiFi connectivity

For enhanced security with real-time protection

SBX602 supports various unlocking methods. It features an innovative fingerprint-enabled telescopic handle for seamless security. Along with WiFi connectivity and dual authentication mode, it provides a safe and convenient storage solution.

Upgraded intelligence for enhanced security

- For a quick and carefree access experience.
- Ensure real-time monitoring for added security
- Support two-factor authentication

Caring details to safeguard your private space

- Enables easy access
- Lights up upon door opening
- To safeguard your privacy
- Located on door's side for discreet security
- Provide peace of mind every day

Exquisite craftsmanship for reliable safety

- Offer seamless defense
- Boasts concealed design and elegant appearance
- To effectively against drilling and prying
- Responds instantly to light touch

Highlights

Compartmentalized storage



The cabinet interior employs a distributed layout, complete with rail-guided drawers, offering easy storage for valuable items like jewelry and small objects. The synthetic leather interior adds a comfortable touch, ensuring a pleasant storage experience.

Integrated cabinet body



The safe is constructed from high-strength carbon alloy steel plate, cut and formed using laser technology, providing effective resistance against prying, smashing, and drilling. Its robust and durable build ensures long-lasting security. The minimalist dual-line design of the door not only enhances aesthetics but also adds a touch of contemporary style to the safe.

Multiple unlocking methods



It comes with a concealed digital panel and touch-to-wake buttons. The advanced semiconductor biometric fingerprint technology ensures precise and highly secure identification. There is also a mechanical keyhole located on the door's side for a hassle-free and worry-free unlocking experience.

Crafted telescopic handle



Presenting an innovative design, the electronic telescopic handle features an embedded fingerprint unlocking system. Crafted from electroplated zinc alloy, the handle guarantees great corrosion resistance and durability. During everyday use, the handle stays hidden within the cabinet, extending automatically when unlocked. After securely closing and locking the door, the handle retracts automatically.

WiFi connectivity




Through mobile device WiFi connectivity, our intelligent monitoring system ensures real-time security updates for the safe, granting you greater peace of mind while you're away.

Built-in LED light



The interior of the safe is equipped with a built-in night vision light that automatically illuminates upon opening, facilitating users in locating and accessing their items in dim environments.

32 mm solid locking bolts

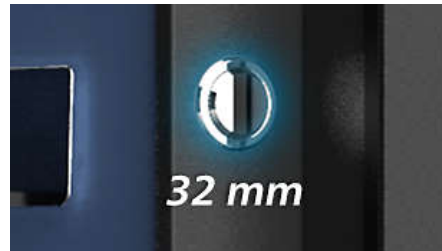

The safe's door is fortified with 32 mm solid stainless steel locking bolts, which tightly secure the door panel upon locking. This robust design not only ensures durability but also significantly elevates the overall security level.

Concealed compartment



The bottom of the safe is equipped with a concealed compartment, creating a more discreet and private storage space for you.

Enhanced security mode



In the enhanced security mode, opening the cabinet door requires verification of any two sets of configured fingerprints or passwords, providing a dual-layered safeguard for the security of your valuable belongings.

6000 Series

Smart safe box

SBX602C5GU/97

Highlights

Concealed keyhole



Enhanced with a Grade C lock core for advanced anti-theft security, the mechanical keyhole is discreetly nestled on the side of the door, ensuring both heightened safety and a seamless exterior appearance for the safe.

Seamless digital panel



The digital panel design seamlessly integrates into the surface, striking a balance between aesthetics and concealment. The matte finish provides a comfortable touch while effectively resisting smudges, scratches, and fingerprint marks, ensuring a user-friendly interface.

Abnormal alerts on APP



SBX602 features four alert functions: vibration alert, error alert, low voltage alert, and unclosed door alert. In case of any anomalies, a high-pitched alarm will sound while simultaneously sending an immediate alert to your mobile device. This ensures the continuous safeguarding of your belongings, providing security day and night.

6000 Series

Smart safe box

SBX602C5GU/97

Specifications

Color scheme

Gray

Power supply

Battery life*: 6-12 months

Working voltage: 4.5 ~ 6 V

Battery for backup system: 4 pieces AA battery

Net weight of product

70.5 kg

Dimensions of product (LxWxH)

550x400x360 mm

Unlocking methods

Fingerprint: maximum 30 sets

PIN code: maximum 10 sets

Mechanical key

Indicator lights

Blue: normal working

Green: recognition succeeded

Red: recognition failed

