

PHILIPS

Smart safe box


Keyless unlocking

Free handle

Backup system

Abnormal alert

SBX701B4S0

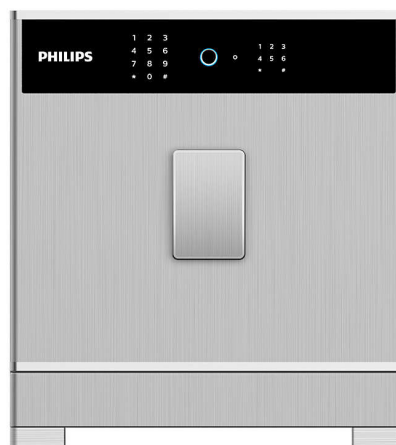

Secure your valuables

With quality alloy steel casting

Philips SBX701 secures your valuables with keyless unlocking and 2 independent unlocking systems. The primary system supports both fingerprints and PIN codes, the backup system is for emergency use and supports PIN codes only.

Caring details for better protection to privacy

- Keep your valuables stored in order
- Offer additional protection for your valuables
- For easy use in dark environment
- Give full-time protection

Craftsmanship ensures safety and reliability

- Leave no hidden risk and give full security
- Prevent violent unlocking
- Locked tight at four sides for better protection

Convenience at core, highly secure

- Support both fingerprints and PIN codes
- Provide enhanced security

Highlights

Back-up system



The safe box has 2 independent unlocking systems. When the primary system crashes, enabling the backup system can ensure the normal operation of the safe and avoid being unable to take out your belongings due to blocking or system crash.

Keyless unlocking



Unlike the traditional safe box with mechanical key, this safe box adopts a semi-conductor fingerprint sensor and a touch keypad, allowing unlocking with both fingerprints and PIN codes. A light touch to wake up the system and have quick identification. No need to use mechanic key brings smoother and faster unlocking experience.

32 mm solid deadbolts



32 mm solid deadbolts at four sides of the door ensures excellent anti-prying performance and enhance security. The deadbolts are made of stainless steel, making it resistant to rusting and corrosion.

Abnormal alert



SBX701 has multiple alert functions such as vibration alert, false alert, low-voltage alert, etc. In case of abnormal situations, it gives high-pitch sound to give your valuables all-day protection.

Free handle



After the safe is locked, the handle separates from gearing and enters into free state. It eliminates the threat of forced unlocking from outside by breaking the handle.

Hidden compartment



With the hidden compartment at the bottom, the safe box provides you a more secure and private storing space.

Interior light



The safe has interior light that turns on upon opening of the safe door, ensuring worry-free use experience in dark environment.

One-piece cabinet



SBX701 has an one-piece cabinet, making it solid and secure. The built-in touch keypad gives it a simplistic look and offers better protection to the electronic circuit board. All makes this safe box highly functional, stylish, secure and trustworthy.

Separate storage sections



The proper interior layout and the sliding drawers make the safe perfectly fit for small valuables such as jewelry. The stylish and high-quality interior material gives the safe soft touch and brings pleasant storing experience.

Specifications

Color scheme

Silver

Power supply

Battery life*: 6-12 months

Working voltage: 4.5 ~ 6 V

Battery for backup system: 4 pieces AA battery

Net weight of product

60 kg

Dimensions of product (LxWxH)

450x430x380 mm

Unlocking methods

Fingerprint: maximum 30 sets

PIN code: maximum 10 sets

Indicator lights

Blue: normal working

Green: recognition succeeded

Red: recognition failed

Red light flashing: low voltage, abnormal alert

