

PHILIPS

Smart safe box

3000 Series


Furniture design

Wireless charger

Back up system

Multiple alerts

SBX301P5WC

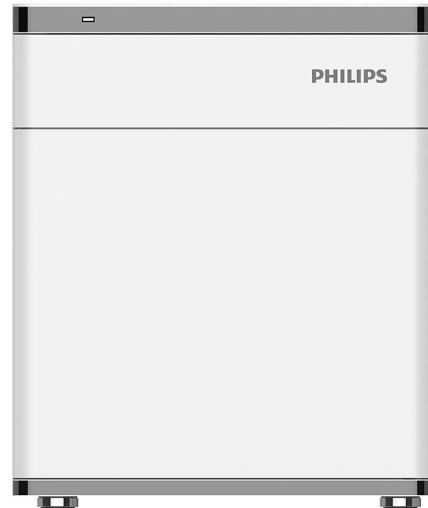

Bedside table design

Go beyond safekeeping

Furniture design lightens up living space, making SBX301 a great replacement of bedside table. While securing your valuables, SBX301 also supports wireless charging, bringing exceptional safekeeping experience.

Exquisite craftsmanship ensures security

- Leave no hidden risk and give full security
- Solid for better protection

Attention to detail offers better convenience

- Make ease use at night
- For added convenience
- Give full-time protection

More than safe and secure storage

- For quick and ease phone charging
- Keep your valuables stored in order
- Protect more valuables

Intelligent for safer and easier unlocking

- Supports fingerprints and PIN codes
- For additional security

Highlights

30 mm diameter bolts



The door and walls of this secure cabinet are constructed with high-quality low-carbon alloy steel. Combined with its 30 mm diameter solid steel bolts, SBX301 is made to provide safe protection.

Abnormal alert



SBX301 supports 4 types of alerts including shock alert, false alert, low battery alert and door left open alert. It responds to those situations with high-pitch sound, giving your valuables all-day protection.

Ample space



The downside cabinet can be unlocked with fingerprints or PIN codes. Upon successful recognition, the door pops open, offering better

convenience. The cabinet is designed with divider and has big storage capacity, meeting various safekeeping needs.

Back up system



To avoid items being permanently locked inside because of system crash, SBX301 is designed with 2 independent unlocking systems. The backup system ensures normal unlocking in case the primary system is down.

Built-in LED light



The downside cabinet has a built-in LED light, making each use at night easy and convenient.

Hidden unlocking panel



You can unlock the downside cabinet with fingerprints or PIN codes. The unlocking panel is designed hidden inside the drawer upside for more security. The matte panel is scratch resistant and unlikely to leave fingerprints, making each unlocking worry-free.

Hooks for keys and small items



Enjoy ease-of-use brought by hooks especially designed for keys and small items. You will no longer have to rummage through the cabinet for those small objects.

3000 Series

Smart safe box

SBX301P5WC/97

Highlights

One-piece cabinet



SBX301 has an one-piece cabinet with minimized gap between door and frame, making it solid and secure.

Slide drawer with organizer



Slightly push and the drawer will pop out open, a design that makes each opening easy and convenient. The drawer has separate sections for organized storage. Its soft fabric interior protects stored items against bumps and scrapes, giving assuring storage experience.

Wireless charger



Most phones on the market can use the wireless charging function of SBX301. Simply put your phone on the top wireless charging area to get your phone charged. There is also an USB port at the top left corner to provide you more charging options.

3000 Series

Smart safe box

SBX301P5WC/97

Specifications

Color scheme

White

Power supply

Power supply of locking system: 4 AA batteries

Wireless charging power: 15 W

USB charging power: 5V/2A

Battery life*: 6-12 months

Working voltage: 4.5 ~ 6 V

Net weight of product

36 kg

Dimensions of product (HxWxD)

500x430x380 mm

Unlocking methods

Fingerprint: maximum 20 sets

PIN code: maximum 1 set

Indicator lights

Door opened

Door closed

Setting mode

Low battery



* The battery life (stand-by time) depends on the actual usage.
* *USB port charging only supports devices with current no more than 2A.