

PHILIPS

Smart safe box

6000 Series


Fingerprint unlocking

Electronic telescopic handle

WiFi connectivity

Two-factor authentication

SBX602C6GU

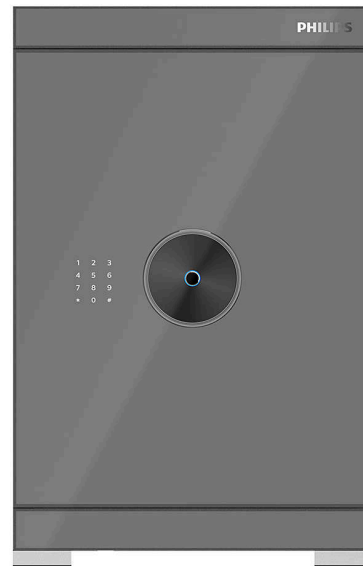

WiFi connectivity

Enhance security with real-time protection

SBX602 supports various unlocking methods. It features an innovative fingerprint-enabled telescopic handle for seamless security. Along with WiFi connectivity and dual authentication mode, it provides a safe and convenient storage solution.

Upgraded intelligence for enhanced security

- Enhanced security mode supports two-factor authentication
- Multiple unlocking methods for quick access
- WiFi connectivity ensures real-time monitoring

Exquisite craftsmanship for reliable safety

- Integrated design offers seamless defense
- Seamless digital panel responds quickly to touch
- Crafted telescopic handle boasts elegance
- 32 mm locking bolts against drilling and prying

Caring details to safeguard your private space

- Concealed compartment to safeguard privacy
- Keyhole concealed on door's side for discreet security
- Alerts on APP provide peace of mind every day
- Built-in LED light for easy navigation at night
- Organized storage enables easy access

Highlights

Enhanced security mode



In the enhanced security mode, opening the cabinet door requires verification of any two sets of configured fingerprints or passwords, providing a dual-layered safeguard for the security of your valuable belongings.

Multiple unlocking methods



It comes with a concealed digital panel and touch-to-wake buttons. The advanced semiconductor biometric fingerprint technology ensures precise and highly secure identification. There is also a mechanical keyhole located on the door's side for a hassle-free and worry-free unlocking experience.

WiFi connectivity



Through mobile device WiFi connectivity, our intelligent monitoring system ensures real-time security updates for the safe, granting you greater peace of mind while you're away.

Integrated cabinet body



The safe is constructed from high-strength carbon alloy steel plate, cut and formed using laser technology, providing effective resistance against prying, smashing, and drilling. Its robust and durable build ensures long-lasting security. The minimalist dual-line design of the door not only enhances aesthetics but also adds a touch of contemporary style to the safe.

Seamless digital panel



The digital panel design seamlessly integrates into the surface, striking a balance between aesthetics and concealment. The matte finish provides a comfortable touch while effectively resisting smudges, scratches, and fingerprint marks, ensuring a user-friendly interface.


Crafted telescopic handle



Presenting an innovative design, the electronic telescopic handle features an embedded fingerprint unlocking system. Crafted from electroplated zinc alloy, the handle guarantees great corrosion resistance and durability. During

everyday use, the handle stays hidden within the cabinet, extending automatically when unlocked. After securely closing and locking the door, the handle retracts automatically.

32 mm solid locking bolts

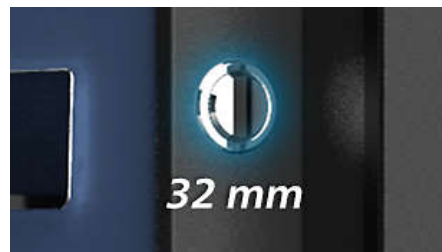

The safe's door is fortified with 32 mm solid stainless steel locking bolts, which tightly secure the door panel upon locking. This robust design not only ensures durability but also significantly elevates the overall security level.

Concealed compartment



The bottom of the safe is equipped with a concealed compartment, creating a more discreet and private storage space for you.

Concealed keyhole



Enhanced with a Grade C lock core for advanced anti-theft security, the mechanical keyhole is discreetly nestled on the side of the door, ensuring both heightened safety and a seamless exterior appearance for the safe.

6000 Series

Smart safe box

SBX602C6GU/97

Highlights

Abnormal alerts on APP



SBX602 features four alert functions: vibration alert, error alert, low voltage alert, and unclosed door alert. In case of any anomalies, a high-pitched alarm will sound while simultaneously sending an immediate alert to your mobile device. This ensures the continuous safeguarding of your belongings, providing security day and night.

Built-in LED light



The interior of the safe is equipped with a built-in night vision light that automatically illuminates upon opening, facilitating users in locating and accessing their items in dim environments.

Compartmentalized storage



The cabinet interior employs a distributed layout, complete with rail-guided drawers, offering easy storage for valuable items like jewelry and small objects. The synthetic leather interior adds a comfortable touch, ensuring a pleasant storage experience.

6000 Series

Smart safe box

SBX602C6GU/97

Specifications

Color scheme

Gray

Power supply

Battery life*: 6-12 months

Working voltage: 4.5 ~ 6 V

Battery for backup system: 4 pieces AA battery

Net weight of product

89 kg

Dimensions of product (LxWxH)

650x430x390

Unlocking methods

Fingerprint: maximum 30 sets

PIN code: maximum 10 sets

Mechanical key

Indicator lights

Blue: normal working

Green: recognition succeeded

Red: recognition failed

