

PHILIPS

Smart safe box

7000 Series


Keyless unlocking

Handle frozen after lockout

Backup system

Abnormal alert

SBX702BAGX

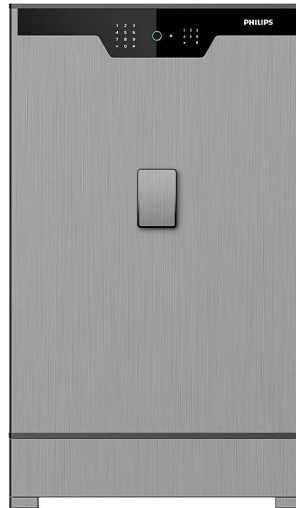

Secure your valuables

With backup unlocking system

Enjoy fast unlocking at fingertips. Philips SBX702 supports fingerprint and PIN code unlocking. 2 independent unlocking systems are designed to protect your valuables. The backup system is for emergency use and gives upgraded security.

Convenient unlocking at fingertips

- With fingerprints and PIN codes
- Provide enhanced security

Craftsmanship ensures safety and security

- Leave no hidden risk
- Prevent forced unlocking
- Locked tight at 4 sides for upgraded protection

Keep your valuables neatly organized

- Keep your watches at pristine condition
- Offer special care to your small valuables

Caring details make worry-free experience

- For easy use in dark space
- Give full-time protection

Highlights

Quad watch winder



SBX702 are equipped with 4 craftily made watch winders, allowing you to keep your previous watches safe and clean when you are not wearing them.

Interior light



The safe has interior light that turns on once the safe door opens. This ensures worry-free using experience in dark environment.

One-piece cabinet



The safe is solid and secure thanks to the cabinet that is made with single piece of metal sheet. A built-in touch keypad gives it a simplistic look and protects the electronic circuit board. All makes this safe highly functional, stylish, secure and trustworthy.

Keyless unlocking



Getting rid of mechanical unlocking, this safe adopts a semi-conductor fingerprint sensor and a touch keypad, allowing unlocking with both fingerprints and PIN codes. A light touch to wake up the system and have quick identification. Biometric lock brings smoother and faster than ever unlocking experience.

Sliding drawer



The safe has a sliding drawer designed for storing small valuables, such as jewelry. The soft fabric protects delicate items from scratches and keep them at best condition.

Abnormal alert



SBX702 supports multiple alerts such as vibration alert, false alert, low-voltage alert, etc. In case of potential risks, it makes high-pitch siren to protect your valuables.

Handle disabled after lockout



After the safe is locked, the handle separates from gearing and freezes. It is for preventing forced unlocking that try to enter the safe by breaking the handle.

Backup system



The safe box has 2 independent unlocking systems. The backup system ensures the safe can be normally operated in case of primary system failure. You'll no longer have to worry about your valuables getting stuck in the safe.

32 mm solid deadbolts



32 mm solid deadbolts at four sides of the door provide enhanced security. The deadbolts are made of stainless steel, making it resistant to rusting and corrosion.

7000 Series

Smart safe box

SBX702BAGX/97

Specifications

Color scheme

Space gray

Power supply

Power supply of locking system: 4 AA batteries

Emergency power supply: External power box

Power supply of watch winder: Adaptor 3V1A

Battery life*: 6-12 months

Working voltage: 4.5 ~ 6 V

Battery for backup system: 4 pieces AA battery

Net weight of product

196 kg

Dimensions of product (HxWxD)

1055x655x575 mm

Unlocking methods

Fingerprint: maximum 30 sets

PIN code: maximum 10 sets

Indicator lights

Blue: normal working

Green: recognition succeeded

Red: recognition failed

Red light flashing: low voltage, abnormal alert

Watch winder

4 pcs

