

PHILIPS

Portable Radio

Retro

Retro design, modern sound

FM radio, USB audio

Bluetooth® 6.0, IPX5

User-replaceable battery

TAV2500F



The Janet XL

It's all about retro looks and modern versatility. The Janet XL brings you bigger sound with deeper bass, plus the latest Bluetooth® connectivity. Wherever you place it, it streams playlists and tunes into FM radio like a boss.

CENTURY range. 100 years of Philips sound.

- Looks from back then, sound from now
- 3" full-range driver, 1.5" tweeter, 40 W max (20 W RMS)
- Twin passive radiators and exclusive Bass+ tech
- Retro charm, IPX5 water-resistant design

The Janet XL. Portable Bluetooth® radio.

- Bluetooth® multipoint connectivity and USB audio
- FM digital tuner and room for 30 go-to station presets
- Auracast™ for multi-speaker setups

1950s curves. Modern performance.

- Kitchen timer and sleep timer
- Easily replaceable built-in rechargeable battery
- Modern colourful display with adjustable brightness
- Philips Entertainment app. Smart control for The Janet XL
- GRS-certified recycled plastic. Responsible packaging

Retro

Portable Radio

Highlights

Retro. Also, modern

Classic 1950s curves and an old-school volume knob on the outside. Powerful 3" full-range driver and 1.5" tweeter on the inside. You'll enjoy rich, warm sound and vocals that sing, while twin passive radiators and our Bass+ technology keep the bass deep and tight at any volume.

Bluetooth® 6.0

Bluetooth® 6.0 lets you stream without annoying dips in the sound, and you can connect The Janet XL to two devices at once. You can also plug an external device into its USB-C port and listen to music that way.

FM radio

Don't let the classic look fool you — The Janet XL knows its way around the dial. With a precise FM digital tuner, a telescopic aerial for strong reception and space for up to 30 presets, it keeps your go-to stations perfectly lined up.

Auracast™

If you're hosting a party or you just want even bigger sound, you can use Auracast™ to broadcast music from The Janet XL to as many compatible speakers as you like. Setup is simple via the PartyLink mode in our companion app.

IPX5 water resistant

Kitchen, bedroom, bathroom, dining table. With an IPX-5 water-resistant design, The Janet XL isn't fussy about where you place it. Steam from the shower, splashes in the kitchen, spills on the table: it'll keep on playing.

Handy timers

There's a handy kitchen timer to keep your cooking on point, and if you like falling asleep to the sound of the radio, you can use the sleep timer to control how long the radio plays for as you drift off.

Replaceable built-in battery


The Janet XL comes with a rechargeable lithium-ion battery that's easily replaceable when it reaches the end of its life. You get approx. 20 hours of play time from a full charge, and a full recharge takes around 3.5 hours via USB-C.

Colourful TFT display

Up-to-date design touches include a clear TFT display and a digital clock that shows the time. You can adjust the display's brightness to suit the room.

TAV2500F/00

Philips Entertainment app

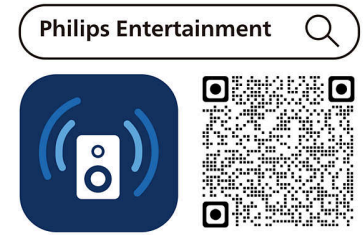

You can use our companion app to select a sound style, control Bass+, update software and more. There's a handy virtual remote control, and the in-app PartyLink mode makes it simple to connect to other speakers via Auracast™.

Recycled materials



We use post-consumer recycled plastics in our products, and our packaging is made from FSC-certified recycled cardboard with inserts printed on recycled paper.

Retro

Portable Radio

TAV2500F/00

Specifications

Sound

Output power (RMS): 20 W

Sound System: Mono

Sound enhancement: Bass+, Custom equaliser (on app)

Volume control: rotary (digital)

Output power (MAX): 40 W

Sound mode: Balanced, Powerful, Clear, Bright, Warm

Total harmonic distortion: <10%

Loudspeakers

Full-range driver diameter: 3"

Number of full-range drivers: 1

Number of tweeters: 1

Passive radiators: 2

Tweeter diameter: 1.5"

Connectivity

Bluetooth

USB: Type-C

Bluetooth version: 6.0

Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support in classic BT connection,

Streaming Format: SBC, AAC, LC3

Bluetooth range: 25 m (free space)

Audio in: No

Auracast

Tuner/Reception/Transmission

Antenna: Telescopic

Auto digital tuning

Tuner bands: FM

Station presets: 30

Convenience

Backlight colour: black

Display type: TFT display

Waterproof: IPX5

Clock update: FM/App

Compatibility

Smartphone/tablet APP control

Power

Battery Capacity: 7.3 V, 2600 mAh

Battery type: Li-ion (replaceable)

Input: 5 V, 2 A

Standby power consumption: Standard standby mode: <0.8 W

Operating time on battery: 20 hour(s)

Power type: DC in (via USB-C)

Charging time: 3.5 hour(s)

Packaging dimensions

Height: 18.8 cm

Packaging type: Box

Type of shelf placement: Standing

Width: 28.4 cm

Depth: 14.9 cm

Number of products included: 1

Gross weight: 1.94 kg

Net weight: 1.398 kg

Tare weight: 0.542 kg

Product dimensions

Height: 13.24 cm

Width: 23 cm

Depth: 8.5 cm

Weight: 1.32 kg

Accessories

Included accessories: USB cable, Quick start guide, Warranty certificate

Design

Colour: Black

Alarm

Sleep timer: 15/ 30/ 60/ 90/ 120 mins

Kitchen timer

Clock

Display: TFT

Type: Digital

Time format: 12 H, 24 H

Brightness control (Dim): High/Medium/Low

Sustainability

Plastic shell: contains 75% GRS-certified recycled post-consumer Acrylonitrile Butadiene Styrene (ABS) TE-00132492

