

PHILIPS

Smart safe box

5000 Series

Immersive digital keypad

Fire-resistant material

Intelligent control system

Abnormal alerts

SBX501C4B0



Elevate your home fire safety

With advanced technology

Redefining with a handle-less design and automatic door opening. The immersive digital keypad awakens upon a touch. Crafted from low-carbon alloy steel and advanced fire-resistant materials, SBX501 ensures both fire protection and security.

Intelligent unlocking for enhanced security

- Effectively against peeping
- For added convenience
- Give hands-free door opening experience
- For enhanced security
- Offer double security

Craftsmanship quality for safety you can trust

- Provide sleek and unified aesthetics
- Protect valuables from fire risks
- Offer comprehensive protection
- Responsive at simple touch and brings elegance

Thoughtful details to safeguard your private space

- For flexible organization
- To avoid vulnerable points
- Offer daily peace of mind

Highlights

Placeholder password




Utilizing a 24-digit anti-peeping password technology, you can safely unlock and open the door by entering the correct numerical password within a randomly generated combination. This prevents password exposure to onlookers.

Layered storage



The safe's capacious interior offers abundant space for securely storing a wide range of valuables. Adjustable shelving facilitates the storage of larger items, catering to your adaptable storage needs.

Integrated door panel

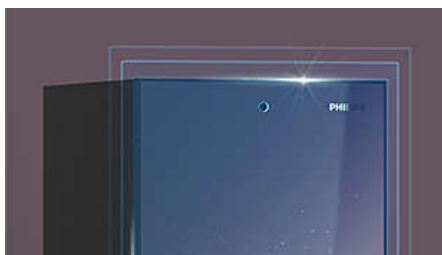

The innovative handle-less door panel design of the fire-resistant safe demonstrates exceptional craftsmanship. Internally, it is made from robust low-carbon alloy steel plates and proprietary fire-resistant materials. The door surface is sleek, shiny, and adorned with vibrant colors, striking a perfect balance between safety, fire resistance, and aesthetics.

Multiple unlocking options



With an immersive digital panel that activates at your fingertips, the safe employs semiconductor fingerprint technology for precise verification, enabling one-touch unlocking. For added convenience, it also includes a mechanical key design, ensuring a smooth and worry-free unlocking experience.

Advanced materials



The fire-resistant materials utilize composite fire-resistant layers and high-polymer engineering materials, conforming to the UL350-2HR fire certification standard. Even when subjected to a continuous 2-hour burn at a high temperature of 1010C, the interior temperature remains below 177C, guaranteeing the preservation of paper documents and records.

Electronic door open control



Transitioning from manual to automatic, the safe opens effortlessly. With the correct password, the locking bolts automatically release, and upon closing, it locks automatically. The handle-less design simplifies operations, freeing your hands.

Four-sided locking bolts




The safe door is fortified with solid stainless steel lock bolts that engage all four sides, providing thorough protection and greatly elevating security levels against tampering and intrusion.

Ground locking mechanism



At the bottom, there equips a ground locking mechanism, allowing you to securely anchor safe to the floor. This reduces the possibility of the safe being pried open or moved, enhancing the physical security and anti-theft properties of this fireproof safe.

Concealed hinges

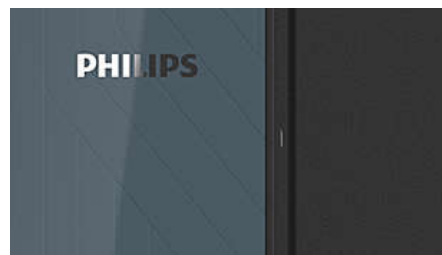

The hinges are concealed within the safe, rendering them inaccessible from the exterior. This design significantly enhances theft protection, steadfastly guarding your treasures.

5000 Series

Smart safe box

SBX501C4B0/97

Highlights

Dual verification



In Enhanced Safety mode, safe access requires verification with any two sets of configured fingerprints or passwords, providing double protection for your valuable possessions.

Abnormal alerts

SBX501 comes with several alert functions, including error alerts, low-battery alerts, and door left open alerts. In case of unusual circumstances, a high-pitched alarm will activate, providing round-the-clock protection for your assets.

Immersive digital panel



The digital panel seamlessly integrates with the safe door, enhancing the safe's modern and clean aesthetics. Its discreet design is highly concealed and can be effortlessly activated with a gentle touch, combining visual appeal with security.

5000 Series

Smart safe box

SBX501C4B0/97

Specifications

Color scheme

Blue

Power supply

Battery life*: 6-12 months

Working voltage: 4.5 ~ 6 V

Battery for backup system: 4 pieces AA battery

Net weight of product

54.0 kg

Dimensions of product (LxWxH)

450.8x370x511.9 mm

Unlocking methods

Fingerprint: maximum 30 sets

PIN code: maximum 10 sets

Mechanical key

Indicator lights

Blue: normal working

Green: recognition succeeded

Red: recognition failed

