

# PHILIPS



Wireless speaker

Moving Sound

Striking sound. Retro looks

120W MAX (60W RMS)

Up to 24 hours play time

IP67 dustproof/waterproof



TAMS60Y

## The Roller

An icon is reborn. The Roller brings true stereo sound and seamless connectivity to its unmistakable 80s style. It's bold, it's loud, and it delivers the kind of deep, well-defined bass that hits hard and stays tight.

### **Moving Sound portable speaker. Live Loud.**

- An 80s icon, reinvented
- Deeper, cleaner bass and Moving Sound outdoor mode
- New-school acoustics. Active 2-way stereo system
- 120 W max (60 W RMS), 2 tweeters, 2 passive radiators

### **Built to stand out wherever you take it**

- Bluetooth® multipoint connectivity and USB audio
- Auracast™ for multi-speaker setups
- Built for the long play
- Made to move with IP67 dustproof/waterproof protection

### **Modern-retro flair. 100 years of Philips sound.**

- Clear color display with retro animations
- LED light rings dance to the music or set the mood
- Philips Entertainment app. Smart control for The Roller
- GRS-certified recycled plastic. Responsible packaging


## Moving Sound

Wireless speaker

TAMS60Y/00


# Highlights

### Striking sound. Retro looks

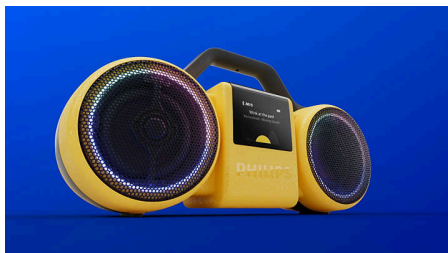

The Roller might look like it did in the mixtape era, but it's been reengineered to deliver 120 W max (60 W RMS) of power and bass that goes deeper than ever before. If you're outside, you can turn on Moving Sound to keep the bass strong and the sound clear in the open air.

### True stereo sound

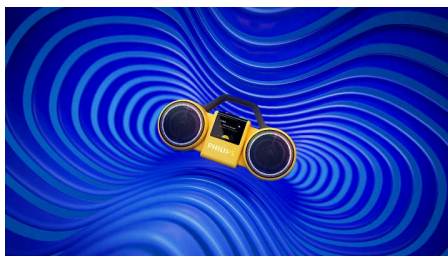

Dual 3.5" drivers, dedicated tweeters, and an active crossover all work together to separate the highs and lows with precision. Twin passive radiators deepen the bass. The result? True stereo sound with powerful depth and crisp, clean detail.

### Bluetooth® 6.0, USB-C audio



Bluetooth® 6.0 lets you stream without annoying dips in the sound, and you can connect The Roller to two devices at once. You can also plug an external device into the USB-C port and listen to music that way.

### Auracast™




If you're hosting a party or you just want even bigger sound, you can use Auracast™ to broadcast music from The Roller to as many compatible speakers as you like. The LC3 codec is supported for better sound, and setup is simple via our companion app.

### Swappable battery, power bank



The rechargeable lithium-ion battery gives you up to 24 hours of playtime and swaps out easily at the end of its lifespan. A quick 15-minute charge will get you up to 3.5 hours of tunes and a full recharge takes around 3 hours. If your phone's running low, you can plug it into The Roller's built-in power bank to keep those playlists coming.

### IP67 dustproof/waterproof

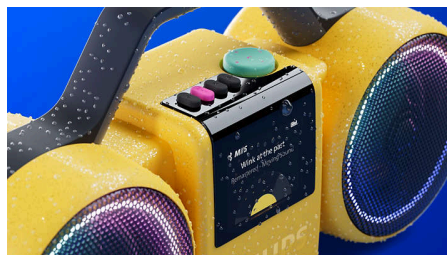

With an IP67 dustproof and waterproof rating, plus a built-in carry handle, The Roller is built to take the good times everywhere. Park lawns, pool decks, city streets, dusty dancefloors, simply set it down and turn it up.


### Animated color display

Even the display knows how to groove. Watch cassettes spin, vinyl turn, and equalizer bars bounce, or pick out a retro wallpaper. Essential controls and track info remain visible, and you change things up or adjust the display's brightness via a physical button or our companion app.

### LED light rings

Party in turquoise and pink, or let a soft white glow keep things mellow. Finely tuned LED light rings sync to the beat, and you can easily switch modes to match the vibe. Neon Stage, Crowd Pulse, Arcade Glitch, Bassline, the choice is yours.

### Philips Entertainment app

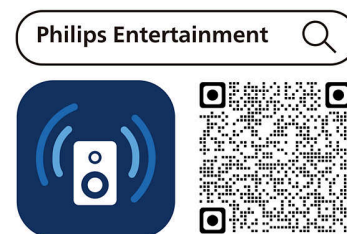

You can use our companion app to turn on Moving Sound for outdoor play, select animations or wallpaper for the color display, update firmware, and more. Plus, the app makes it simple to connect to other speakers via Auracast™.

### Recycled materials



We use post-consumer recycled plastics in our products, and our packaging is made from FSC-certified recycled cardboard with inserts printed on recycled paper.



## Specifications

### Sound

Output power (RMS): 60W  
Sound System: Stereo  
Sound enhancement: Bass+  
Frequency response: 50 Hz - 20 KHz  
Output power (MAX): 120W

### Loudspeakers

Driver configuration: 2-way  
Number of sound channels: 2  
Number of tweeters: 2  
Number of woofers: 2  
Passive radiators: 2  
Tweeter Impedance: 4 ohm  
Tweeter diameter: 1"  
Woofer diameter: 3.5"  
Woofer Impedance: 4 ohm

### Connectivity

Type of cable: USB charging cable (Type-C)  
USB: Type-C (charging), support audio playback via USB-C to A cable (not included)  
Bluetooth version: 6.0  
Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC  
Bluetooth range: Line of sight, 20m or 66ft  
DLNA Standard: No  
Multiple speaker connection  
Multiple speaker scenario: Broadcasting,

Receiving, Stereo

Multiple speaker technology: Auracast TX/RX, TWS

### Convenience

Automatic power off  
Ease of Installation: Automatic pairing  
Volume control: Up/ Down  
Water resistance: IP67  
Light Effect: Yes, 5 light modes  
Dustproof: IP67  
Display screen: IPS

### Compatibility

Smartphone/tablet APP control

### Power

Battery Capacity: 5200mAh, 7.3V  
Battery type: Li-ion (replaceable)  
Standby power consumption: <0.8W (display on)  
Operating time on battery: 24 hour(s)  
Charging time: 3 hour(s)  
Power bank

### Packaging dimensions

Height: 25 cm  
Packaging type: Box  
Type of shelf placement: Laying  
Width: 41.5 cm

Depth: 17 cm

Number of products included: 1

Gross weight: 3.07 kg

Nett weight: 2.362 kg

Tare weight: 0.708 kg

### Product dimensions

Height: 19.15 cm  
Width: 38 cm  
Depth: 11.85 cm  
Weight: 2.3 kg

### Accessories

Included accessories: Quick start guide, World Wide Warranty leaflet, Safety warranty sheet  
Cable: USB charging cable

### Design

Color: Yellow

### Sustainability

Plastic shell: contains 70% GRS-certified recycled post-consumer PC + ABS TE-00132492

