

# PHILIPS




Professional TV

24"

EasySuite

LED HD TV

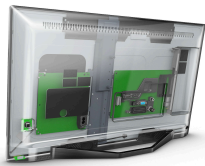

24HFL3014P

## Take control

Powered by CMND

Show more with a budget-friendly standalone professional TV. The intuitive CMND solution makes it simple to deploy and manage connected displays. Benefit from simple, fast installation and an on-screen welcome page that's easy to program.

### Cost-effective solution

- 3 years warranty, extendable to 5 years
- Multilingual customer support
- Low power consumption for long battery life
- Translucent backcover to uncover hidden materials

### Simple set up. **ADVANCED** performance

- Instant initial USB cloning. Rapidly configure Pro TVs
- MyChoice compatible. Built-in pay-to-view solution
- Mixed channel map to combine analogue and digital channels
- CMND and Control: effortless maintenance of your TVs
- Be seen. Brand the TV's UI with your logo

# Highlights

## **CMND&Control**

CMND and Control allows for remote configuration and installation of your TVs from a central location, without the need to visit any rooms. Update and manage all your displays, with minimal effort, all without having to disturb your guests.

## **Built-in pay-to-view solution**

Offer pay-to-view content in any situation-from a complete pay-to-access-all-channels model to selected premium content. MyChoice is an integrated solution that allows viewers to access pay-per-view channels via a code or a card.

## **UI branding**

Your Philips Professional TV offers a clear, easy-to-navigate user interface (UI), which you can customize with your own branding. Easily add your logo or custom background to the menu to increase the visibility of your brand.

## **Translucent backcover**

Translucent backcover will uncover hidden materials within the TV set. Ideally suited for installations within prisons and detention centers.

## **Instant initial USB cloning.**

Provides the ability to easily copy all programming and channel programming settings from one TV into other TV sets in less than a minute. The feature ensures uniformity between TV sets and significantly reduces installation time and costs.

# Specifications

## Picture/Display

**Diagonal screen size (inch):** 24 inch

**Diagonal screen size (metric):** 60 cm

**Display:** LED HD TV, E-LED

**Panel resolution:** 1366 x 768p

**Brightness:** 250 cd/m<sup>2</sup>

**Viewing angle:** 178° (H) / 178° (V)

## Tuner/Reception/Transmission

**Digital TV:** DVB-T/T2/C, HEVC FHD (up to 1080p60)

**Video Playback:** NTSC, PAL, SECAM

**Analog TV:** PAL, SECAM

## Features

**Ease of use:** Picture Style, Sound Style, Picture Format, Independent volume control

**Digital services:** 8d EPG, Now&Next, MHEG, Teletext, Subtitles

**Local control:** On/Off switch (side)

## Hospitality Features

**Hotel mode:** Menu lock, Installation Menu Lock, Volume limitation, Joystick Control Lock

**Prison mode:** high security mode, TXT/MHEG/USB/EPG/Subtitle Lock

**Timer:** Sleep Timer, Wake Up Alarm, Wake Up On Channel, Wake up Sounds

**Switch On control:** Channel, Feature, Picture Style, Picture Format, Sound Style, Volume, Menu language

**Anti-Theft:** Battery Anti-theft Protection, Kensington Lock

**Power control:** Green/fast startup

**Your brand:** Welcome Logo, Customizable Home Screen

**Clock:** Glow-in-the-Dark RC button, On-screen Clock

**Cloning and Firmware update:** Instant Initial Cloning, Via USB/RF

**CMND&Control:** Remote Management over RF, TV Group management, Off-Line Settings Editor, Off-Line Channel Editor

**Control:** Block Automatic Channel Update

**Revenue generation:** MyChoice

**Languages:** Guest language control

**Remote Control:** Cable Strap Ready, Low Battery Detection, RC Battery Door Lock, Glow-in-the-Dark Clock button

**Channels:** Combined List, Off-Line Channel Editor

## Healthcare features

**Control:** Multi-Remote Control, Healthcare RC compatible

**Convenience:** Headphone out, Independent main speaker mute, Headphone Detection

**Safety:** Double isolation class II, Flame retardant

## Multimedia

**Video playback supported:** Formats: H.264/MPEG4 AVC, MPEG1, MPEG2, MPEG4, WMV9/VC1, MP4, MPG, TS, WMV, HEVC, Containers: AVI, MKV

**Music formats supported:** MP3, AAC, WAV, WMA (v2 up to v9.2)

**Subtitle formats supported:** SRT, ASS, SMI, SSA, SUB, TXT

**Picture formats supported:** BMP, JPG, PNG, GIF  
**Supp. Video Resolution on USB:** up to 1920x1080p@60Hz

**Multimedia connections:** USB

## Audio

**Sound output Power:** 6 (2x3) W

**Speakers:** 2.0, Down Firing

**Sound Features:** AVL, Dynamic Bass, Incredible surround, Dolby MS10

# Specifications

## Power

Mains power: AC 220-240V; 50-60Hz

Ambient temperature: 0 °C to 40 °C

Standby power consumption: <0.3W

Energy Label Class: E

Eu Energy Label power: 17 W

Power Saving Features: Eco mode, Auto switch-off timer

EPREL registration number: 1069369

## Accessories

Included: Edge Stand, 2x AAA batteries, Power Cord, Warranty Leaflet, Legal and Safety brochure, Remote Control 22AV1903A/12

Optional: Easy RC 22AV1601B/12, Healthcare RC 22AV1604B/12, Setup RC 22AV9574A/12

## Connectivity Side

Common Interface Slot: CI+ 1.3.2

Headphone out: Mini-Jack

USB1: USB 2.0

## Connectivity Rear

Scart: CVBS, RGB

DVI audio in: Mini-Jack

Antenna: IEC-75

HDMI1: ARC, HDMI 1.4

Digital Audio out: Optical

VGA input: 15 pin D-sub

HDMI2: HDMI 1.4

## Connectivity Enhancements

EasyLink (HDMI CEC): One touch play, System Standby, RC pass through, system audio control

HDMI: ARC (HDMI1)

Scart: Power on scart

## Design

Colour: Black

Features: Translucent backcover

## Dimensions

Set Width: 560 mm

Set Height: 336 mm

Set Depth: 35/45 mm

Product weight: 3.1 kg

Set width (with stand): 560 mm

Set height (with stand): 336 mm

Set depth (with stand): 124 mm

Product weight (+stand): 3.2 kg

Wall mount compatible: M4, 75 x 75 mm

