

PHILIPS



Wireless speaker

Moving Sound

Striking sound. Retro looks

120 W MAX (60 W RMS)

Up to 24 hours of play time

IP67 dustproof/waterproof



TAMS60Y

The Roller

An icon is reborn. The Roller brings true stereo sound and seamless connectivity to its unmistakable 80s style. It's bold, it's loud and it delivers the kind of deep, well-defined bass that hits hard and stays tight.

Moving Sound portable speaker. Live Loud.

- An 80s icon, reinvented
- Deeper, cleaner bass and Moving Sound outdoor mode
- New-school acoustics. Active 2 way stereo system
- 120 W max (60 W RMS), 2 tweeters, 2 passive radiators

Built to stand out wherever you take it

- Bluetooth® multipoint connectivity and USB audio
- Auracast™ for multi-speaker setups
- Built for the long play
- Made to move with IP67 dustproof/waterproof protection

Modern-retro flair. 100 years of Philips sound.

- Clear colour display with retro animations
- LED light rings dance to the music or set the mood
- Philips Entertainment app. Smart control for The Roller
- GRS-certified recycled plastic. Responsible packaging


Moving Sound

Wireless speaker

TAMS60Y/00


Highlights

Striking sound. Retro looks

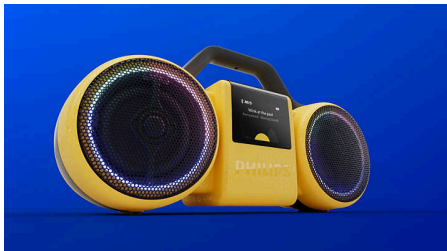


The Roller might look like it did in the mixtape era, but it's been reengineered to deliver 120 W max (60 W RMS) of power and bass that goes deeper than ever before. If you're outside, you can turn on Moving Sound to keep the bass strong and the sound clear in the open air.

True stereo sound

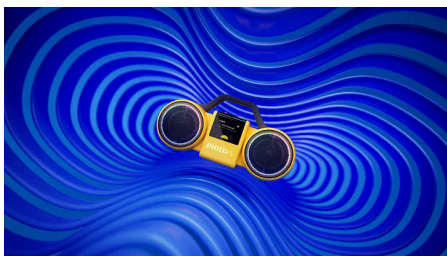

Dual 3.5" drivers, dedicated tweeters and an active crossover all work together to separate the highs and lows with precision. Twin passive radiators deepen the bass. The result? True stereo sound with powerful depth and crisp, clean detail.

Bluetooth® 6.0, USB-C audio

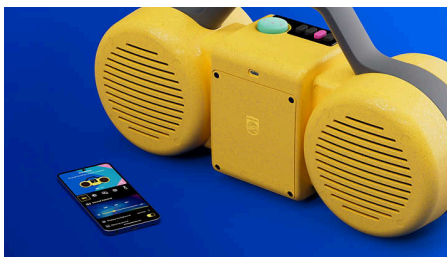

Bluetooth® 6.0 lets you stream without annoying dips in the sound, and you can connect The Roller to two devices at once. You can also plug an external device into the USB-C port and listen to music that way.

Auracast™




If you're hosting a party or you just want even bigger sound, you can use Auracast™ to broadcast music from The Roller to as many compatible speakers as you like. The LC3 codec is supported for better sound, and setup is simple via our companion app.

Swappable battery, power bank



The rechargeable lithium-ion battery gives you up to 24 hours of playtime and can be swapped out easily at the end of its lifespan. A quick 15 minute charge will get you up to 3.5 hours of tunes, and a full recharge takes around 4 hours. If your phone's running low, you can plug it into The Roller's built-in power bank to keep those playlists coming.

IP67 dustproof/waterproof

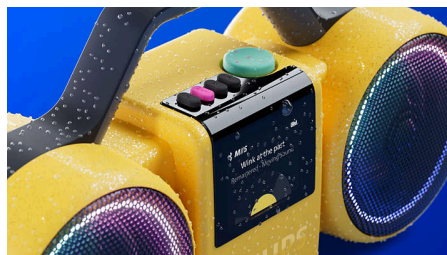

With an IP67 dustproof and waterproof rating, plus a built-in carry handle, The Roller is built to take the good times everywhere. Parks, pool decks, city streets, dusty dancefloors — simply set it down and turn it up.


Animated colour display

Even the display knows how to groove. Watch cassettes spin, vinyl turn and equalizer bars bounce, or pick out a retro wallpaper. Essential controls and track info remain visible, and you change things up or adjust the display's brightness via a physical button or our companion app.

LED light rings

Party in turquoise and pink, or let a soft white glow keep things mellow. Finely tuned LED light rings sync to the beat, and you can easily switch modes to match the vibe. Neon Stage, Crowd Pulse, Arcade Glitch, Bassline — the choice is yours.

Philips Entertainment app

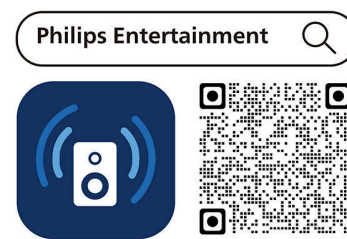

You can use our companion app to turn on Moving Sound for outdoor play, select animations or wallpaper for the colour display, update firmware and more. Plus, the app makes it simple to connect to other speakers via Auracast™.

Recycled materials



We use post-consumer recycled plastics in our products, and our packaging is made from FSC-certified recycled cardboard with inserts printed on recycled paper.

Moving Sound

Wireless speaker

TAMS60Y/00

Specifications

Sound

Output power (RMS): 60 W
Sound System: Stereo
Sound enhancement: Bass+
Frequency response: 50 Hz – 20 kHz
Output power (MAX): 120 W

Loudspeakers

Driver configuration: 2-way
Number of sound channels: 2
Number of tweeters: 2
Number of woofers: 2
Passive radiators: 2
Tweeter Impedance: 4 ohm
Tweeter diameter: 1"
Woofer diameter: 3.5"
Woofer Impedance: 4 ohm

Connectivity

Type of cable: USB charging cable (Type-C)
USB: Type-C (charging), support audio playback via USB-C to A cable (not included)
Bluetooth version: 6.0
Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC
Bluetooth range: Line of sight, 20 m or 66 ft
DLNA Standard: No
Multiple speaker connection
Multiple speaker scenario: Broadcasting,

Receiving, Stereo
Multiple speaker technology: Auracast TX/RX, TWS

Convenience

Automatic power off
Ease of Installation: Automatic pairing
Volume control: Up/Down
Water resistance: IP67
Light Effect: Yes, 5 light modes
Dustproof: IP67
Display screen: IPS

Compatibility

Smartphone/tablet APP control

Power

Battery Capacity: 5200 mAh, 7.3 V
Battery type: Li-ion (replaceable)
Standby power consumption: <0.8 W (display on)
Operating time on battery: 24 hour(s)
Charging time: 3 hour(s)
Power bank

Packaging dimensions

Height: 25 cm
Packaging type: Box
Type of shelf placement: Laying

Width: 41.5 cm
Depth: 17 cm
Number of products included: 1
Gross weight: 3.07 kg
Net weight: 2.362 kg
Tare weight: 0.708 kg

Product dimensions

Height: 19.15 cm
Width: 38 cm
Depth: 11.85 cm
Weight: 2.3 kg

Accessories

Included accessories: Quick start guide, World Wide Warranty leaflet, Safety warranty sheet
Cable: USB charging cable

Design

Colour: Yellow

Sustainability

Plastic shell: contains 70% GRS-certified recycled post-consumer PC + ABS TE-00132492

