

# PHILIPS



Wireless speaker

Moving Sound

Striking sound. Retro looks

280 W Max (140 W RMS)

Up to 24 hours of play time

IP67 dustproof/waterproof



TAMS80B

## The Tube

Bold shapes. Retro colours. Modern power. The Tube brings an 80s icon back to life with richer, wider stereo sound and seamless connectivity. From house jams to street parties, turn it up and let the music spread.

### **Moving Sound portable speaker. Live Loud.**

- An 80s icon, reinvented
- Wider soundstage and Moving Sound outdoor mode
- New-school acoustics. Active 2 way stereo system
- 280 W max (140 W RMS), 2 tweeters, 2 passive radiators

### **Built to stand out wherever you take it**

- Bluetooth® multipoint connectivity and USB audio
- Auracast™ for multi-speaker setups
- Built for the long play
- Made to move with IP67 dustproof/waterproof protection

### **Modern-retro flair. 100 years of Philips sound.**

- Clear colour display with retro animations
- LED light rings dance to the music or set the mood
- Philips Entertainment app. Smart control for The Tube
- GRS-certified recycled plastic. Responsible packaging

# Moving Sound

Wireless speaker


## Highlights

### Striking sound. Retro looks




Beneath The Tube's iconic form is a 2 way stereo system that delivers 280 W max (140 W RMS) of power and a wider, more immersive soundstage. If the party moves outside, you can turn on Moving Sound to give the bass more punch and keep the sound clear in the open air.

### True stereo sound

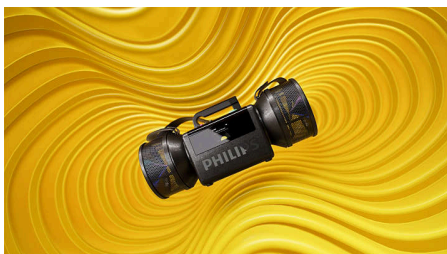

Dual 5" drivers, dedicated tweeters and an active crossover all work together to separate the highs and lows with precision. Twin passive radiators deepen the bass. The result? True stereo sound with powerful depth and crisp, clean detail.

### Bluetooth® 6.0, USB-C audio

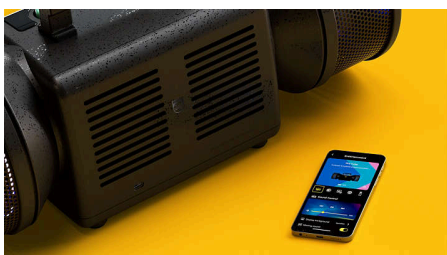

Bluetooth® 6.0 lets you stream without annoying dips in the sound, and you can connect The Tube to two devices at once. You can also plug an external device into the USB-C port and listen to music that way.

### Auracast™




If you're hosting a party or you just want even bigger sound, you can use Auracast™ to broadcast music from The Tube to as many compatible speakers as you like. The LC3 codec is supported for better sound, and setup is simple via our companion app.

### Swappable battery, power bank



The rechargeable lithium-ion battery gives you up to 24 hours of playtime and can be swapped out easily at the end of its lifespan. A quick 15 minute charge will get you up to 3.5 hours of tunes, and a full recharge takes around 3 hours. If your phone's running low, you can plug it into The Tube's built-in power bank to keep those playlists coming.

### IP67 dustproof/waterproof

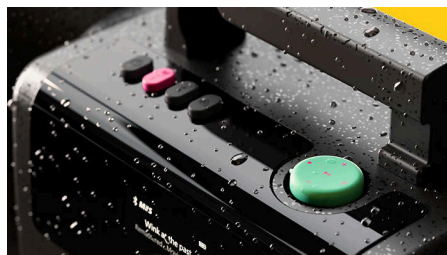

With an IP67 dustproof and waterproof rating, plus a built-in carry handle and removable shoulder strap, The Tube is built to get down

TAMS80B/00

anywhere. Grab the handle for that iconic 80s carry or sling it over your shoulder for hands-free swagger.


### Animated colour display

Even the display knows how to groove. Watch cassettes spin, vinyl turn and equalizer bars bounce, or pick out a retro wallpaper. Essential controls and track info remain visible, and you change things up or adjust the display's brightness via a physical button or our companion app.

### LED light rings

Party in turquoise and pink, or let a soft white glow keep things mellow. Finely tuned LED light rings sync to the beat, and you can easily switch modes to match the vibe. Neon Stage, Crowd Pulse, Arcade Glitch, Bassline — the choice is yours.

### Philips Entertainment app

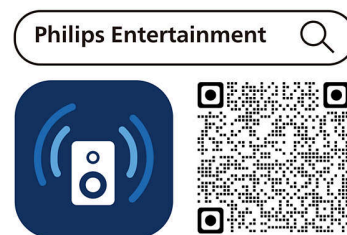

You can use our companion app to turn on Moving Sound for outdoor play, select animations or wallpaper for the colour display, update firmware and more. Plus, the app makes it simple to connect to other speakers via Auracast™.

### Recycled materials



We use post-consumer recycled plastics in our products, and our packaging is made from FSC-certified recycled cardboard with inserts printed on recycled paper.

# Moving Sound

Wireless speaker

TAMS80B/00

## Specifications

### Sound

Output power (RMS): 140 W  
Sound System: Stereo  
Sound enhancement: Bass+  
Frequency response: 50 Hz – 20 kHz  
Output power (MAX): 280 W

### Loudspeakers

Driver configuration: 2-way  
Number of sound channels: 2  
Number of tweeters: 2  
Number of woofers: 2  
Passive radiators: 2  
Tweeter Impedance: 8 ohm  
Tweeter diameter: 20 mm  
Woofer diameter: 5.25"  
Woofer Impedance: 4 ohm

### Connectivity

Type of cable: USB charging cable (Type-C)  
USB: Type-C (charging), support audio playback via USB-C to A cable (not included)  
Bluetooth version: 6.0  
Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC  
Bluetooth range: Line of sight, 30 m or 100 ft  
DLNA Standard: No  
Multiple speaker connection  
Multiple speaker scenario: Broadcasting,

Receiving, Stereo  
Multiple speaker technology: Auracast TX/RX, TWS

### Convenience

Automatic power off  
Ease of Installation: Automatic pairing  
Volume control: Up/Down  
Water resistance: IP67  
Light Effect: Yes, 5 light modes  
Dustproof: IP67  
Display screen: TFT

### Compatibility

Smartphone/tablet APP control

### Power

Battery Capacity: 10,000 mAh, 7.4 V  
Battery type: Li-ion (replaceable)  
Standby power consumption: <0.8 W (display on)  
Operating time on battery: 24 hour(s)  
Charging time: 3 hour(s)  
Power bank

### Packaging dimensions

Height: 31.5 cm  
Packaging type: Box  
Type of shelf placement: Laying

Width: 60 cm  
Depth: 26 cm  
Number of products included: 1  
Gross weight: 9.2 kg  
Net weight: 6.8 kg  
Tare weight: 2.4 kg

### Product dimensions

Height: 23.25 cm  
Width: 53.9 cm  
Depth: 20.05 cm  
Weight: 6.8 kg

### Accessories

Included accessories: Quick start guide, World Wide Warranty leaflet, Safety warranty sheet, carrying strap  
Cable: USB charging cable

### Design

Colour: Black

### Sustainability

Plastic shell: contains 69% GRS-certified recycled post-consumer (ABS 6%, PC-ABS 55%, PC 8%) TE-00132492

