

PHILIPS

Split Air Conditioner

Ab1 wall-mounted AC


Golden Fin

Smart Core Self-clean

Auto Restart with Memory

Turbo Cooling

FAC05AB1FID

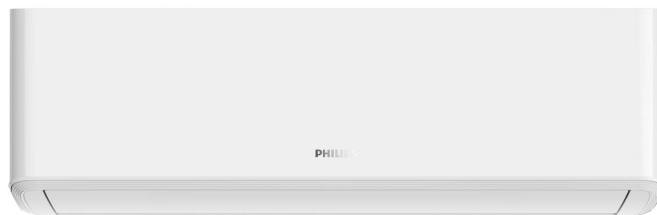

Ab1 wall-mounted AC

Non-inverter, cooling

Smart

- Filter Dirty Alarm

Efficient

- Golden Fin
- Turbo Cooling

Quiet

- Sleep Mode
- DN Multi-Dimensional Noise Reduction System

Clean

- Smart Core Self-clean

Caring

- Auto Restart with Memory
- LED Backlight Display

Ab1 wall-mounted AC

Split Air Conditioner

FAC05AB1FID/70

Highlights

Golden Fin

The golden hydrophilic fins have high heat exchange efficiency and certain corrosion resistance. And it can make the condensate water flow away quickly to reduce the adhesion of dust and avoid bacteria breeding.

Smart Core Self-clean

Automatically captures moisture from the air to deeply clean the evaporator. This not only delivers cleaner airflow but also ensures long-lasting, powerful operation of the core.

Auto Restart with Memory

Automatically restores previous settings (mode, temperature, fan speed, and swing) after a power outage—no need to reset manually.

Turbo Cooling

Delivers powerful cooling in as fast as 30 seconds, quickly creating a comfortable environment.

Sleep Mode

Automatically adjusts cooling based on ambient temperature and body temperature for a quieter, more restful night's sleep.

DN Multi-Dimensional Noise Reduction System

Optimized air duct design, advanced refrigerant flow, and structural engineering minimize noise for whisper-quiet operation.

LED Backlight Display

Easy-to-read LED display for clear visibility, even at night.

Filter Dirty Alarm

Smart reminder after 1,000 hours of operation alerts you to clean the filter, ensuring optimal performance and healthier airflow.

Specifications

Classification

Air conditioning: Split air conditioning

Country of Origin

Country of origin: China

Sustainable

Refrigerant: R32

Charged Volume(g): 320

Technical Specification

Voltage: 220 V

Frequency: 50/60Hz

Phase: 1

Cooling T1

Capacity(W): 1524

Capacity(Btu): 5200

Power Input(W): 385

Running Current(A): 2.45

Indoor Unit

Sound Levels(S/H/M/L/SL)(dB(A)): 37

Air Circulation(S/H/M/L/SL)(m³/h): 470

Net Dimension(WxHxD)(mm): 698x255x190

Package Dimension(WxHxD)(mm):

763x322x281

Net/Gross Weight(kg): 7.5/9.5

Outdoor Unit

Sound Levels(H)(dB(A)): 49

Net Dimension(WxHxD)(mm): 735X465X291

Package Dimension(WxHxD)(mm):

772x520x329

Net/Gross Weight(kg): 19/21

Piping Connection

Liquid(mm(inch)): ϕ 6.35(1/4)

Gas(mm(inch)): ϕ 9.52(3/8)

