

PHILIPS

LCD monitor

Business Monitor

S Line

24 (23.8" / 60.5 cm diag.)

1920 x 1080 (Full HD)

242S9JML



Reliable and essential

for daily efficiency

Our S Line monitor delivers business efficiency. Features like Flicker-free and LowBlue mode make work easy-on-the-eyes and increase your productivity.

Perfectly designed for your space

- SmartErgoBase enables people-friendly ergonomic adjustments
- Built-in stereo speakers for multimedia

Features for the way you work

- DisplayPort connection for maximum visuals
- HDMI ensures universal digital connectivity
- USB 3.2 high speed data transfer

Great performance


- VA display delivers awesome images with wide viewing angles
- SmartImage presets for easy optimized image settings
- 16:9 Full HD display for crisp detailed images

Designed for comfortable productivity

- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity

Highlights

VA display

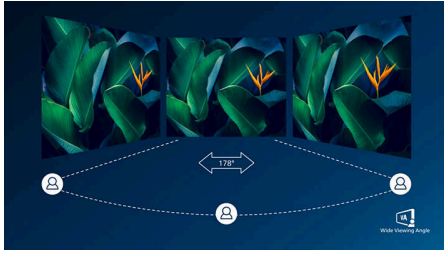

Philips VA LED display uses an advanced multi-domain vertical alignment technology which gives you super-high static contrast ratios for extra vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web-browsing, movies, gaming, and demanding graphical applications. It's optimized pixel management technology gives you 178/178 degree extra wide viewing angle, resulting in crisp images.

16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

SmartImage



SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display


performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

LowBlue Mode

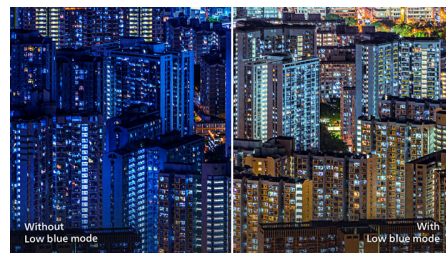


Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

SmartErgoBase

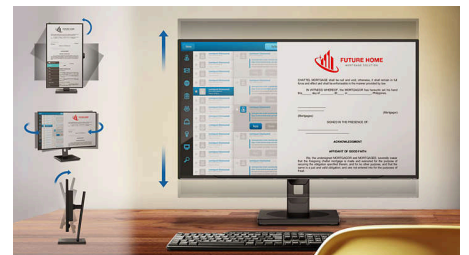

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height adjustable stand guarantees the optimal viewing level, reducing the physical strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.



Highlights

HDMI Ready




An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

DisplayPort connection



DisplayPort is a digital link from PC to Monitor without any conversion. With higher capabilities than DVI standard, it is fully capable to support up to 15meter cables and 10.8 Gbps/sec data transfer. With this high performance and zero latency, you get the fastest imaging and refresh rates - making DisplayPort the best choice for not only general office or home use, but also for the demanding gaming and movies, video editing and more. It also keeps interoperability in mind via use of various adapters.

EasyRead mode

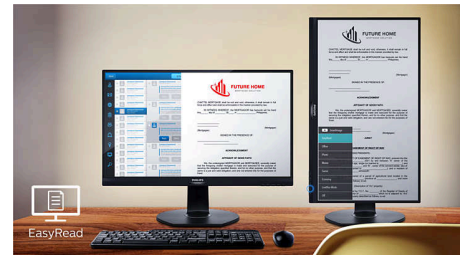

Experience improved comfort and readability when reading long, text-heavy documents. EasyRead Mode creates a paper-like viewing experience that's gentler on your eyes by adjusting your display's colors and zoom levels which simulate the feeling of reading on real paper—right on your digital display.

Specifications

Picture/Display

Panel Size: 23.8 inch / 60.5 cm
Aspect ratio: 16:9
LCD panel type: VA LCD
Backlight type: W-LED system
Pixel pitch: 0.2745 x 0.2745 mm
Brightness: 300 cd/m²
Display colors: 16.7 M (8 bit)
Color gamut (typical): NTSC 80%*; sRGB 99%*
Contrast ratio (typical): 3000:1
SmartContrast: 50,000,000:1
Response time (typical): 4 ms (Gray to Gray)*
Viewing angle: 178° (H) / 178° (V), @ C/R > 10
Picture enhancement: SmartImage
Maximum resolution: 1920 x 1080 @ 75 Hz*
Effective viewing area: 527.04 (H) x 296.46 (V)
Scanning Frequency: 30 - 85 kHz (H) / 48 - 75 Hz (V)
sRGB
Flicker-free
Pixel Density: 93 PPI
LowBlue Mode
Display Screen Coating: Anti-Glare, 3H, Haze 25%
EasyRead
Adaptive sync (VRR)

Connectivity

Signal Input: VGA (Analog) x 1, DVI-D x 1, HDMI 1.4 x 1, DisplayPort 1.2 x 1
Sync Input: Separate Sync, Sync on Green
Audio (In/Out): PC audio-in, Audio out
HDCP: HDCP 1.4 (HDMI / DisplayPort)
USB Hub: USB 3.2 Gen 1 / 5 Gbps, USB-B upstream x 1, USB-A downstream x 4 (with 1 for fast charge B.C 1.2)

Convenience

Built-in Speakers: 2 W x 2
Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11 / 10 / 8.1 / 8 / 7
User convenience: SmartImage/Back, Brightness/UP, Input/Down, Menu/OK, Power On/Off
OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian

Other convenience: Kensington lock, VESA mount (100x100mm)
Control software: SmartControl

Stand

Height adjustment: 130 mm
Pivot: -/+ 90 degree
Swivel: -/+ 180 degree
Tilt: -5/25 degree

Power

ECO mode: 12.0 W (typ.)
Power supply: Built-in, 100-240VAC, 50-60Hz
Off mode: 0.3 W (typ.)
On mode: 15.0 W (typ.) (EnergyStar test method)
Standby mode: 0.4 W (typ.)
Power LED indicator: Operation - White, Standby mode - White (blinking)
Energy Label Class: D

Dimensions

Packaging in mm (WxHxD): 730 x 420 x 139 mm
Product without stand (mm): 539 x 324 x 55 mm
Product with stand(max height): 539 x 484 x 205 mm

Weight

Product with packaging (kg): 7.15 kg
Product with stand (kg): 4.85 kg
Product without stand (kg): 3.09 kg

Operating conditions

Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
Temperature range (operation): 0°C to 40 °C
MTBF: 70,000 (Excluded backlight) hour(s)
Relative humidity: 20%-80 %
Temperature range (storage): -20°C to 60 °C

Sustainability

Environmental and energy: EnergyStar 8.0, EPEAT*, TCO Certified Edge, RoHS
Post consumer recycled plastic: 85%
Recyclable packaging material: 100 %
Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

Regulatory Approvals: CB, CE Mark, CU-EAC, EAEU RoHS, FCC Class B, ICES-003, SEMKO, TUV Ergo, TUV/GS

Cabinet

Finish: Textured
Foot: Black
Front bezel: Black
Rear cover: Black

What's in the box?

Cables: HDMI cable, DisplayPort cable, Power cable
Monitor with stand
User Documentation



* The maximum resolution works for either HDMI input or DP input.

* Response time value equal to SmartResponse

* NTSC Area based on CIE1976

* sRGB Area based on CIE1931

* EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.

* The monitor may look different from feature images.

* The cable(s) supplied with the product may vary in type, quantity, and specifications in line with country- or region-specific requirements.