

PHILIPS

EVNIA



QD OLED gaming
monitor

QHD Gaming monitor

Evnia 6000

26.5" (67.32cm)

2560 x 1440 (Quad HD)



27M2N6550PF

Your gaming experience to the utmost

This monitor is built for gaming at high speeds. Its 280Hz refresh rates, OLED panel, and DisplayHDR TrueBlack 500 certification make it a combination of incredible speed and premium picture quality.

Features designed for gamers needs

- Stark ShadowBoost: for enhancing visibility in dark scenes
- Smart Sniper: Improved control when you zoom in on targets
- Evnia Precision Center: Maximize Your Gaming Experience
- SmartImage game mode optimized for gamers
- SoftBlue Technology: for comfortable viewing
- Smart Crosshair: for better aim and more fun

Built for fast action

- 280Hz trail-blazing refresh rate for smoothest gameplay

Immersive visuals

- DisplayHDR™ TrueBlack 500 delivers incredible shadow details
- Crystalclear images with Quad HD 2560 x 1440 pixels
- True 10-bit display reproduces smoother gradients on visuals


QHD Gaming monitor

QD OLED gaming monitor

27M2N6550PF/75


Highlights

Accelerated 280Hz refresh rate

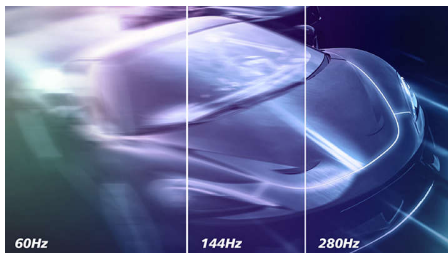

Philips Evnia 280 Hz display takes your gaming experience to new dimensions. The low input lag coupled with variable refresh rate technology gives you an Immersive gaming advantage. Plus, our wide view angle panel with high resolution provides a realistic gaming experience with unsurpassed color accuracy. Focus on what matters as adjustable stand gives the comfort you deserve and flicker-free gives an easy viewing, so you continue gaming without health worries.

Crystalclear images

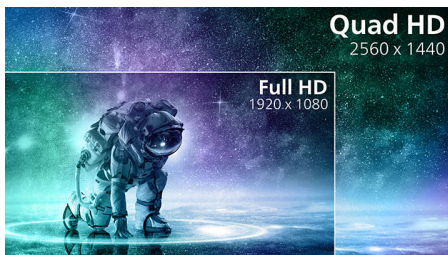


These Philips screens deliver Crystalclear, Quad HD 2560x1440 pixel images. Utilizing high performance panels with high density pixel count, enabled by high bandwidth sources, these new displays will make your images and graphics come alive. Whether you are demanding professional requiring extremely detailed information for CAD-CAM solutions, using 3D graphic applications or a financial wizard working on huge spreadsheets, Philips displays will give you Crystalclear images.

DisplayHDR™ True Black 500




This Philips monitor is certified with VESA DisplayHDR™ True Black 500. Delivering stunningly accurate shadow detail with deeper blacks for a remarkable visual experience compared with conventional monitors of the same peak luminance. This Philips monitor comes with several HDR modes, each optimized for your usage scenarios: HDR Game, HDR Movie, HDR Photo, and VESA DisplayHDR certified level.

True 10-bit color depth

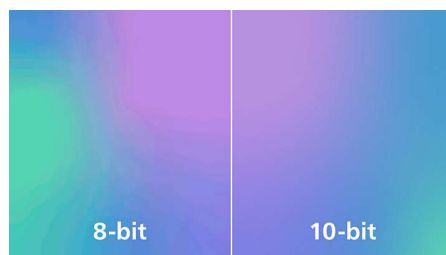

With this Philips true 10-bit color display, you can see color critical professional work of exceptional color accuracy and meeting professional standards. Compared with conventional 8-bit color display, this Philips monitor produces a more natural transition between hues for smoother gradients.

SoftBlue Technology

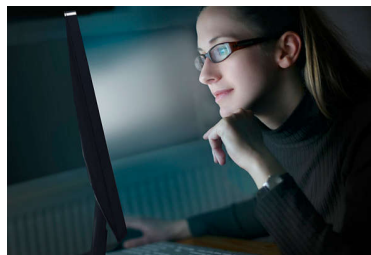

SoftBlue LED technology, combined with the monitor's low blue light panel, is an effective solution to reducing the adverse health effects


caused by high exposure to blue light. In this monitor's panel, the ratio of light is reduced by nearly 50 percent while the SoftBlue LED technology works simultaneously by reducing harmful blue light rays emitted from the screen.

SmartImage Game mode



The new Philips gaming display has quick access OSD fine tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts display with fastest response time, high color, along with image adjustments. "RTS" mode (Real time strategy) has a special SmartFrame mode which enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customized settings based on different games, ensuring best performance.

Smart Crosshair

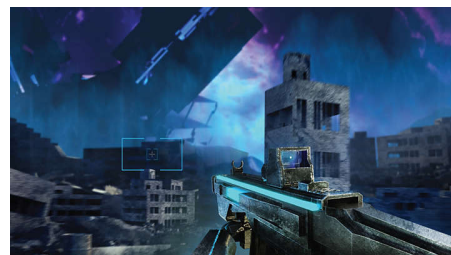

Color of Crosshair is set by default. When Smart Crosshair is on, the color will change as complementary color to the background color. Smart Crosshair enhances the accuracy of aiming so you can spot the enemies more easily.




QHD Gaming monitor

QD OLED gaming monitor

27M2N6550PF/75

Highlights

Stark ShadowBoost

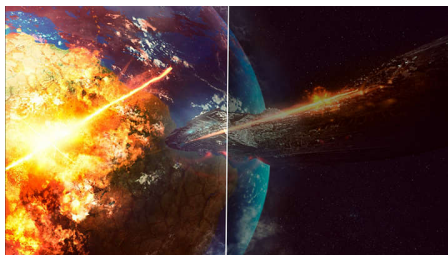


This feature enhances dark scenes without overexposing lightened areas. The Stark Shadowboost feature has three selectable levels that offer texturized images with better color saturation with higher contrast so you can see better in both light and dark environments. In addition, this feature helps you fine-tune your sight so that enemies get exposed more quickly when gaming.

Smart Sniper



Smart Sniper gives you better control over your scope for precise aiming. It overlays an additional window at either the top or center of your screen, and enables you to select a zoom level up to 2.0x your normal magnification.

Evnia Precision Center

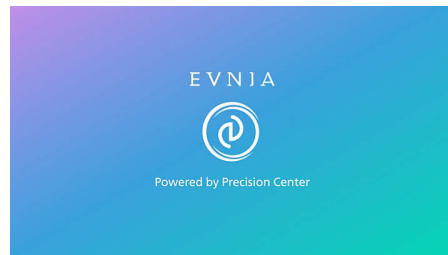

Evnia Precision Center is an easy-to-use software designed to optimize and personalize your Evnia monitor. Whether you're a casual or competitive gamer, it offers a wide range of customization options to match your unique gaming style. With intuitive controls and seamless navigation, Evnia Precision Center gives you full control, providing everything you need to elevate your gaming to the next level—right at your fingertips.

Specifications

Picture/Display

Panel Size: 26.5"/67.32cm
 Aspect ratio: 16:9
 Monitor Panel Type: W-OLED
 Pixel pitch: 0.2292 x 0.2292 mm
 Brightness: Normal: 335nit, Peak: 555nit, HDR 10%: 600nit, HDR 1.5%: 1500 nit
 Display colors: 1.07B (10bits)
 Color gamut (typical): Adobe RGB 95.4%; DCI-P3: 99.4%, sRGB: 151.3%, NTSC 128.9% *
 Contrast ratio (typical): 1.5M:1
 SmartContrast: Mega Infinity DCR
 Response time (typical): 0.03ms (Gray to Gray)*
 Viewing angle: 178° (H) / 178° (V), @ C/R > 10000
 Picture enhancement: SmartImage game
 Maximum resolution: 2560x1440 @ 280 Hz (DP), 2560x1440 @ 144Hz (HDMI) *
 Effective viewing area: 586.75(H)x330.05(V)mm
 Scanning Frequency: HDMI: 30k-230kHz(H)/ 48-144Hz(V) , DP: 30k-450kHz(H)/ 48-280Hz(V)
 sRGB
 Delta E: < 1 (sRGB)
 Flicker-free
 Pixel Density: 110.84 PPI
 Display Screen Coating: Anti-reflection, 2H
 Low Input Lag
 EasyRead
 Adaptive sync (VRR)
 HDR: HDR True Black 500
 Pixel format: RWBG Strip arrangement
 Smart Crosshair
 Stark ShadowBoost
 Smart Sniper

Clear MR Tier: 15000
 Shadow Boost
 SoftBlue technology: Yes*

Connectivity

Signal Input: HDMI 2.0 x 1, DisplayPort 1.4 x 1
 Audio (In/Out): Headphone out
 HDCP: HDCP 1.4 (HDMI / DisplayPort), HDCP 2.2 (HDMI / DisplayPort)

Convenience

Plug & Play Compatibility: DDC/CI, Mac OS, sRGB, Windows 11 / 10
 User convenience: Power On/Off, Menu/OK, Input/Up, Game Settings/Down, SmartImage game/Back
 OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian
 Other convenience: Kensington lock, VESA mount (100x100mm), LowBlue Mode
 MultiView

Stand

Tilt: -5/20 degree

Power

Power supply: Internal, 100-240VAC, 50-60Hz
 Off mode: 0.3 W (typ.)
 On mode: 82.9 W (typ.)
 Standby mode: 0.5 W (typ.)
 Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

Packaging in mm (WxHxD): 780 x 455 x 139 mm
 Product without stand (mm): 605 x 351 x 57 mm
 Product with stand(max height): 605 x 458 x 216 mm

Weight

Product with packaging (kg): 7.77 kg
 Product with stand (kg): 4.98 kg
 Product without stand (kg): 4.43 kg

Operating conditions

Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
 Temperature range (operation): 0°C to 40 °C
 MTBF: 30,000 (Excluded backlight) hour(s)
 Relative humidity: 20%-80 %
 Temperature range (storage): -20°C to 60 °C

Sustainability

Environmental and energy: RoHS
 Recyclable packaging material: 100 %
 Post consumer recycled plastics: 85%*

Compliance and standards

Regulatory Approvals: CB, CE Mark, CEL, CCC, CEC, BSMI, UKCA, EMF, FCC, ICES-003

Cabinet

Color: Dark Slate
 Finish: Textured



* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
 * Low blue light compliance: The ratio of display emission light in the range from 415 - 455 nm to the display emission of 400 - 500 nm shall be less than 50%.
 * Adobe RGB and DCI-P3 Coverage based on CIE1976, sRGB Area based on CIE1931, NTSC Area based on CIE1976.
 * Response time value equal to SmartResponse. The measurement pattern is 1 horizontal line.
 * The max resolution of QHD 144Hz is supported by 8 bits
 * Active pixels: 2560(H) x 1440(V) Number of total pixels: 2576(H) x 1456(V); extra pixels on each side, space reserved for pixel orbiting.
 * This monitor strives for sustainability: the stand's feet and headphone holder are made with 35% recycled plastic and monitor's chassis is made up of 85% post-consumer recycled plastic.
 * The monitor may look different from feature images.
 * The products and accessories listed on this leaflet may differ by country and region.