

PHILIPS



True wireless
headphones

Moving Sound

Striking sound. Retro looks

Smart charging case

Adaptive Noise Cancelling

Up to 42 hours of play time



TAMS3YL

The Buds

The colours pop. The music hits. With their bold look and easy-going attitude, The Buds keep the good times flowing with warm, detailed sound and a round smart-charging case that slips into your pocket. Your day, your playlists, your pace.

Moving Sound true wireless earbuds. Live Loud.

- Striking sound. Bold hues. Comfy fit
- Get in the zone with Adaptive Noise Cancelling
- Keep flowing with the round smart charging case
- Custom-tuned 10 mm drivers. SecureFit textured ear tips

Built to go where the music leads

- Vibe longer with up to 42 hours of play time
- Stay in sync with Bluetooth® multipoint and Auracast™
- Ready for warm days and dusty detours
- Clearer calls, even in crowded places
- IP54 dust and water resistance. 6 mic technology

Modern-retro flair. 100 years of Philips sound.

- Philips Headphones app. The Buds companion
- Warm, detailed, natural. Philips sound signature
- GRS-certified recycled plastic. Responsible packaging


Moving Sound

True wireless headphones

TAMS3YL/00


Highlights

Adaptive Noise Cancelling

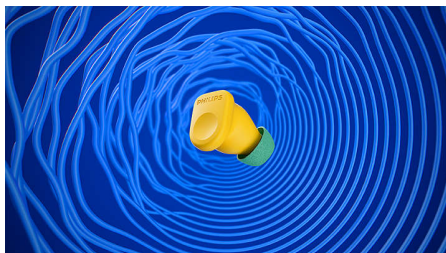


Adaptive noise cancellation quickly reacts to your surroundings to suppress external noise, including wind, in real time. If you want to hear what's going on around you, Awareness Mode lets outside sounds back in. Quick Awareness enhances voices, so you can have a conversation without removing your headphones.

Smart charging case

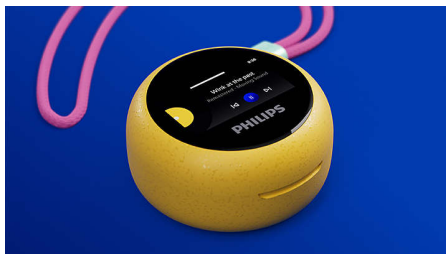

More than a charger, this smart case lets you control calls, playback, noise cancelling and Auracast™, or switch on the Lo-Fi sound mode. It can even help you take photos by remotely triggering the camera on your connected device. Selectable vinyl, tape and amplifier animations let you change the look of the case's 1.47" colour touchscreen.


42 hrs of play time (10 + 32)

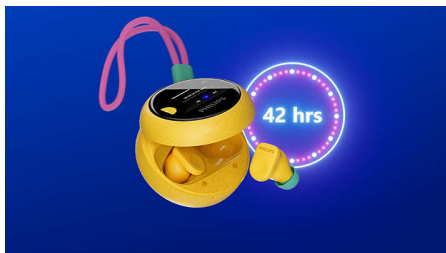

With noise cancelling off, you get 10 hours play time from a full charge and an extra 32 hours from the smart charging case (with noise cancelling on, you get 7 hours and an extra 23

from the case). For a quick boost, 15 minutes gives you an extra 3 hours. The case can be charged via USB-C.

Bluetooth® 6.0, Auracast™

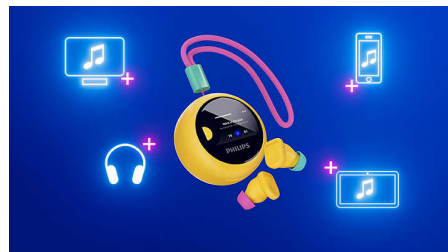


Bluetooth® 6.0 ensures a fast, steady connection and support for Auracast™ lets you listen to public broadcasts on your travels. You can connect to two Bluetooth® devices at once and manage connected devices via our app. Google Fast Pair and Microsoft Swift Pair are supported too.

IP54 dust/water resistant



A little dust, sweat or drizzle won't kill the vibe. With IP54 dust and water resistance, The Buds are built to keep the good times going wherever the day takes you.

6 mic technology

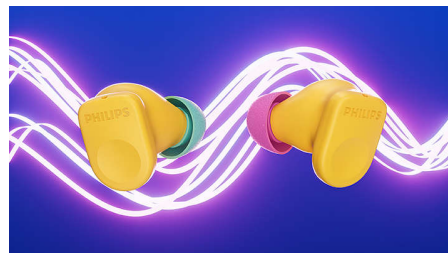

The Buds boast a six-mic setup, and three of those mics plus an AI noise-reduction algorithm combine to bring you super-clear calls. Even if you're in a busy cafe, your voice will come

through clearly and the person you're speaking to won't be distracted by what's going on around you.

Philips Headphones app



Feel like your music's missing something? The intuitive AI Neural EQ in our companion app lets you fine-tune sound with your fingertips. You can also switch on Lo-Fi sound or Spatial Audio modes, and use the app to control noise cancellation, customise your charging case with animations or wallpaper, and more.

Recycled materials



We use post-consumer recycled plastics in our products, and our packaging is made from FSC-certified recycled cardboard with inserts printed on recycled paper.

Striking sound. Bold hues

The colours say 80s. The sound says right now. The fit says be free. With their custom-tuned drivers and SecureFit textured ear tips, these buds deliver richly detailed audio while rocking an oh-so-light and comfy fit.

Philips sound signature

The custom drivers in these headphones are tuned to Philips sound signature, which brings you warm, detailed sound with rich bass. Whatever you're listening to, you'll love what you hear.

Specifications

Sound

Frequency range: 20 - 20,000 Hz
Speaker diameter: 10 mm
Impedance: 32 Ohm
Maximum power input: 5 mW
Sensitivity: 106 dB (1 kHz, 179 mV)
Driver type: Dynamic

Connectivity

Bluetooth version: 6.0
Bluetooth profiles: A2DP, AVRCP, HFP
Maximum range: Up to 10 m
Multipoint connection
Supported codec: SBC, LC3

Outer Carton

Length: 27.50 cm
Number of consumer packages: 24 pcs
Width: 23.00 cm
Gross weight: 3.5 kg
Height: 25.00 cm
GTIN: 1 48 95229 17980 3
Net weight: 1.98 kg
Tare weight: 1.52 kg

Convenience

Volume control
Water resistance: IP54
Philips Headphones app support
Mono mode for TWS
Firmware updates possible
Type of controls: Touch
Google Fast Pair
Microsoft Swift Pair

Inner Carton

Length: 12.80 cm
Number of consumer packages: 3 pcs
Width: 10.50 cm
Height: 11.00 cm
Net weight: 0.25 kg
Gross weight: 0.387 kg
Tare weight: 0.137 kg
GTIN: 2 48 95229 17980 0

Power

Number of batteries: 3 pcs
Charging time: 2 hour(s)
Music play time (ANC on): 7 + 23 hour(s)
Music play time (ANC off): 10 + 32 hour(s)
Fast charging time: 15 mins for 3 hrs

Battery type (Charging case): Lithium Polymer (built-in)
Battery type (Earbud): Lithium Polymer (built-in)
Battery weight (Total): 13.47 g
Battery capacity (Case): 600 mAh
Battery capacity (Earbud): 60 mAh

Packaging dimensions

Height: 12.1 cm
Packaging type: Carton
Type of shelf placement: Hanging
Width: 9.6 cm
Depth: 3.7 cm
Number of products included: 1
EAN: 48 95229 17980 6
Gross weight: 0.107 kg
Net weight: 0.082 kg
Tare weight: 0.025 kg

Accessories

Others: 1 pcs lanyard
Quick Start Guide
Eartips: 6 pairs (2 pairs each in S/M/L)
Charging case

Design

Colour: Yellow
Wearing style: In-ear
Ear coupling material: Silicone
Ear fitting: In-ear
In-ear fitting type: Silicone ear tip

Telecommunication

Microphone for call: 3 mics on each side

Dimensions

Charging case dimension (W x D x H): 6.00 x 6.00 x 3.05 cm
Earbud dimension (W x D x H): 1.96 x 2.06 x 2.37 cm
Total weight: 0.061 kg

UPC

UPC: 8 40063 20848 3

ANC features

ANC technology: Hybrid
Awareness mode
Adaptive ANC
Microphone for ANC: 4 mic
ANC (Active Noise Cancelling)

Voice assistant

Voice assistant compatible: Apple Siri, Google Assistant
Voice assistant activation: Multi-Function touch
Voice assistant support

Sustainability

Plastic shell: contains 52% GRS certified recycled post-consumer Polycarbonate TE-00132492

