

# PHILIPS

Super automatic  
espresso machine

5000 series


EP5934, EP5930, EP5346  
EP5345, EP5340, EP5335  
EP5334, EP5333, EP5331  
EP5330, EP5045, EP5040  
EP5035, EP5034, EP5030

EN USER MANUAL  
DA BRUGERVEJLEDNING  
DE BENUTZERHANDBUCH  
ES MANUAL DEL USUARIO  
FR MODE D'EMPLOI  
IT MANUALE UTENTE  
NL GEBRUIKSAANWIJZING  
NO BRUKERHÅNDBOK  
PT MANUAL DO UTILIZADOR  
FI KÄYTTÖOPAS  
SV ANVÄNDARHANDBOK  
EL ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ




[www.philips.com/coffee-care](http://www.philips.com/coffee-care)



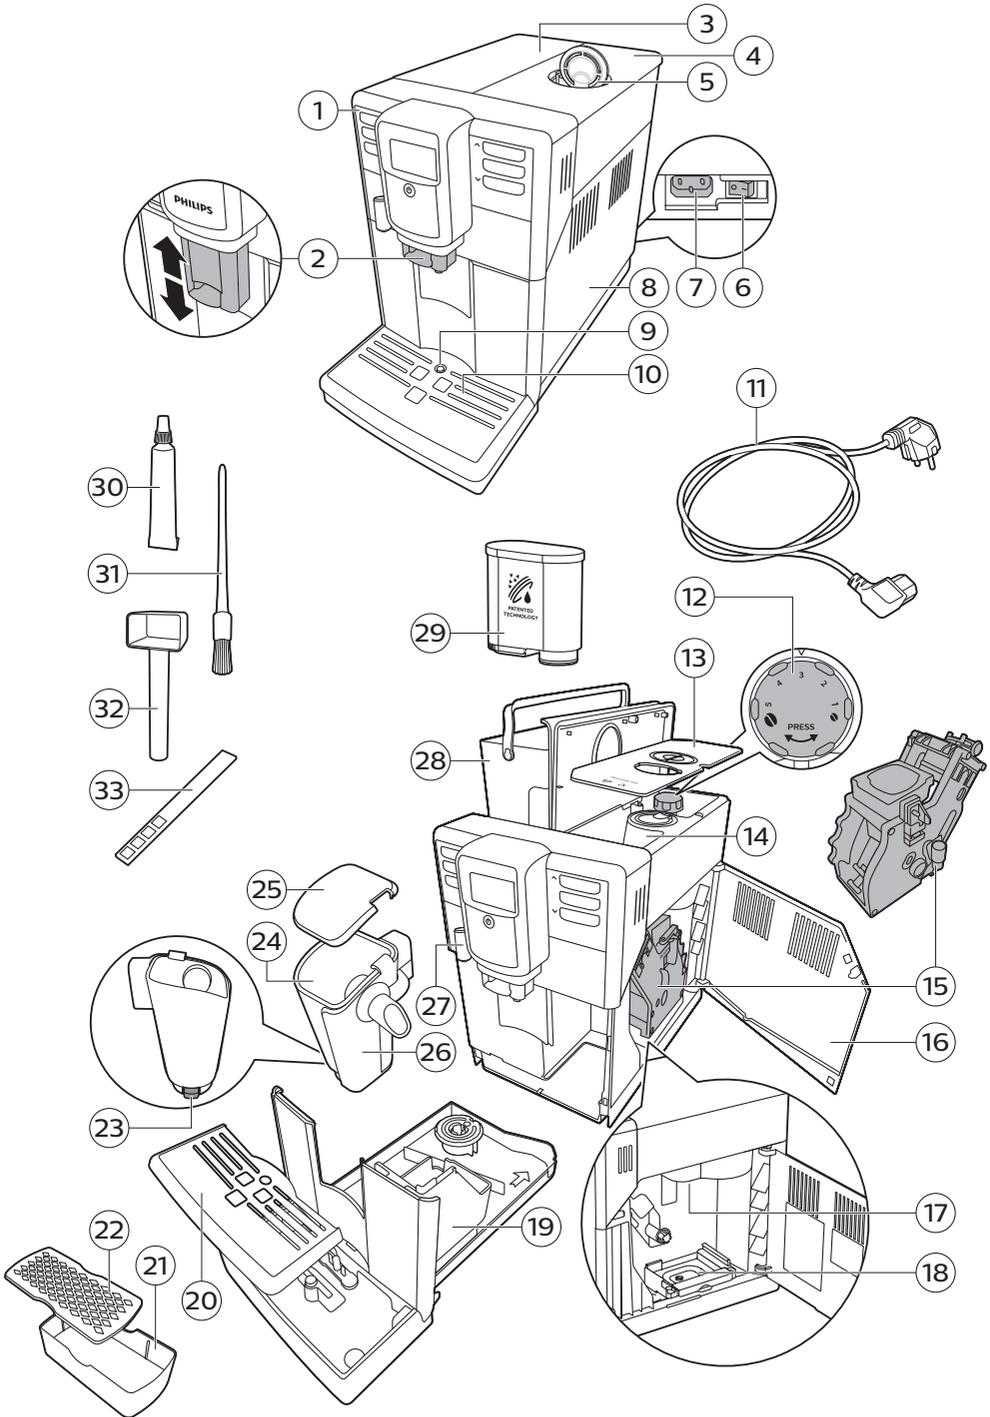


2

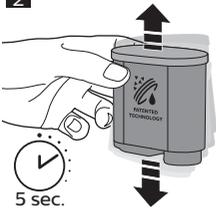

3



4

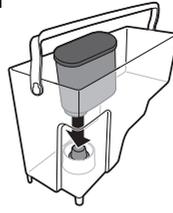

5



6



7




8




9




10

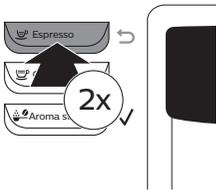

11

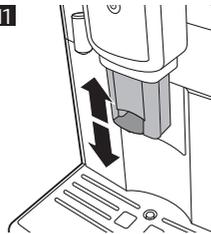


12

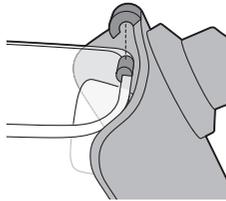


13




14

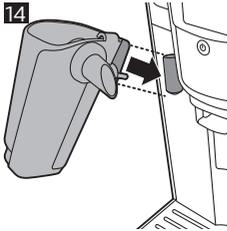


15

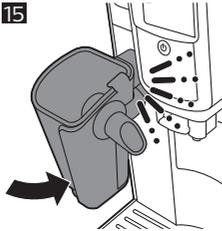

16

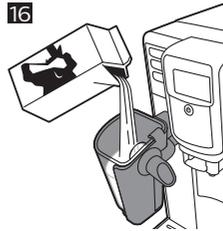


17

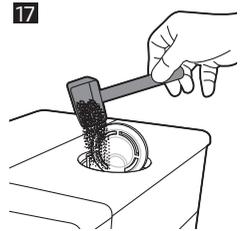

18




19

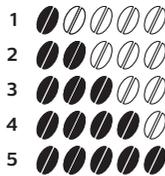


20




21

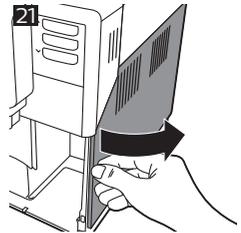


22

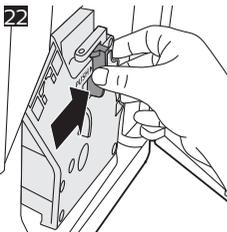


23

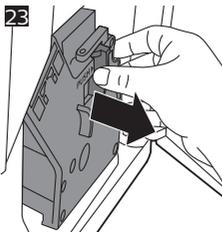


24

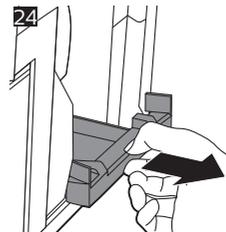


25

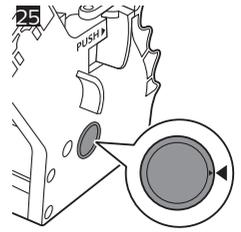


26

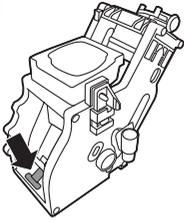


27

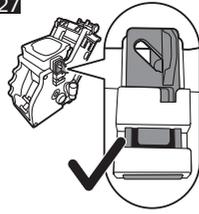


28

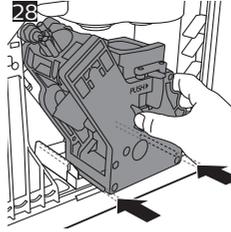


29

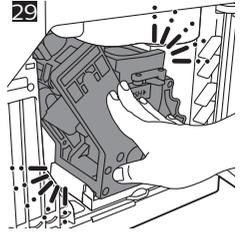


30

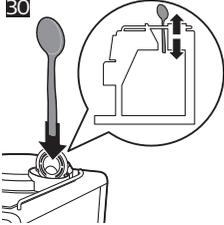


31

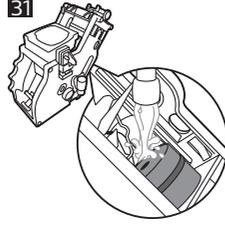


32

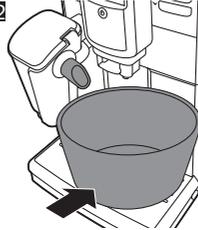

33

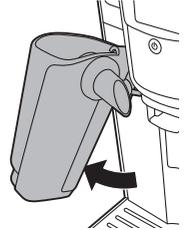


34

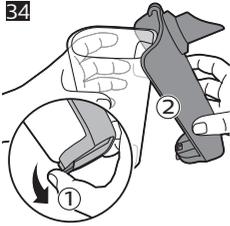

35



36

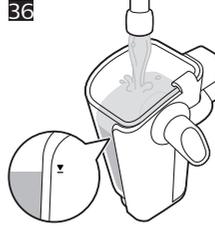

37



38



39



# Contents

Machine overview (Fig. 1)	6
Introduction	7
First installation	7
Using the control panel	7
AquaClean filter	8
Measuring water hardness	9
Brewing drinks	9
Personalizing drinks	11
Adjusting grinder settings	11
Handling the brew group	12
Cleaning and maintenance	12
Cleaning LatteGo	14
Descaling procedure	15
Warning icons and error codes	16
Ordering accessories	17
Troubleshooting	18
Technical specifications	21

## Machine overview (Fig. 1)

1 Control panel	18 Coffee residues drawer
2 Adjustable coffee dispensing spout	19 Coffee grounds container
3 Lid of water tank	20 Drip tray cover
4 Lid of bean hopper	21 Espresso stand tray
5 Lid of pre-ground coffee compartment	22 Espresso stand cover
6 Main switch	23 LatteGo milk container release button
7 Socket for cord	24 LatteGo milk container
8 Service door	25 LatteGo storage lid
9 'Drip tray full' indicator	26 LatteGo frame
10 Drip tray	27 Hot water dispensing spout
11 Cord	28 Water tank
12 Grind setting knob	29 AquaClean filter
13 Cover of bean hopper	30 Grease tube
14 Bean hopper	31 Cleaning brush
15 Brew group	32 Measuring scoop
16 Inside of service door with contact information	33 Water hardness test strip
17 Coffee exit duct	

## Introduction

Congratulations on your purchase of a Philips full-automatic coffee machine! To fully benefit from the support that Philips offers, please register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

Read the separate safety booklet carefully before you use the machine for the first time and save it for future reference.

To help you get the best out of your coffee machine, Philips offers full support in 3 different ways:

- 1 The separate quick start guide for first installation and first use.
- 2 This user manual for more detailed information.
- 3 Online support and movies: scan the QR code on the front page or visit [www.philips.com/coffee-care](http://www.philips.com/coffee-care)

Note: This machine has been tested with coffee. Although it has been carefully cleaned, there may be some coffee residues left. We guarantee, however, that the machine is absolutely new.

## First installation

To prepare your coffee machine for use, you need to perform a few simple steps such as filling the water circuit and activating the AquaClean filter. These steps are shown in the separate quick start guide.

For the best-tasting coffee, you need to brew 5 coffees initially to allow the machine to complete its self-adjustment.

The machine has been set up to get the best taste out of your coffee beans. Therefore we advise you not to adjust the grinder settings until you have brewed 100–150 cups (approx. 1 month of usage).

Thoroughly clean LatteGo before first use.

The machine is provided with the espresso stand, with the double function of cup support and extra drip tray to collect rinsing water.

In order to brew an optimal espresso with a smooth crema layer, the cup should be positioned at a distance from the spout of 7–8 cm. When the espresso stand is in use the espresso cup is positioned at the right distance from the spout to optimize the brewing process.


The espresso stand should be positioned under the spout when the machine rinses on and off, eliminating the need to regularly emptying the main drip tray.

## Using the control panel

Below you find an overview and description of the control panel of the machine. Some of the buttons have a double function; if applicable the navigation icons appear on the display. Use the buttons next to this icon to select or confirm your choices.

Use the MENU button to select other drinks and to change settings such as the water hardness and coffee temperature.

## 8 English

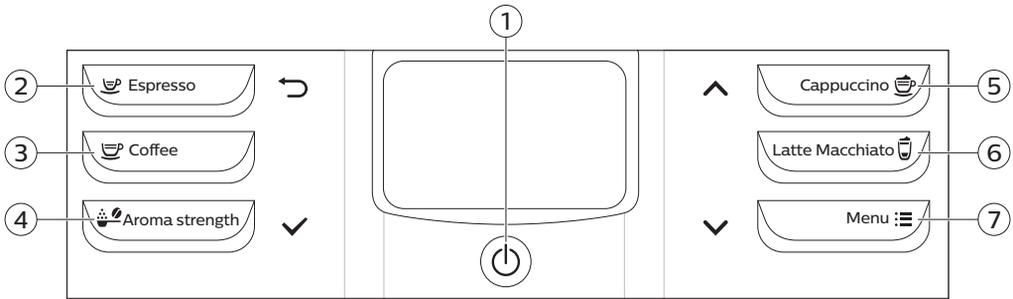

1. On/off button

5. CAPPUCCINO/up (▲) button

2. ESPRESSO/back (↶) button

6. LATTE MACCHIATO button

3. COFFEE button

7. MENU/down (▼) button

4. AROMA STRENGTH/OK (✓) button

## AquaClean filter

The AquaClean filter is designed to reduce limescale deposits in your coffee machine and provide filtered water to preserve the aroma and flavor of each cup of coffee. If you use a series of 8 AquaClean filters as indicated by the machine and in this user manual, you don't have to descale your machine for up to 5000 cups. With each filter you can enjoy up to 625 cups, depending on the selected coffee varieties and the rinsing and cleaning frequencies.

### Preparing the AquaClean filter for activation

Before you place the AquaClean filter in the water tank, you need to prepare it for use:

- 1 Shake the filter for about 5 seconds (Fig. 2).
- 2 Immerse the filter upside down in a jug with cold water for at least 30 seconds and wait until no more air bubbles come out (Fig. 3).
- 3 Push the filter onto the filter connection to the lowest possible point (Fig. 4).

### Activating the AquaClean filter

You need to activate every new AquaClean filter that you use. By activating the AquaClean filter, the machine monitors the capacity of the AquaClean filter and the number of filters used. There are 3 ways to activate the AquaClean filter.

#### 1. Activating the AquaClean filter during first installation

After switching on for the first time, the machine guides you through the first installation steps such as filling the water tank, filling the water circuit and activating the AquaClean filter. Simply follow the steps in 'Before first use' in the separate quick start guide.

#### 2. Activating the AquaClean filter when prompted

Note: Replace the AquaClean filter as soon as the capacity has dropped to 0% and the filter icon flashes quickly. Replace the AquaClean filter at least every 3 months, even if the machine has not yet indicated that replacement is required.

Tip: We advise you to buy a new filter when the capacity has dropped to 10% and the filter icon starts flashing slowly. This ensures that you can replace the filter when the capacity has dropped to 0%.

- 1 Press the MENU button, scroll to AQUACLEAN FILTER and press the OK button (✓) to confirm.
  - The display asks if you want to activate a new filter (Fig. 5).
- 2 Press the OK button (✓) to confirm.
  - The display automatically updates the number of filters used (Fig. 6).

Note: If you want to replace the AquaClean filter after 8 filters have been used, you first need to descale the machine. Follow the instructions on the display.

### 3. Activating the AquaClean filter at any other time

You can start using the AquaClean filter at any time by following the instructions below.

- 1 Press the MENU button, select MENU and press the OK button to confirm. Scroll to AQUACLEAN FILTER. Press the OK button (✓) to confirm.
  - The display shows the numbers of AquaClean filters that have been installed previously from 0 to 8 filters (Fig. 6).
- 2 Select ON on the display and press the OK button (✓) to confirm (Fig. 7).
  - The display automatically updates the number of filters used (Fig. 8).
  - Then the 'machine ready' screen appears with the AquaClean 100% icon to indicate that the filter has been installed (Fig. 9).
- 3 Dispense 2 cups of hot water (0.5 l) to complete the activation. Discard this water.

Note: In some situations the machine will tell you that you need to descale the machine before you can install and activate a new AquaClean filter. This is because your machine has to be completely limescale-free before you start to use the AquaClean filter. Follow the instructions on the screen.

## Measuring water hardness

Use the water hardness test strip supplied to set the water hardness. Press the MENU button, select MENU and scroll to select WATER HARDNESS.

- 1 Immerse the water hardness test strip in tap water for 1 second. Then wait for 1 minute.
- 2 Check how many squares have turned red.
- 3 Select the appropriate water hardness setting and press the OK button (✓) to confirm.

Number of red squares:				
Value to be set	1	2	3	4

## Brewing drinks

You can select a drink by pressing one of the one-touch drink buttons or by selecting another drink in the menu.

- If you want to brew two cups, press the one-touch drink button of the selected drink twice (Fig. 10). The machine automatically carries out two grinding cycles in sequence for the selected drink. You can only brew two cups of coffee or two cups of espresso at the same time.
- Slide the dispensing spout up or down to adjust its height to the size of the cup or glass you are using (Fig. 11).

# Brewing coffee drinks

## Brewing coffee with beans

- 1 Fill the water tank with tap water and fill the bean hopper with beans.
- 2 To brew a coffee, press one of the one-touch drink buttons. To select another drink, press the MENU button, select DRINKS, scroll down to the desired drink and press the OK button (✓).
- 3 To stop dispensing coffee, press the OK button (✓).

## Brewing milk-based drinks

LatteGo consists of a milk container, a frame and a storage lid. To avoid leakage, make sure the frame and the milk container are properly assembled as described below before you fill the milk container.

- 1 Fill the water tank with tap water and fill the bean hopper with beans.
- 2 To assemble LatteGo, first insert the top of the milk container under the hook at the top of the frame (Fig. 12). Then press home the bottom part of the milk container. You hear a click when it locks into place (Fig. 13).

Note: Make sure that the milk container and the frame are clean before you connect them, especially the surfaces where these parts connect.

- 3 Slightly tilt LatteGo and put it on the hot water dispensing spout (Fig. 14). Then press it home until it locks into place (Fig. 15).
- 4 Fill LatteGo with milk up to the level indicated on the milk container for the drink you are brewing (Fig. 16). Do not fill beyond the MAX indication.

Note: If you have personalized drinks and adjusted the milk volume, then you may need to fill the milk container with more or less milk than indicated for this drink on LatteGo.

Always use milk coming directly from the fridge for optimal results.

- 5 Place a cup on the drip tray.
- 6 To brew a milk-based drink, press one of the one-touch drink buttons. To select another type of milk-based drink, press the MENU button, select DRINKS, scroll down to the desired drink and press the OK button (✓). The display reminds you to put LatteGo onto the machine.

After brewing milk-based coffee beverages, the display indicates that you can clean LatteGo. For the best hygiene, we strongly advise you to clean LatteGo after every use in the dishwasher or by rinsing it under the tap. If the milk container is not empty yet or if you want to brew another milk-based drink later, you can easily store LatteGo in the fridge. In this case we advise you to use the LatteGo QUICK CLEAN function before storage. Go to the MENU to activate LatteGo QUICK CLEAN.

## Brewing coffee with pre-ground coffee

- 1 Open the lid and pour one leveled measuring scoop of pre-ground coffee into the pre-ground coffee compartment (Fig. 17). Then close the lid.
- 2 Place a cup under the coffee dispensing spout. For smaller cups you can use the espresso stand.
- 3 Press the AROMA STRENGTH button and select the pre-ground coffee brewing function. Press the ESPRESSO button.

Note: With pre-ground coffee you can only brew one coffee at a time.

## Dispensing hot water

- 1 If attached, remove LatteGo from the machine.
- 2 Press the MENU button. Select DRINKS, confirm and scroll to select HOT WATER.
- 3 Press the OK button (✓) to confirm. The machine starts dispensing hot water.

- 4 To stop dispensing hot water, press the OK button (✓).

## Personalizing drinks

### Adjusting coffee and milk volume

You can adjust the volume of the drink brewed according to your taste and to the size of the cups. We advise you to use glass cups or cups with a ceramic-coated rim.

#### Adjusting coffee volume

- 1 To adjust the espresso volume, press and hold the ESPRESSO button until the display shows the MEMO icon (Fig. 18).
  - The machine enters the programming phase and starts to brew the selected drink.
- 2 Press the OK button (✓) when the cup contains the desired amount of espresso.
  - The tick on the display shows that the button is programmed: every time it is pressed, the machine brews the set espresso volume.

Note: To set the volume of coffee, follow the same procedure.

#### Adjusting volume of milk-based drinks

- 1 To set the volume for cappuccino and latte macchiato, first insert LatteGo and add milk.
- 2 Press and hold the milk-based drink button until the display shows the MEMO icon. The machines first starts dispensing milk.
- 3 Press the OK button (✓) when the cup contains the desired amount of milk. Then the machine starts dispensing the coffee.
- 4 Press the OK button again to save the desired coffee volume.

Note: If you personalize milk drinks, then you may need to fill the milk container with more or less milk than indicated for this drinks on LatteGo.

### Adjusting coffee strength

- To change the coffee strength, press the AROMA STRENGTH button.
- Each time you press the AROMA STRENGTH button, the machine selects a higher aroma strength setting. There are 5 strengths, 1 is very mild and 5 is very strong. After setting 5, setting 1 is selected again (Fig. 19).
- Note: You can also use the AROMA STRENGTH button to brew coffee with pre-ground coffee
- The display shows the chosen strength. After adjusting the coffee strength, the display shows the main menu again and saves the chosen aroma strength when you brew a coffee.

## Adjusting grinder settings

You can adjust the grinder settings by using the grind setting knob inside the bean container. There are 5 different grind settings you can choose from. The lower the setting, the stronger the coffee.

Note: You can only adjust the grind settings when the machine is grinding coffee beans. You need to brew 2 to 3 drinks before you can taste the full difference.

Caution: Do not turn the grind setting knob more than one notch at a time to prevent damage to the grinder.

- 1 Place a cup under the coffee dispensing spout.
- 2 Open the lid of the bean hopper.

## 12 English

- 3 Press the ESPRESSO button.
- 4 When the grinder starts grinding, press down the grind setting knob and turn it to the left or right (Fig. 20).

## Handling the brew group

Go to [www.philips.com/coffee-care](http://www.philips.com/coffee-care) for detailed video instructions on how to remove, insert and clean the brew group.

### Removing the brew group from the machine

- 1 Switch off the machine by pressing the main switch on the back of the machine.
- 2 Remove the drip tray with the coffee grounds container.
- 3 Open the service door (Fig. 21).
- 4 Press the PUSH button (Fig. 22) and pull at the grip of the brew group to remove it from the machine (Fig. 23).
- 5 Remove the coffee residues drawer (Fig. 24).

### Reinserting the brew group

Before you slide the brew group back into the machine, make sure it is in the correct position.

- 1 Check if the arrow on the yellow cylinder on the side of the brew group is aligned with the black arrow and N (Fig. 25).
  - If they are not aligned, push down the lever until it is in contact with the base of the brew group (Fig. 26).
- 2 Make sure that the yellow locking hook on the other side of the brew group is in the correct position.
  - To position the hook correctly, push it upwards until it is in uppermost position (Fig. 27).
- 3 Place back the coffee residues drawer.
- 4 Slide the brew group back into the machine along the guiding rails on the sides (Fig. 28) until it locks into position with a click (Fig. 29). Do not press the PUSH button.
- 5 Place back the drip tray with the coffee grounds container.

## Cleaning and maintenance

Regular cleaning and maintenance keeps your machine in top condition and ensures good-tasting coffee for a long time, a steady coffee flow and a perfect milk froth.

Consult the table on when and how to clean all detachable parts of the machine. You can find more detailed information and video instructions on [www.philips.com/coffee-care](http://www.philips.com/coffee-care).

### Cleaning table

Part description	When to clean	How to clean
Brew group	Weekly	Remove the brew group and rinse it under the tap (see 'Cleaning the brew group under the tap').

Part description	When to clean	How to clean
	Monthly	Clean the brew group with the Philips coffee oil remover tablet (see 'Cleaning the brew group with the coffee oil remover tablets'). Go to <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions.
Lubrication of the brew group	Depending on the type of usage. Consult the lubrication table (see 'Lubricating the brew group').	Lubricate the brew group with the Philips grease. Go to <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions.
LatteGo	After every use	Rinse LatteGo under the tap or clean it in the dishwasher. If you want to store LatteGo with milk in the fridge, perform the QUICK CLEAN program (see 'LatteGo QUICK CLEAN').
	Monthly	Clean LatteGo in the dishwasher or perform the monthly cleaning procedure with the Philips milk circuit cleaner (see 'Monthly cleaning of LatteGo').
Drip tray	Empty the drip tray as soon as the red 'drip tray full' indicator pops up through the drip tray. Clean the drip tray weekly.	Remove the drip tray and rinse it under the tap with some washing-up liquid.
Coffee grounds container	Empty the coffee grounds container when prompted by the machine. Clean it weekly.	Remove the coffee grounds container while the machine is switched on and rinse it under the tap with some washing-up liquid.
Water tank	Weekly.	Rinse the water tank under the tap
Coffee funnel	Check the coffee funnel weekly to see if it is clogged.	Unplug the machine and remove the brew group. Open the lid of the pre-ground coffee compartment and insert the spoon handle into the coffee funnel. Move the handle up and down until the clogged ground coffee falls down (Fig. 30). Go to <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions.
Espresso stand	Daily	Empty the espresso stand and clean it under the tap or in the dishwasher.

Tip: There is a cleaning calendar on the last page of this user manual. Write down the dates on which you have performed a cleaning action.

## Cleaning the brew group

Regular cleaning of the brew group prevents coffee residues from clogging up the internal circuits. Visit [www.philips.com/coffee-care](http://www.philips.com/coffee-care) for support videos on how to remove, insert and clean the brew group.

### Cleaning the brew group under the tap

- 1 Remove the brew group and the coffee residues drawer.

## 14 English

- 2 Rinse the coffee residues drawer and the brew group thoroughly with water. Carefully clean the upper filter (Fig. 31) of the brew group.
- 3 Let the brew group air-dry before you place it back. Do not dry the brew group with a cloth to prevent fibers from collecting inside the brew group.

### Cleaning the brew group with the coffee oil remover tablets

Only use Phillips Saeco coffee oil remover tablets. Follow the instructions given in the user manual that comes with the coffee oil remover tablets.

### Lubricating the brew group

Lubricate the brew group regularly to ensure that the moving parts continue to move smoothly. See the table below for the lubrication frequency. Visit [www.philips.com/coffee-care](http://www.philips.com/coffee-care) for detailed video instructions.

Usage frequency	Nr of drinks brewed daily	Lubrication frequency
Low	1-5	Every 4 months
Normal	6-10	Every 2 months
Heavy	>10	Every month

## Cleaning LatteGo

For optimal cleaning, disassemble LatteGo and clean all parts in the dishwasher or under the tap with lukewarm water.

### LatteGo QUICK CLEAN

When you activate LatteGo QUICK CLEAN function, the machine forces hot water through the milk system to quickly clean it. Use the LatteGo QUICK CLEAN function if you want to store LatteGo with milk in the fridge.

You can select the QUICK CLEAN function in the menu in the following way:

- 1 Make sure that LatteGo is attached to the machine.
- 2 Press the MENU button and select START QUICK CLEAN. Press the OK button (✓) to confirm.
- 3 The display indicates that you have to place a bowl under the spout (Fig. 32).
- 4 Press the OK button (✓) to start dispensing hot water.

### Thoroughly cleaning of LatteGO

- 1 Remove LatteGo from the machine (Fig. 33).
- 2 Pour out any remaining milk.
- 3 Press the release button and remove the milk container from the frame of LatteGo (Fig. 34).
- 4 Clean all parts in the dishwasher or under the tap with luke-warm water. You can also use some washing-up liquid.

### Monthly cleaning of LatteGo

Only use Philips milk circuit cleaner for this cleaning cycle.

- 1 Make sure that LatteGo is properly assembled.

- 2 Pour the contents of the milk circuit cleaner sachet in LatteGo (Fig. 35). Then fill LatteGo with water up to the MAX indication (Fig. 36).
- 3 Slightly tilt LatteGo and put it on the hot water dispensing spout (Fig. 14). Then press it home until it locks into place (Fig. 15).
- 4 Place a container under the milk spout (Fig. 32).
- 5 Press the MENU button, select DRINKS and scroll to MILK FROTH. Press the OK button (✓) to start dispensing the cleaning solution.
- 6 Repeat step 5 until LatteGo is empty.
- 7 When LatteGo is empty, remove it from the machine.
- 8 Rinse LatteGo thoroughly and fill it with fresh water up to the MAX level indication.
- 9 Click LatteGo onto the machine again.
- 10 Remove and empty the container. Then place it back under the milk spout.
- 11 Press the MENU button and select MILK FROTH in the DRINKS menu to start LatteGo rinsing cycle.
- 12 Repeat step 11 until LatteGo is empty.
- 13 Repeat steps 7-11.
- 14 When the machine stops dispensing water, the cleaning cycle is finished.
- 15 Disassemble all the components and rinse them under a lukewarm tap.

## Descaling procedure

Please use Philips descaler only. Under no circumstances should you use a descaler based on sulfuric acid, hydrochloric acid, sulfamic or acetic acid (vinegar) as this may damage the water circuit in your machine and not dissolve the limescale properly. Not using the Philips descaler will void your warranty. Failure to descale the appliance will also void your warranty. You can buy Philips descaling solution in the online shop at [www.philips.com/coffee-care](http://www.philips.com/coffee-care).

- 1 When the machine asks you to descale it (Fig. 37), press the OK button (✓) to start. To start descaling without being prompted by the machine, press the MENU button, scroll to select START CALC CLEAN and press the OK button (✓) to confirm.
- 2 Remove the drip tray and the coffee grounds container, empty them and put them back into place.
- 3 Remove the water tank and empty it.
- 4 Remove LatteGo if present.
- 5 The display asks you to remove the AquaClean filter from the water tank (Fig. 38).
- 6 Place a large container (1.5L) under both the coffee and milk spout.
- 7 Pour the whole bottle of Philips descaler in the water tank and then fill it with water up to the CALC CLEAN level (Fig. 39). Then place it back into the machine and press the OK button (✓) to confirm.
- 8 The first phase of the descaling procedure starts. The descaling procedure lasts approx. 30 minutes and consists of a descaling cycle and a rinsing cycle.
- 9 Let the machine dispense the descaling solution until the display reminds you that the water tank is empty.
- 10 Empty the water tank, rinse it and then refill it with fresh water up to the CALC CLEAN level.
- 11 Empty the container and place it back under the coffee and milk spout. Press OK (✓) to confirm.
- 12 The second phase of the descaling cycle, the rinsing phase, starts and lasts 3 minutes. The display shows the rinsing icon and the duration of the phase.
- 13 Wait until the machine stops dispensing water. The descaling procedure is finished when the tick appears on the display.
- 14 Press the OK button (✓) to exit the descaling cycle. The machine starts heating up and performs the automatic rinsing cycle.
- 15 Clean the brew group after descaling (see 'Cleaning the brew group under the tap').
- 16 Place a new AquaClean filter in the water tank and reactivate the AquaClean filter in the menu.

Tip: Using the AquaClean filter reduces the need for descaling!

### What to do if the descaling procedure is interrupted

You can exit the descaling procedure by pressing the on/off button on the control panel. If the descaling procedure is interrupted before it is completely finished, do the following:

- 1 Empty and rinse the water tank thoroughly.
- 2 Fill the water tank with fresh water up to the CALC CLEAN level indication and switch the machine back on. The machine will heat up and perform an automatic rinsing cycle.
- 3 Before brewing any drinks, perform a manual rinsing cycle. To perform a manual rinsing cycle, first dispense half a water tank of hot water and then brew 2 cups of pre-ground coffee without adding ground coffee.

Note: If the descaling procedure was not completed, the machine will require another descaling procedure as soon as possible.

## Warning icons and error codes

### Meaning of the warning icons



Fill the water tank with fresh water to the MAX level indication.



The brew group is blocked by coffee powder. Clean the brew group.



The bean hopper is empty. Put new coffee beans in the bean hopper.



Insert the drip tray and close the service door.



The brew group is not in the machine or it is not inserted correctly. Insert the brew group.



If the display shows an error code, check section 'Meaning of the error codes' to see what the code on the display means and what you can do. The machine cannot be used when this icon is on the display.



The coffee grounds container is full. Make sure the machine is switched on. Then remove and empty the coffee grounds container.



There is air in the machine, place a cup under the hot water spout and select Ok to start priming. Make sure the hot water spout is inserted before starting the process.

### Meaning of error codes

Below you find a list of the error codes showing problems that you can solve yourself. Video instructions are available on [www.philips.com/coffee-care](http://www.philips.com/coffee-care). If another error code appears, please contact the Philips Consumer Care Center in your country. For contact details, see the warranty leaflet.

Error code	Problem	Possible solution
01	The coffee funnel is blocked by ground coffee or a foreign object.	Switch off the machine and unplug it. Remove the brew group. Then open the lid of the pre-ground coffee compartment. Insert the spoon handle and move it up and down to make clogged ground coffee fall down (Fig. 30). If a foreign object is blocking the coffee funnel, remove it. Visit <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions
03	The brew group is dirty or not well-greased.	Switch off the machine with the main switch. Rinse the brew group with fresh water, let it air-dry and then lubricate it (see 'Lubricating the brew group'). Consult chapter 'Cleaning the brew group' or visit <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions. Then switch the machine on again.
04	The brew group is not positioned correctly.	Switch off the machine with the main switch. Remove the brew group and reinsert it. Make sure that the brew group is in the correct position before you insert it. Consult chapter 'Handling the brew group' or visit <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions. Then switch the machine on again.
05	There is air in the water circuit.	Restart the machine by switching it off and on again with the main switch. If this works, dispense 2-3 cups of hot water. Descale the machine if you have not done so for a longer period of time.
	The AquaClean filter was not prepared properly before installation or it is clogged.	Remove the AquaClean filter and try again to brew a coffee. If this works, make sure that the AquaClean filter is prepared properly before you place it back (see 'Preparing the AquaClean filter for activation'). Put the AquaClean filter back into the water tank. If this still does not work, the filter is clogged and needs to be replaced.
14	The machine is overheated.	Switch the machine off and switch it back on again after 30 minutes.

## Ordering accessories

To clean and descale the machine, only use the Philips maintenance products. These products can be purchased from your local retailer, from the authorized service centers or online at [www.shop.philips.com/service](http://www.shop.philips.com/service). To find a full list of spare parts online, enter the model number of your machine. You can find the model number on the inside of the service door.

Maintenance products and type numbers:

- Descaling solution CA6700
- AquaClean filter CA6903
- Brew group grease HD5061
- Coffee oil remover tablets CA6704
- Milk circuit cleaner CA6705
- Maintenance kit CA6707

## Troubleshooting

This chapter summarizes the most common problems you could encounter with the machine. Support videos and a complete list of frequently asked questions are available on [www.philips.com/coffee-care](http://www.philips.com/coffee-care). If you are unable to solve the problem, contact the Consumer Care Center in your country. For contact details, see the warranty leaflet.

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
The drip tray fills up quickly.	This is normal. The machine uses water to rinse the internal circuit and brew group. Some water flows through the internal system directly into the drip tray.	Empty the drip tray when the 'drip tray full' indicator pops up through the drip tray cover.
		Place the espresso stand under the dispensing spout to collect rinsing water.
The machine is in DEMO mode.	You pressed the standby button for more than 8 seconds.	Switch the machine off and then on again with the main switch on the back of the machine.
The 'coffee grounds container full' icon remains displayed.	You emptied the coffee grounds container while the machine was switched off. The machine does not detect emptying the coffee grounds container when the machine is switched off	Always empty the coffee grounds container while the machine is switched on. If you empty the coffee grounds container when the machine is switched off, the coffee cycle counter will not be reset.
	You placed back the coffee grounds container too early. The machine does not detect emptying the coffee grounds container if you place back the coffee grounds container too fast	Do not place back the coffee grounds container until the screen prompts you to put it back.
The 'coffee grounds container full' icon is displayed even though the container is not full.	The machine did not reset the counter the last time you emptied the coffee grounds container.	Always wait approx. 5 seconds when you place back the coffee grounds container. In this way the coffee grounds counter will be reset to zero.
		Always empty the coffee grounds container while the machine is switched on. If you empty the coffee grounds container when the machine is switched off, the coffee grounds counter will not be reset.
The coffee grounds container is too full and the message "Empty grounds container" did not display	You removed the drip tray without emptying the coffee grounds container	When you remove the drip tray, also empty the coffee grounds container, even if it contains only a few coffee pucks. In this way the coffee grounds counter will be reset to zero, re-starting to correctly count the coffee grounds.

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
I cannot remove the brew group.	The brew group is not in the correct position.	Reset the machine in the following way: place back the drip tray and the coffee grounds container. Then close the service door and switch the machine off and back on again. Try again to remove the brew group.
	You have not removed the coffee grounds container.	Remove the coffee grounds container before you remove the brew group.
I cannot insert the brew group.	The brew group is not in the correct position.	Reset the machine in the following way: place back the drip tray and the coffee grounds container. Leave the brew group out. Close the service door and switch the machine on and off. Then put the brew group in the correct position (see 'Reinserting the brew group') and reinsert it into in the machine.
	The machine is still in the descaling procedure.	You cannot remove the brew group when the descaling procedure is in progress. First complete the descaling procedure and then remove the brew group.
The coffee is watery.	The grinder is set to a too coarse setting.	Set the grinder to a finer (lower) setting.
	The coffee exit duct is clogged.	Clean the coffee exit duct with the spoon handle. Then switch the machine off and on again.
	The machine is performing its self-adjustment procedure.	Brew a few cups of coffee.
	The brew group is dirty or needs to be lubricated.	Clean and lubricate the brew group.
The coffee is not hot enough.	The cups you use are cold.	Preheat the cups by rinsing them with hot water.
	The temperature is set too low. Check the menu settings.	Set the temperature to 'high' in the menu.
	You added milk.	Whether the milk you add is warm or cold, it always decreases the temperature of the coffee to some extent.
Coffee is leaking from the coffee dispensing spout.	The coffee dispensing spout is clogged.	Clean the coffee dispensing spout and its holes with a pipe cleaner.
	The coffee exit duct is clogged	Clean the coffee exit duct with the handle of the measuring spoon or a spoon handle. Then switch the appliance off and on again.

## 20 English

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
Coffee does not come out or coffee comes out slowly.	The AquaClean filter was not prepared properly for installation or it is clogged.	Remove the AquaClean filter and try to brew a coffee again. If this works, make sure the AquaClean filter is prepared properly before you place it back (see 'Preparing the AquaClean filter for activation'). Place back the prepared filter. If this still does not work, the filter is clogged and needs to be replaced.
	The grinder is set to a too fine setting.	Set the grinder to a coarser (higher) setting.
	The brew group is dirty.	Clean the brew group.
	The coffee dispensing spout is dirty.	Clean the coffee dispensing spout and its holes with a needle.
	The machine circuit is blocked by limescale.	Descale the machine.
The milk does not froth.	LatteGo is dirty or not attached correctly.	Clean LatteGo and make sure that you assemble and attach it correctly. Make sure that the milk container and the frame are clean before you connect them, especially the surfaces where these parts connect.
	LatteGo is incorrectly assembled.	Make sure that the milk container is properly assembled to the frame of LatteGo.
	The type of milk used is not suitable for frothing.	Different types of milk result in different amounts of froth and different froth qualities. We have tested the following milk types which proved to deliver a good milk froth result: semi-skimmed or full-fat cow's milk and lactose-free milk.
The coffee is splashing.	The distance between cup and spout is too large.	Place the espresso stand on the drip tray, under the spout.
The milk is splashing.	The milk you use is not cold enough.	Make sure you use cold milk coming directly from the fridge.
	You did not put enough milk in LatteGo	Put more milk in LatteGo. You may need to put more milk in LatteGo than indicated on the milk container if you personalized your milk drinks
The machine seems to be leaking.	The machine uses water to rinse the internal circuit and brew group. Some water flows through the internal system directly into the drip tray. This is normal.	Empty the drip tray when the 'drip tray full' indicator pops up through the drip tray cover. Place the espresso stand under the dispensing spout to collect rinsing water.

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
	The drip tray is too full and has overflowed which makes it look like the machine is leaking.	Empty the drip tray when the 'drip tray full' indicator pops up through the drip tray cover. Place the espresso stand under the dispensing spout to collect rinsing water.
	The machine is not placed on a horizontal surface.	Place the machine on a horizontal surface so that the 'drip tray full' indicator works properly.
Milk is leaking from the milk container.	You did not assemble LatteGo properly.	Make sure that the milk container is properly assembled to the frame of LatteGo.
I cannot activate the AquaClean filter and the machine asks for descaling.	The filter has not been replaced in time after the AquaClean filter icon flashed and the capacity dropped to 0%.	Descal your machine first and then install the AquaClean filter.
	You did not install the AquaClean filter during first installation, but after having brewed approx. 25 coffees (based on 100ml cups). The machine has to be completely limescale-free before you install the AquaClean filter.	First descale the machine and then install a new AquaClean filter. After descaling, the filter counter is reset to 0/8. Always confirm filter activation in the machine menu. Also do this after filter replacement.
The new water filter does not fit.	You are trying to install another filter than the AquaClean filter.	Only the AquaClean filter fits into the machine.
The machine is making a noise.	It is normal that your machine makes noise during use.	If the machine starts to make a different kind of noise, clean the brew group and lubricate it (see 'Lubricating the brew group').
	The AquaClean filter was not prepared properly and air is now drawn into the machine.	Remove the AquaClean filter from the water tank. Shake the filter for about 5 seconds. Immerse the filter upside down in a jug with cold water and wait until no more air bubbles come out. Place the prepared AquaClean filter back into the water tank.

## Technical specifications

The manufacturer reserves the right to improve the technical specifications of the product. All the preset quantities are approximate.

<b>Description</b>	<b>Value</b>
Housing material	Thermoplastic
Size (w x h x d)	221 x 340 x 430 mm
Weight	7.6 kg
Power cord length	1200 mm
Control panel	front
Cup size	up to 145 mm
Water tank	1.8 litres, removable
Coffee bean hopper capacity	250 g
Coffee grounds container capacity	15 pucks
Milk carafe capacity	265 ml
Pump pressure	15 bar
Boiler	stainless steel boiler
Safety devices	thermal fuse
Energy saving mode	< 1 Wh
Nominal voltage - Power rating - Power supply	See data plate on inside of service door





[www.philips.com/coffee-care](http://www.philips.com/coffee-care)



421945004011



>75% recycled paper