

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

SE888



---

EN User manual

---

**PHILIPS**





# Contents

<b>1</b>	<b>Important safety instructions</b>	<b>7</b>		
<b>2</b>	<b>Your SE888</b>	<b>9</b>		
	What is in the box	9		
	Overview of the phone	10		
	Overview of the base station	11		
	Main menu icons	12		
	Display icons	13		
<b>3</b>	<b>Get started</b>	<b>14</b>		
	Connect the base station and charger	14		
	Install the handset	14		
	Configure your phone (country dependent)	15		
	Select the country	15		
	Set the date and time	15		
	Set the date and time format	15		
	Charge the handset	15		
	Check the battery level	16		
	What is standby mode?	16		
	Check the signal strength	16		
<b>4</b>	<b>Bluetooth</b>	<b>17</b>		
	Rename your device	17		
	Pair SE888	17		
	Pair SE888 with your mobile phones	17		
	Pair SE888 with your computer	17		
	Synchronize the phonebook and call log	18		
	Download the phonebook and update the call log from the mobile phones	18		
	Download the phonebook from the computer	18		
	Manage the devices list	18		
	Connect/Disconnect the device	18		
	Rename the device	19		
	Delete a device/Delete all devices on the list	19		
	Change the PIN code	19		
<b>5</b>	<b>Calls</b>	<b>20</b>		
	Make a call	20		
	Quick call	20		
	Dial before you call	20		
	Redial the most recent number	20		
	Call from the redial list	21		
	Call from the phonebook	21		
	Call from the call log	21		
	End a call	21		
	Answer a call	21		
	Divert the incoming call to the answering machine	22		
	Turn off the ringer for all incoming calls	22		
	Adjust the volume during a call	22		
	Mute the microphone	22		
	Turn the speaker on or off	22		
	Make a second call	22		
	Answer a second call	22		
	Toggle between two calls on the handset and base station	22		
	Toggle between two calls on the land line and Bluetooth line	23		
	Make a conference call with external callers	23		
	Make a conference call on the land line and Bluetooth line	23		
<b>6</b>	<b>Intercom and conference calls</b>	<b>24</b>		
	Make a call to another handset	24		
	While you are on the phone	24		
	Toggle between calls	24		
	Transfer a call	24		
	Make a conference call	24		
	During an external call	24		
	During the conference call	25		
<b>7</b>	<b>Text and numbers</b>	<b>26</b>		
	Enter text and numbers	26		
	Switch between the upper case and lower case	28		
<b>8</b>	<b>Phonebook</b>	<b>29</b>		
	Access the phonebook directories	29		
	Direct access memory	29		
	View the phonebook	29		
	Download the phonebook from the mobile phone or computer	29		
	Search a record	29		
	Scroll the contact list	29		
	Enter the first character of a contact	30		
	Call from the phonebook	30		
	Access the phonebook during a call	30		
	Add a record	30		

Edit a record	30	Set the sound profile	41
Set the melody	31		
Delete a record	31		
Delete all records	31		
<hr/>			
<b>9 Call log</b>	<b>32</b>	<b>15 Services</b>	<b>42</b>
Access the call records	32	Access the services menu	42
View the call records	32	Auto conference	42
Download the phonebook from the mobile phone or computer	32	Activate/Deactivate auto conference	42
Return a call	32	Manage the carrier code	42
Save a call record to the phonebook	33	Activate auto removal of the carrier code	42
Delete a call record	33	Deactivate auto removal of the area code	42
Delete all call records	33	Manage the area code	43
		Activate auto removal of the area code	43
		Deactivate auto removal of the area code	43
		Auto prefix	43
		Set auto prefix	43
		Network type	44
		Select the recall duration	44
		Dial mode	44
		Set the dial mode	44
		First ring	44
		Turn the first ring on/off	44
		Auto clock	45
		Register the handsets	45
		Auto registration	45
		Manual registration	45
		Unregister the handsets	46
		Call services	46
		Call forward	46
		Activate/Deactivate call forward	46
		Edit the activation/deactivation code	46
		Call return	47
		Call the return service centre	47
		Edit the call return service centre number	47
		Call-back service	47
		Cancel the call-back service	47
		Edit the cancel call-back service number	47
		Hide your identity	47
		Activate ID withheld	47
		Edit the ID withheld code	47
		Restore default settings	47
<hr/>			
<b>10 Redial list</b>	<b>34</b>	<b>16 Baby monitor</b>	<b>49</b>
Access the redial list	34	Activate/Deactivate the baby monitor	49
Redial a call	34	Send an alert	49
Save a redial record to the phonebook	34	Send to other handsets	49
Delete a redial record	34	Send to an external line	49
Delete all redial records	35	Set the baby cry level	49
<hr/>			
<b>11 Phone settings</b>	<b>36</b>		
Access the phone settings menu	36		
Set the date and time	36		
ECO mode	36		
Name the handset	36		
Set the display language	36		
Line settings	37		
<hr/>			
<b>12 Alarm clock</b>	<b>38</b>		
Access the Alarm menu	38		
Set the alarm	38		
<hr/>			
<b>13 Display settings</b>	<b>39</b>		
Access the Display menu	39		
Set the display	39		
<hr/>			
<b>14 Sound settings</b>	<b>40</b>		
Access the sounds menu	40		
Set the handset's ringtone volume	40		
Set the handset's ringtone	40		
Set the silent mode	40		
Set the key tone	40		
Set the docking tone	41		

---

<b>17 Telephone answering machine</b>	<b>50</b>
Turn on/off the answering machine	50
Through the handset	50
Through the base	50
Set the answering machine language	50
Set the answer mode	50
Announcements	51
Record an announcement	51
Listen to the announcement	51
Restore the default announcement	51
Incoming messages (ICM)	51
Listen to the incoming messages	51
From the base	52
From the handset	52
Delete an incoming message	52
From the base	52
From the handset	52
Delete all old incoming messages	52
From the base	52
From the handset	52
Call screening	52
From the base	52
Set the sound quality of the message	52
Set the ring delay	53
Remote access	53
Change the PIN code	53
Activate/deactivate the remote access	53
Access the answering machine remotely	53
Remote access commands	54

---

<b>18 Default settings</b>	<b>55</b>
----------------------------	-----------

---

<b>19 Technical data</b>	<b>56</b>
--------------------------	-----------

---

<b>20 Notice</b>	<b>57</b>
Declaration of conformity	57
Use GAP standard compliance	57
Compliance with EMF	57
Disposal of your old product and batteries	57
Trademarks	58

---

<b>21 Frequently asked questions</b>	<b>59</b>
--------------------------------------	-----------

# 1 Important safety instructions

## Power requirements

- This product requires an electrical supply of 100-240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.



## Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

## To avoid damage or malfunction



## Caution

- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- Do not allow the product to come into contact with liquids.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Always use the cables provided with the product.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not use the product in places where there are explosive hazards.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Active mobile phones in the vicinity may cause interference.
- Metallic objects may be retained if placed near or on the handset receiver.

## When using the phone as a baby monitor

### Caution

- Children should be supervised to ensure that they do not play with the appliance.
- Make sure the baby unit and the cord are always out of reach of the baby (at least 1 metre/3 feet away).
- Keep the parent unit at least 1.5 metres/5 feet away from the baby unit to prevent acoustic feedback.
- Never place the baby unit inside the baby's bed or playpen.
- Never cover the parent unit and the baby unit with anything (e.g. a towel or blanket). Always make sure the cooling vents of the baby unit are free.
- Take every precaution to make sure that your baby can sleep safely.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If you place the parent unit next to a transmitter or other DECT appliance (e.g. a DECT telephone or wireless router for the internet), the connection with the baby unit may be lost. Move the baby monitor further away from the other wireless appliances until the connection is restored.
- This baby monitor is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.

### About operating and storage temperatures



- Operate in a place where temperature is always between 0°C to +35°C (32°F to 95°F).
- Store in a place where temperature is always between -20°C and +45°C (-4° F to 113° F).
- Battery life may be shorter in low temperature conditions.

## 2 Your SE888

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### What is in the box

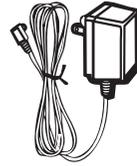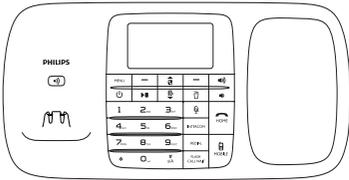

Base station




Handset\*\*



Charger\*\*

Power adapter\*\*

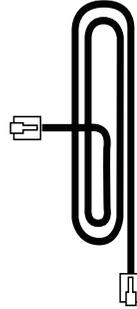

Line cord\*



Warranty



Quick start guide



CD rom


#### Note

- \* In some countries, you have to connect the line adapter into the line cord, then plug the line cord into the telephone socket.

## Note

- \*\*\* In multi-handset packs, there are additional handsets, chargers, and power adapters.

## Overview of the phone

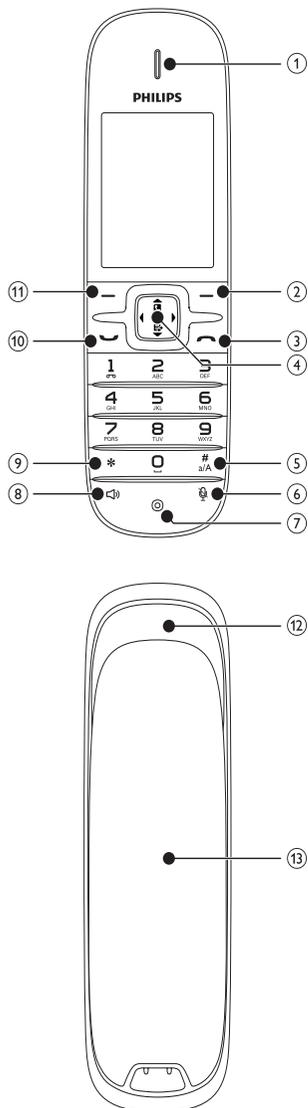


1	Earpiece	
2		- Delete text or digits. - Cancel operation. - Enter the redial list.
3		- End the call. - Exit the menu/ operation.
4		- Scroll up on the menu. - Increase the earpiece/speaker volume. - Enter the phonebook.
		- Scroll down on the menu. - Decrease the earpiece/speaker volume. - Enter the call log.
		- Move the cursor to the left/right in editing mode.
5	# s/A	- Make a predial call. - Press and hold to enter a pause - Switch to upper/ lower case during editing.
6		- Mute/unmute the microphone.
7	Microphone	
8		- It is displayed when the speaker phone is on. - Make and receive calls through the speaker.
9	*	- Set the dial mode (pulse mode or temporary tone mode).
10		- Make and receive calls.

11		<ul style="list-style-type: none"> <li>- Access the main menu.</li> <li>- Confirm option.</li> <li>- Enter the options menu.</li> <li>- View the new available event.</li> <li>- Select the function displayed on the handset screen directly above the key.</li> </ul>
12	Loudspeaker	
13	Battery door	


1		<ul style="list-style-type: none"> <li>- Find handsets</li> <li>- Enter registration mode</li> </ul>
2	<b>MENU</b>	<ul style="list-style-type: none"> <li>- Enter the main menu screen.</li> </ul>
		<ul style="list-style-type: none"> <li>- Turn answering machine on/off.</li> </ul>
3	Right soft key	<ul style="list-style-type: none"> <li>- Delete text or digits.</li> <li>- Cancel operation.</li> <li>- Select the function displayed on the screen directly above the key.</li> </ul>
		<ul style="list-style-type: none"> <li>- Play messages.</li> <li>- Stop messages playback.</li> </ul>
4		<ul style="list-style-type: none"> <li>- Scroll up on the menu.</li> <li>- Enter the phonebook.</li> </ul>
		<ul style="list-style-type: none"> <li>- Scroll down on the menu.</li> <li>- Enter the call log.</li> </ul>
5	LCD display	
6	Left soft key	<ul style="list-style-type: none"> <li>- Confirm option.</li> <li>- Enter the options menu.</li> <li>- Select the function displayed on the screen directly above the key.</li> </ul>
		<ul style="list-style-type: none"> <li>- Delete the current playback message.</li> <li>- Press and hold to delete all old messages.</li> </ul>
7		<ul style="list-style-type: none"> <li>- Increase the speaker volume.</li> </ul>
		<ul style="list-style-type: none"> <li>- Decrease the speaker volume.</li> </ul>
8	Loudspeaker	
9	 /HOME	<ul style="list-style-type: none"> <li>- Make and receive calls.</li> <li>- End the call.</li> </ul>

## Overview of the base station

### Top view

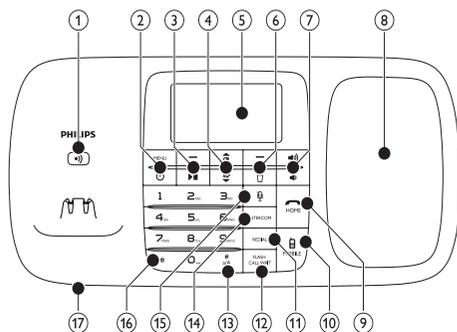

### Bottom view

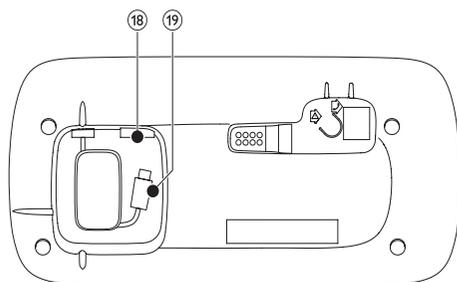

10	 /MOBILE	- Make calls through mobile phones.
11	REDIAL	- Enter redial list and dial the recent number.
12	FLASH/CALL WAIT	- Recall key (This function is network-dependent.)
13	# */A	- Press to enter a pause. - Switch between lower and upper case during text editing.
14	INTERCOM	- Make an intercom call. - Make a conference call.
15		- Mute/unmute the microphone
16	*	- Set the dial mode (pulse mode or temporary tone mode).
17	Microphone	
18	USB socket for iPhone charging	
19	Micro USB cable for mobile phone charging	

Icon	Descriptions
	<b>[Phone setup]</b> - Set the date and time, ECO mode, handset name and display language.
	<b>[Sounds]</b> - Set the ring volume, ring tone, key tone etc.
	<b>[Services]</b> - Set the auto conference, auto prefix, network type, recall time, auto clock, dial mode, register/unregister handset, call services etc. The services are network and country dependent.
	<b>[Alarm]</b> - Set date and time, alarm, alarm tone etc.
	<b>[Phonebook]</b> - Add, edit, manage phonebook entries etc.
	<b>[Call list]</b> - Displays the call history of all missed or received calls.
	<b>[Display]</b> - Set the brightness, screen saver etc.
	<b>[Baby monitor]</b> - Set the alert to other handsets and the baby cry level.
	<b>[Answer machine]</b> - Setup, listen to, delete phone messages, etc.

## Main menu icons

The following is an overview of the menu options that are available in your SE888. For detailed explanation of the menu options, see the corresponding sections in this user manual.

## Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

Icon	Descriptions
	When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low).
	When the handset is on the base station/charger, the bars keep scrolling until charging is complete.
	The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.
	It displays the link status between the handset and base station. The more bars are shown, the better the connection is.
	It flashes when there is a new missed call. It is steadily on when browsing the new missed calls in call log.
	The alarm is activated.
	The speaker is on.
	The ringer is off.
	The silent mode is on but the current time is not in the set period.
	Answering machine: it flashes when there is a new message. It displays when the telephone answering machine is turned on.
	It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log. The icon is not shown when there is no voice message.

	The Bluetooth function is activated. Number '1' indicates mobile 1 while '2' indicates mobile 2, in the active list of bluetooth device. White color means the device is in range or the service is available. Gray color means the device is added in the active list but is out of range or not available. Blank color means the corresponding active list has no device added.
	It is displayed when the baby monitor is set up.
	It is displayed when you scroll up/down a list/increase and decrease the volume.
<b>ECO</b>	The ECO mode is activated.

# 3 Get started

## ! Caution

- Make sure that you have read the safety instructions in the "Important" section before you connect and install your handset.

## Connect the base station and charger

## ! Warning

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or underside of the phone.
- Use only the supplied power adapter to charge the batteries.


## ☰ Note

- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, make sure that you install a DSL filter between the telephone line cord and the power socket. The filter prevents noise and caller ID problems caused by DSL interference. For further information about DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the base station.

- 1 Connect each end of the power adapter to:
  - the DC jack at the bottom of the base station;
  - the power socket on the wall.
- 2 Connect each end of the line cord to:
  - the telephone socket at the bottom of the base station;
  - the telephone socket on the wall.
- 3 Connect each end of the power adapter to (for multi-handset versions only):


- the DC jack at the bottom of the extra handset charger.
- the power socket on the wall.

- 4 For mobile phones with micro USB charging, connect the micro USB cable plug to the micro USB socket of the mobile phone.
- 5 For iPhone users, connect the plug of your USB charging cable (not supplied) to the USB socket at the bottom of SE888.

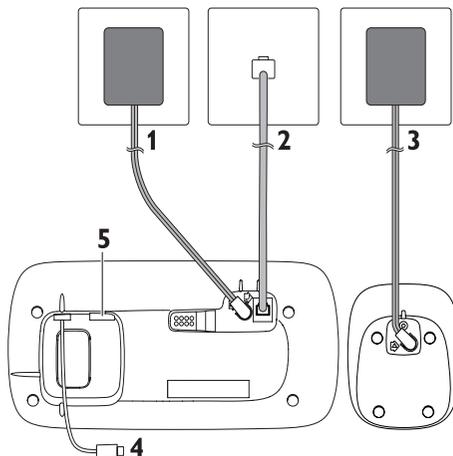

## Install the handset

The batteries are pre-installed in the handset. Pull off the battery tape from the battery door before charging.

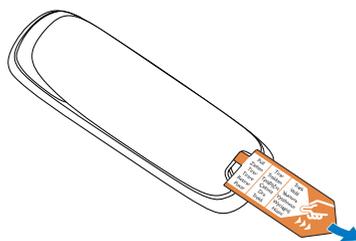

## Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.

## Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

---

## Configure your phone (country dependent)

- 1 When using your phone for the first time, you see a welcome message.
- 2 Press **[OK]**.

---

### Select the country

Select your country, then press **[OK]** to confirm.

↳ The language setting is saved.

---

### Set the date and time

#### Tip

- To set the date and time later, press **[Back]** to skip this setting.

- 1 Access the phone settings menu to set the date and time in either way:
  - On the handset, select **[Menu]** >  > **[Date & time]**, then press **[OK]** to confirm.
  - On the base station, select **[Phone setup]**, then press **[OK]** to confirm.
- 2 Select **[Set date]/[Set time]**, then press **[OK]** to confirm.

- 3 Press the numeric buttons to enter the date and time.

#### Note

- If the time is in 12-hour format, press \* on the handset/base station to select **[AM]** or **[PM]**.

- 4 Press **[OK]** to confirm.

---

### Set the date and time format

- 1 Access the phone settings menu to set the date and time in either way:
  - On the handset, select **[Menu]** >  > **[Date & time]**, then press **[OK]** to confirm.
  - On the base station, press **MENU**, select **[Phone setup]** > **[Date & time]**, then press **[OK]** to confirm.
- 2 Select **[Date format]** or **[Time format]**.
- 3 Press  /  on the handset or base station.
- 4 Select **[DD/MM/YY]** or **[MM/DD/YY]** as the date display, and **[12 Hours]** or **[24 Hours]** as the time display. Then press **[OK]** to confirm.
  - ↳ The setting is saved.

#### Note

- The date and time format setting is country-dependent.

---

### Charge the handset

Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.


↳ The handset starts charging.

## Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are charging, it is normal.

Your phone is now ready to use.

## Check the battery level

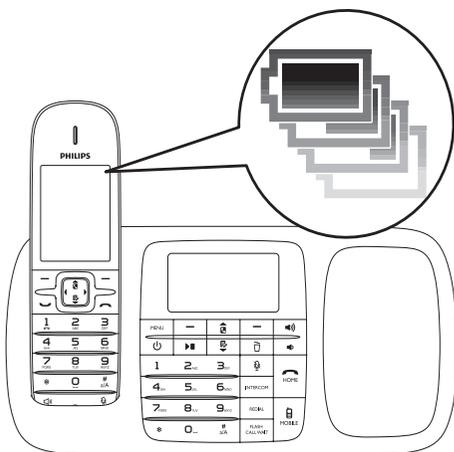

The battery icon displays the current battery level.

- |  |  |
|--|--|
|  | When the handset is off the base station/charger, the bars indicate the battery level (full, medium, and low). |
|  |  |
|  |  |
|  |  |
|  |  |
|  | When the handset is on the base station/charger, the bars flash until charging is complete.                    |
|  | The empty battery icon flashes. The battery is low and needs recharging.                                       |

If the batteries are empty, the handset turns off. If you are on the phone, you hear warning tones when the batteries are almost empty. The call gets disconnected after the warning.

## What is standby mode?

Your phone is in standby mode when it is idle. The standby screen displays the handset name and number/date and time, signal icon, and battery icon.

## Check the signal strength

- |  |  |
|--|--|
|  | It displays the link status between the handset and base station. The more bars are shown, the better the connection is. |
|  |  |
|  |  |
|  |  |
|  |  |
- Make sure that the handset is linked to the base station before you make or receive calls and carry out the functions and features.
  - If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset closer to the base station.

## 4 Bluetooth

SE888 supports Bluetooth wireless technology. You can connect it to a compatible Bluetooth device such as a computer and mobile phone. Then you can make and receive calls from your mobile phone on the SE888 handset. You can also download the phonebook and call log from your computer or mobile phone with its base station.

### Note

- Make sure that the other Bluetooth devices with which you establish a connection support Bluetooth function. See the user manual of the other devices for information.
- The Bluetooth connection is subject to interference from obstructions such as walls or other electronic devices.

## Rename your device

The name of your phone is SE888 by default. You can rename it in this way:

- 1 On the base station, press **MENU**.
- 2 Select **[Bluetooth] > [Rename Me]**, then press **[OK]** to confirm.
- 3 Edit the name, then press **[Save]** to confirm.

## Pair SE888

### Pair SE888 with your mobile phones

Make sure the Bluetooth function of the mobile phones is activated and in search status. Then you can do the pairing in this way:

- 1 On the base station, press **MENU**.
- 2 Select **[Bluetooth] > [Find Me]**.

- 3 Place the mobile phone close to the base station, then press **[OK]** to confirm.  
↳ The mobile phone name is displayed on the screen.
- 4 On the mobile phone, select SE888 and connect.
- 5 Enter the PIN code on the mobile phone, if necessary.

### Tip

- The default PIN code is 0000.

- ↳ When SE888 and the mobile phone are paired, **Ⓜ12** or **Ⓜ12** is displayed on the screen of the handset and base station.

### Note

- When the Bluetooth device list is full, remove some mobile phone names before pairing can start.
- If the name of SE888 exists in your mobile phone, you have to remove it from your mobile phone. Then you can do the pairing again.
- When pairing is successful, you can add the new mobile phone name to the active list. Remove some mobile phone names if the active list is full. See "Manage the devices list" in this chapter for information.

## Pair SE888 with your computer

Install the PC software 'ThinkLink' saved in the cd rom or at <http://www.philips.com/support>

- 1 Double click on **Setup.exe** to start the installation.
- 2 Select the display language.
- 3 After the installation is done, select **'?'** and follow the instructions to do the pairing.

## Synchronize the phonebook and call log

### Download the phonebook and update the call log from the mobile phones

#### On the base station

- 1 Make sure that the mobile phone is already connected to SE888 with Bluetooth.
- 2 On the base station, press **MENU** and select **[Bluetooth]** > **[Mobile sync]**.
- 3 Select **[Phonebook]** to download the phonebook or **[Call log]** to update the call log from the mobile phone, then press **[OK]** to confirm.
- 4 Select a mobile phone, then press **[OK]** again to confirm.
  - ↳ The phonebook and call log from the mobile phone are updated on the base station.

#### Note

- The call log from the mobile phone can be updated automatically if you select **[Call log mode]** > **[Auto]**.
- After the update is complete, the new phonebook overrides the old one.
- If there is an incoming call when phonebook/call log update is in progress, the update is suspended and resumes after the call ends.

#### On the handset

- 1 To update the phonebook, press **Ⓜ** to access the phonebook menu.
- 2 Select your mobile phone (**1** or **2**).
- 3 Press **[Update]**.
  - ↳ The phonebook from the mobile phone is updated on the base station.
- 1 To update the call log, press **☎** to access the incoming call menu.
- 2 Select **[Incoming calls]**.
- 3 Select your mobile phone (**1** or **2**).
- 4 Press **[Update]**.

- ↳ The call log from the mobile phone is updated on the base station.

### Download the phonebook from the computer

Install the PC software 'ThinkLink' saved in the cd rom or at <http://www.philips.com/support>

- 1 Double click on **Setup.exe** to start the installation.
- 2 Select the display language.
- 3 After the installation is done, select **'?**' and follow the instructions to download the phonebook from the computer.

## Manage the devices list

You can manage your Bluetooth devices list (mobile phones/computer) in this way:

- 1 On the base station, press **MENU** and select **[Bluetooth]** > **[Device list]**, then press **[OK]** to confirm.
  - ↳ The Bluetooth devices list is displayed.
- 2 Select a Bluetooth devices, press **[Option]**.
- 3 Select **[Connect]/[Disconnect]/[Delete]/[Delete all]**, then press **[OK]** to confirm.

#### Note

- You can see **[Disconnect]** in the option list only when the Bluetooth device is connected; and **[Connect]** only when the Bluetooth device is disconnected.

### Connect/Disconnect the device

- 1 On the base station, press **MENU** and select **[Bluetooth]** > **[Device list]**, then press **[OK]** to confirm.
  - ↳ The Bluetooth devices list is displayed.
- 2 Select a Bluetooth device, press **[Option]**.
- 3 Select **[Connect]/[Disconnect]**, then press **[OK]** to confirm.

- ↳ The selected Bluetooth device is connected to/disconnect from Bluetooth.

---

## Rename the device

- 1 On the base station, press **MENU**.
- 2 Select **[Bluetooth] > [Rename Me]**, then press **[OK]** to confirm.
  - ↳ The current phone name is displayed.
- 3 Edit the name, then press **[Save]** to confirm.
  - ↳ The new phone name is displayed.

---

## Delete a device/Delete all devices on the list

- 1 On the base station, press **MENU** and select **[Bluetooth] > [Device list]**, then press **[OK]** to confirm.
  - ↳ The Bluetooth device list is displayed.
- 2 Select a Bluetooth device, press **[Option]**.
- 3 Select **[Delete]/[Delete all]**, then press **[OK]** to confirm.



### Note

- If you select to delete all Bluetooth devices on the list. A confirmation message is displayed. Press **[Yes]** to confirm.

---

## Change the PIN code

- 1 On the base station, press **MENU**.
- 2 Select **[Bluetooth] > [Change PIN]**, then press **[OK]** to confirm.
- 3 Press **[Clear]** to remove the current PIN.
- 4 Enter the new PIN, then press **[OK]** to confirm.
  - ↳ The new PIN is saved.

# 5 Calls

## Note

- When the power fails, the phone cannot access emergency services.

## Tip

- Check the signal strength before you make a call or when you are in a call. For information, see "Check the signal strength" in the "Get started" section.

## Make a call

You can make a call from the land line or Bluetooth line through your mobile phones in these ways:

- Quick call
- Dial before you call
- Redial the most recent number
- Call from the redial list.
- Call from the phonebook list
- Call from the call log

## Quick call

- 1 You can make a call from the land line:
  - To make a call from the land line, press  /  on the handset or  / **HOME** on the base station.

## Note

- Make sure that the line settings are set to **[Home]** for land line. For information, see "Line settings" in the Phone settings chapter.

- 2 Dial the phone number.
  - ↳ The number is dialed out.
  - ↳ The duration of your current call is displayed.

## Tip

- If you select **[Auto]** on the handset, the idle line is pre-selected for an outgoing call, with **[Home]** as the highest priority. Then **[Mobile 1]** and **[Mobile 2]**. If you select **[Manual]**, select an icon among these three options.

## Dial before you call

- 1 Dial the phone number on the handset or base station.
  - To erase a digit, press **[Clear]**.
  - To enter a pause, press and hold **#**.
- 2 Press  /  to select the land line or Bluetooth line (  /  /  ) from which you want to make an outgoing call.
- 3 Then, you can either:
  - press  /  on the handset; or
  - press  / **HOME** or  / **MOBILE** on the base station and select a line or mobile phone to dial out the call.

## Note

- Make sure that the Line settings are set to **[Home]** for land line or **[Mobile 1]**/**[Mobile 2]** for Bluetooth line. For information, see Line settings in the Phone settings chapter.

## Tip

- If you select **[Auto]** on the handset, the idle line is pre-selected for an outgoing call, with **[Home]** as the highest priority. Then **[Mobile 1]** and **[Mobile 2]**. If you select **[Manual]**, select an icon among these three options.

## Redial the most recent number

- 1 Press  on the handset.
  - ↳ The redial list is displayed and the most recent number is selected.
- 2 Press **[OK]**.

- ↳ The most recent number is then dialed out.

---

## Call from the redial list

You can make a call from the redial list.

### Tip

- For information, see “Redial a call” in the “Redial list” section.

---

## Call from the phonebook

You can make a call from the phonebook list.

### Tip

- For information, see “Call from the phonebook” in the “Phonebook” section.

---

## Call from the call log

You can return a call from the received or missed call log.

### Tip

- For information, see “Return a call” in the Call log section.

### Note

- The talk time of your current call is displayed in the call timer.

### Note

- If you hear warning tones, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

---

## End a call

You can end a call in these ways:

- Press  on the handset or  / **HOME** on the base station; or
- Place the handset to the base station.

---

## Answer a call

- When there is an incoming call from the land line, press  /  on the handset or  / **HOME** on the base station to answer the call.
- When there is an incoming call from the Bluetooth line, press  /  on the handset or  / **MOBILE** on the base station to answer the call.
- When there are incoming calls from the land line and Bluetooth line at the same time, press  /  on the handset/base station to select a call, then,
  - on the handset, press  /  ; or
  - on the base station, press  / **HOME** or  / **MOBILE** to pick up one of the calls.

### Tip

- The LED indicator in the  / **HOME** or  / **MOBILE** flashes to indicate if the incoming call is from a land line or Bluetooth lines.

### Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.

### Tip

- When you miss a call, a notification message appears.

---

## Divert the incoming call to the answering machine

Press  on the handset or base station when receiving a call.

---

## Turn off the ringer for all incoming calls

Press  on the handset or base station.  
↳ The ringer is off.

---

## Adjust the volume during a call

Press  /  on the handset or  /  on the base station to change the volume during a call.

---

## Mute the microphone

- 1 Press  on the handset or base station during a call.  
↳ **[Mute on]** is displayed.  
↳ The caller cannot hear you, but you can still hear the caller's voice.
- 2 Press  again on the handset or base station to unmute the microphone.  
↳ You can now communicate with the caller.

---

## Turn the speaker on or off

Press  on the handset.

---

## Make a second call

### Note

- This service is network-dependent.

- 1 You can make a second call in these ways:
  - Press  on the handset or **FLASH/ CALL WAIT** on the base station during a call.
  - The first call is put on hold.
  - Press **[Option]** and select **[Start 2nd call]**, then press **[OK]** to confirm.
  - The current call is put on hold.
- 2 Dial the second number.  
↳ The number displayed on the screen is dialed out.

### Tip

- For information of how to make a call through the land line or the Bluetooth line, see the section on "Make a call".

---

## Answer a second call

### Note

- It is a country-dependent setting.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press  and  on the handset or **FLASH/ CALL WAIT** and **2<sub>acc</sub>** on the base station to answer the call.  
↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press  and **1** or **FLASH/ CALL WAIT** and **1** on the base station to end the current call and answer the first call.

---

## Toggle between two calls on the handset and base station

You can toggle your calls on the handset or base station in these ways:

- Press  and  on the handset or press **FLASH/CALL WAIT** and **2<sub>ARC</sub>** on the base station.
- Press **[Option]** and select **[Switch calls]**, then press **[OK]** again to confirm.
  - ↳ The current call is put on hold, and you are now connected to the other call.
- Press  and  on the handset or **FLASH/CALL WAIT** and **3<sub>OFF</sub>** on the base station.
- Press **[Option]**, select **[Conference]** and then press **[OK]** to confirm.
  - ↳ The two calls are combined and a conference call is established.

## Toggle between two calls on the land line and Bluetooth line

You can toggle the calls between the land line and Bluetooth line in this way:

- 1 Make an outgoing call with the land line.
- 2 When there is an incoming call from the Bluetooth line, press **[Option]**, then select a mobile phone to pick up the call.
- 3 Press **[Option]** to access the menu.
  - ↳ In the options menu, select to switch or exit the two calls from the land line and the Bluetooth line.

### Note

- For some mobile phones, when you pick up the call from the mobile phone, the Bluetooth is disconnected. For further information, check with the mobile phone dealer.

## Make a conference call with external callers

### Note

- This service is network-dependent. Check with the service provider for additional charges.

When you are connected to two calls, you can make a conference call on the handset or base station in these ways:

## Make a conference call on the land line and Bluetooth line

You can make a two-line conference call through the land line and mobile line in this way:

- 1 Make an outgoing call with the land line.
- 2 When there is an incoming from the Bluetooth line, press **[Option]**, then select a mobile phone to answer the call.
- 3 Press **[Option]** to access the menu.
  - ↳ In the options menu, select to start a conference call with the land line and Bluetooth line.

## 6 Intercom and conference calls

An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation among you, another handset user and outside callers.

---

### Make a call to another handset

#### Note

- If the base station only has 2 registered handsets, press and hold \* on the handset or press **INTERCOM** on the base station to make a call to another handset.

- 1 Press and hold \* on the handset or press **INTERCOM** on the base station.  
↳ The handsets available for intercom are displayed.
- 2 Select a handset, then press [OK] to confirm.  
↳ The selected handset rings.  
↳ The intercom is established.
- 3 Press [Cancel] to cancel or end the intercom call.

#### Note

- If the selected handset is occupied in a call, you hear a busy tone.

---

### While you are on the phone

You can go from one handset to another during a call:

- 1 Press and hold \* on the handset or press **INTERCOM** on the base station.  
↳ The current caller is put on hold.

- 2 Select a handset number, then press [OK] to confirm.  
↳ Wait for the other side to answer your call.

---

### Toggle between calls

Press and hold \* on the handset or **INTERCOM** on the base station to switch between the outside call and the intercom call.

---

### Transfer a call

- 1 Press and hold \* on the handset or press **INTERCOM** on the base station during a call.  
↳ The handsets available for intercom are displayed.
- 2 Select a handset number, then press [OK] to confirm.
- 3 Press  on the handset or  /HOME on the base station when the other side answers your call.  
↳ The call is now transferred to the selected handset.

---

### Make a conference call

A 3-way conference call is a call between you, another handset user and outside callers. It requires two handsets to share the same base station.

---

### During an external call

- 1 Press and hold \* on the handset or press **INTERCOM** on the base station to initiate an internal call.  
↳ The handsets available for intercom are displayed.  
↳ The external caller is put on hold.

- 2 Select or enter a handset number; then press **[OK]** to confirm.  
↳ The selected handset rings.
- 3 Press  on the selected handset or **INTERCOM** on the base station.  
↳ The intercom is established.
- 4 Press **[Conf]** .  
↳ You are now in a 3-way conference call with an external call and a selected handset/base station.
- 5 Press  on the handset or  /**HOME** on the base station to end the conference call.

#### Note

- If **[Services]** > **[Conference]** is set to **[Auto]**, press **[Conf]** to join an ongoing conference with another handset.

---

## During the conference call

You can press and hold \* on the handset or press **INTERCOM** on the base station to:

- put the external call on hold and go back to the internal call.  
↳ The external call is put on hold.
- toggle between the external and internal call.
- establish the conference call again.

#### Note

- If a handset/the base station hangs up during the conference call, the other handset/base station remains connected to the external call.

# 7 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

## Enter text and numbers

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press **[Clear]** to delete the character. Press **◀ / ▶** to move the cursor left and right.

Key	Upper case characters (for English/French/ German/ Italian/Turkish/Portuguese/ Spanish/Dutch/Danish/Finnish/ Norwegian/ Swedish)
0	[Sp].0,/;:''!i?i*+-% \^~
1	1@_#=<>()&£\$¥[ ]{}¤§...
2	A B C 2 Å Ä Æ Á Ā Ą Ā Ç
3	D E F 3 È É Ê Ë Δ Φ
4	G H I 4 Ğ Ĩ İ Ī Γ
5	J K L 5 Λ
6	M N O 6 Ñ Ó Ô Õ Ö
7	P Q R S 7 Ş Π Θ Σ
8	T U V 8 Ù Ú Û Ü
9	W X Y Z 9 Ø Ω Ξ Ψ

Key	Lower case characters (for English/French/ German/ Italian/Turkish/Portuguese/ Spanish/Dutch/Danish/ Finnish/Norwegian/ Swedish)
0	[Sp].0,/;:''!i?i*+-% \^~
1	1@_#=<>()&€£\$¥ [ ]{}¤§...
2	a b c 2 à á â ã ä å ç
3	d e f 3 è é ê ë Δ Φ
4	g h i 4 ğ ĩ İ ĩ Γ
5	j k l 5 λ
6	m n o 6 ñ ó ô õ ö ò
7	p q r s 7 ş π θ σ
8	t u v 8 ù ú û ü μ
9	w x y z 9 ø Ω Ξ Ψ

Key	Upper case characters (for Greek)
0	[Sp].0,/;:''!i?i*+-% \^~
1	1@_#=<>()&£\$ ¥ [ ]{}¤§...
2	A B Γ 2 A B C Æ Å Ç
3	Δ E Z 3 D E F É
4	H Θ I 4 G H I
5	K Λ M 5 J K L
6	N Ξ O 6 M N O Ñ Ö
7	Π Ρ Σ 7 P Q R S
8	T Υ Φ 8 T U V Ü
9	X Ψ Ω 9 W X Y Z Ø

Key	Lower case characters (for Greek)
0	[Sp].0,/;:''!i?i*+-%\^~
1	1@_#=<>()&€£\$¥[]{}α§...
2	αβγ2abcàæää
3	δεζ3defèé
4	ηθι4ghii
5	κλμ5jklλ
6	νξο6mnoñöò
7	πρσς7pqrσβ
8	τυφ8tuvùü
9	χψω9wxyzø

Key	Upper case characters (for Romanian/Polish/Czech/Hungarian/Slovakian/Slovenian/Croatian)
0	[Sp].0,/;:''!i?i*+-%\^~
1	1@_#=<>()&£\$¥[]{}α§...
2	ABC2ĂÆÁĀĂĂAÇĆĈ
3	DEF3ĎĎĚĚÉÉΔΦ
4	GHI4ÍΓ
5	JKL5ΛŁŁ
6	MNO6ŃŃŃŃÓÖÖ
7	PQRS7ŘŚŜŜΠΘΣ
8	TUV8ŤŤÚÚÛÛŮŮ
9	WXYZ9ÝŽŽŽŦØΩΞΨ

Key	Lower case characters (for Romanian/Polish/Czech/Hungarian/Slovakian/Slovenian/Croatian)
0	[Sp].0,/;:''!i?i*+-%\^~
1	1@_#=<>()&€£\$¥[]{}α§...
2	abc2àâæáăääąćč
3	def3ďđěěèéęΔΦ
4	ghi4íΓ
5	jkl5Λ
6	mno6ňňóöò
7	pqrσ7řśśΠΘΣβ
8	tuv8ťťúúûüůů
9	wxyz9ýžřøΩΞΨ

Key	Upper case characters (for Greek)
0	[Sp].0,/;:''!i?i*+-%\^~
1	1@_#=<>()&£\$¥[]{}α§...
2	ΑΒΓϚĆĈ2ΑΒCÆĂĂÇ
3	ΔΕΖ3JĐ3DEFÉΔΦ
4	ИЙКΛΛ4GHIG
5	ΜΗΟΠΉ5JKLL
6	РСТУϚ6MNOŃŃ
7	ФХЦЧ□7PQRSΠΘΣ
8	ШЩЪЫ8TUVÛ
9	ЬЭЮЯŽ9WXYZØΩΞΨ

Key	Lower case characters (for Serbian/Bulgarian)
0	[Sp].0,/;:''!i?i*+ -%\^~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } α § ...
2	a b c 2 à æ ä å
3	d e f 3 è é Δ Φ
4	g h i 4 ì Γ
5	j k l 5 Λ
6	m n o 6 ñ ö ò
7	p q r s 7 Π Θ Σ β
8	t u v 8 ù ü
9	x y z 9 ø Ω Ξ Ψ

## Switch between the upper case and lower case

By default, the first letter of each word in a sentence is upper case and the rest is lower case. Press **Fn** to switch between the upper case and lower case letters.

# 8 Phonebook

This phone has a phonebook that stores up to 200 records. Each record can have a name up to 14 characters long and a number up to 24 digits long.

You can access the phonebook from the handset or base station. The base station can maintain multiple phonebook directories and can transfer the phonebook from each mobile phone and computer. You can access any phonebook entry and use that entry to make a call on the land line or either of the two mobile phones.

---

## Access the phonebook directories

### On the handset

Press **Ⓜ** or select **[Menu] > ☰ > [OK]** to access the phonebook directories.

### On the base station

Press **Ⓜ**.

---

## Direct access memory

You have 2 direct-access memories (keys 1 and 2) on the home phonebook directory. To dial the saved phone number automatically, press and hold on the keys in standby mode.

Depending on your country, Keys 1 and 2 are preset to **[1\_voicemail]** (voice mail number) and **[2\_info svc]** (information service number) of your network operator respectively.

---

## View the phonebook

### Tip

- You can view the phonebook on either the handset or base station only.

- 1 Access the phonebook directories on the handset/base station (see “Access the phonebook directories” in the previous paragraph in this chapter).
- 2 Press **Ⓜ** / **☰** on the handset or base station to scroll through the phonebook entries.
- 3 Select a contact and view the detailed information.

---

## Download the phonebook from the mobile phone or computer

### Tip

- For information, see “Synchronize the phonebook and call log” in the “Bluetooth” section.

---

## Search a record

You can search the phonebook records in these ways:

- Scroll the contact list.
- Enter the first character of the contact.

---

## Scroll the contact list

You can view the phonebook by scrolling the contact list.

### Tip

- See “View the phonebook” in the previous paragraph in this chapter.

---

## Enter the first character of a contact

- 1 Access the phonebook directories on the handset/base station (see "Access the phonebook directories" in the previous paragraph in this chapter).
- 2 Press the alphanumerical key that matches the character.  
↳ The first entry that starts with this character is displayed.

---

## Call from the phonebook

- 1 Access the phonebook directories on the handset/base station (see "Access the phonebook directories" in the previous paragraph in this chapter).
- 2 Select a contact.
- 3 You can make the call in either way:
  - Press  or  on the handset; or
  - Press  /HOME or  /MOBILE on the base station.
- 4 Then select a line to make the call.

 **Tip**

- If you select **[Auto]** on the handset, the idle line is pre-selected for an outgoing call, with **[Home]** as the highest priority. Then **[Mobile 1]** and **[Mobile 2]**. If you select **[Manual]**, select an icon among these three options.

---

## Access the phonebook during a call

- 1 Press **[Option]** and select **[Phonebook]**.
- 2 Press **[OK]** to confirm.
- 3 Select a contact, then press **[OK]** to confirm.  
↳ The number can be viewed.

---

## Add a record

 **Note**

- If your phonebook memory is full, a notification message is displayed on the handset. Delete some records to add new ones.

- 1 Access the phonebook directories on the handset/base station (see "Access the phonebook directories" in the previous paragraph in this section).
- 2 Select **[Option]** > **[Add new]**, then press **[OK]** to confirm.
- 3 Enter the name, then press **[OK]** to confirm.
- 4 Enter the number; then press **[Save]** to confirm  
↳ Your new record is saved.

 **Tip**

- Press and hold  to insert a pause.

 **Note**

- The phonebook only saves new number entries.

 **Tip**

- For information on how to edit the numbers and name, see the chapter on "Text and numbers".

---

## Edit a record

- 1 Access the phonebook directories on the handset/base station (see "Access the phonebook directories in the previous paragraph in this chapter).

- 2 Select a contact, then select **[Option]** > **[Edit]**, then press **[OK]** to confirm.
- 3 Edit the name, then press **[OK]** to confirm.
- 4 Edit the number, then press **[Save]** to confirm.  
↳ The record is saved.



#### Tip

- Press **[Clear]** to delete the character. Press **◀ / ▶** to move the cursor left and right.

---

## Set the melody

You can personalize the melody played when someone in the phonebook calls you.



#### Note

- Make sure that you have subscribed to the caller line identification service before you can use this feature.

- 1 Access the phonebook directories on the handset/base station (see “Access the phonebook directories” in the previous paragraph of this chapter).
- 2 Select a contact, then press **[Option]** > **[Select melody]**.
- 3 Press **[OK]** to set or change the melody for the contact.
- 4 Select a melody for the contact, then press **[OK]** to confirm.  
↳ The melody is set.

---

## Delete a record

- 1 Access the phonebook directories on the handset/base station (see “Access the phonebook directories” in the previous paragraph in this chapter).

- 2 Select a contact, then select **[Option]** > **[Delete]**. Press **[OK]** to confirm.  
↳ A confirmation request is displayed on the handset.
- 3 Select **[OK]** to confirm.  
↳ The record is deleted.

---

## Delete all records

- 1 Access the phonebook directories on the handset/base station (see “Access the phonebook directories” in the previous paragraph in this chapter).
- 2 Select a contact, then select **[Option]** > **[Delete all]**. Press **[OK]** to confirm.  
↳ A confirmation request is displayed on the handset.
- 3 Press **[OK]** to confirm.  
↳ All records are deleted.

# 9 Call log

The call log stores the call history of all missed or received calls. The incoming call history includes the name and number of the caller, call time, and date. This feature is available if you have registered to the caller ID service with your service provider.

You can access the call log from the land line or either of the two mobile phones through the handset and base station.

Your phone can store up to 50 call records. The call log icon on the handset and base station flashes to remind you of any unanswered calls. If the caller allows the display of his identity, you can view his name or number. The call records are displayed in chronological order with the most recent received call at the top of the list.

## Note

- Make sure that the number in the call list is valid before you can call back directly from the call list.

The following icon shown on the screen informs you if you have missed calls.

	It flashes when there is a new missed call.
	It is steadily on when browsing the new missed calls in call log.

## Access the call records

On the handset,

- 1 Press  or select **[Menu]** > , then press **[OK]** to confirm.
- 2 Select **[Incoming calls]**.
- 3 Select the call log from the land line or Bluetooth line (  /  /  ).  
↳ The call log is displayed.

## Tip

- Press **[Update]** to update the call log.

On the base station,

- 1 Press .
- 2 Select the call log from the land line ( **[Home]** ) or Bluetooth line ( **[Mobile 1]** or **[Mobile 2]** ).  
↳ The call log is displayed.

## View the call records

- 1 Access the call log menu on the handset/ base station (see “Access the call records” in the previous paragraph in this chapter).
- 2 Select a record, then press **[OK]** to view the available information.

## Download the phonebook from the mobile phone or computer

## Tip

- For information, see “Synchronize the phonebook and call log” in the “Bluetooth” section.

## Return a call

- 1 Access the call log menu on the handset/ base station (see “Access the call records” in the previous paragraph in this chapter).
- 2 Select a record on the list.
- 3 To make a call, either:
  - Press  or  on the handset; or
  - Press  / **HOME** or  / **MOBILE** on the base station.
- 4 Then select a line to make the call.

## Tip

- If you select **[Auto]** on the handset, the idle line is pre-selected for an outgoing call, with **[Home]** as the highest priority. Then **[Mobile 1]** and **[Mobile 2]**. If you select **[Manual]**, select an icon among these three options.

---

## Save a call record to the phonebook

- 1 Access the call log menu on the handset/ base station (see “Access the call records” in the previous paragraph in this chapter).
- 2 Select a record, then press **[Option]**.
- 3 Select **[Save]**, then press **[OK]** to confirm.
- 4 Enter and edit the name, then press **[OK]** to confirm.
- 5 Enter and edit the number; then press **[Save]** to confirm.
  - ↳ The record is saved.

---

## Delete a call record

- 1 Access the call log menu on the handset/ base station (see “Access the call records” in the previous paragraph in this chapter).
- 2 Select a record, then press **[Option]** to confirm.
- 3 Select **[Delete]**, then press **[OK]** to confirm.
  - ↳ A confirmation requests is displayed on the handset.
- 4 Press **[OK]** to confirm.
  - ↳ The record is deleted.

---

## Delete all call records

- 1 Access the call log menu on the handset/ base station (see “Access the call records” in the previous paragraph in this chapter).
- 2 Select **[Option]** > **[Delete all]**, then press **[OK]** to confirm.
  - ↳ A confirmation request is displayed on the handset.
- 3 Press **[OK]** to confirm.
  - ↳ All records are deleted.

# 10 Redial list

You can access the redial list through the handset or base station. The redial list stores the call history of dialed calls. It includes the names and/or numbers you have called. This phone can store up to 20 redial records.

---

## Access the redial list

On the handset,

- 1 Press .
- 2 Select the redial list from the land line or Bluetooth line (  /  /  ).  
↳ The redial list is displayed.

On the base station,

- 1 Press **REDIAL** .
- 2 Select the redial list from the land line ( **[Home]** ) or Bluetooth line ( **[Mobile 1]** or **[Mobile 2]** ).  
↳ The redial list is displayed.

---

## Redial a call

- 1 Access the redial list on the handset/base station (see “Access the redial list” in the previous paragraph in this chapter).
- 2 Select the record you want to call.
- 3 You can make a call in either way:
  - Press  or  on the handset; or
  - Press  / **HOME** or  / **MOBILE** on the base station .
- 4 Then select a line to make the call.



Tip

- If you select **[Auto]** on the handset, the idle line is pre-selected for an outgoing call, with **[Home]** as the highest priority. Then **[Mobile 1]** and **[Mobile 2]**. If you select **[Manual]**, select an icon among these three options.

---

## Save a redial record to the phonebook

- 1 Access the redial list on the handset/base station (see “Access the redial list” in the previous paragraph in this chapter).
- 2 Select a record, then press **[Option]** to confirm.
- 3 Select **[Save number]**, then press **[OK]** to confirm.
- 4 Enter and edit the name, then press **[OK]** to confirm.
- 5 Enter and edit the number; then press **[Save]** to confirm.  
↳ The record is saved.

---

## Delete a redial record

- 1 Access the redial list on the handset/base station (see “Access the redial list” in the previous paragraph in this chapter).
- 2 Select a record, then press **[Option]** to confirm.
- 3 Select **[Delete]**, then press **[OK]** to confirm.  
↳ A confirmation request is displayed on the handset.
- 4 Press **[OK]** to confirm.  
↳ The record is deleted.

---

## Delete all redial records

- 1 Access the redial list on the handset/base station (see “Access the redial list” in the previous paragraph in this chapter).
- 2 Select **[Option]** > **[Delete all]**, then press **[OK]** to confirm.
  - ↳ A confirmation request is displayed on the handset.
- 3 Press **[OK]** to confirm.
  - ↳ The record is deleted.

# 11 Phone settings

You can customize the settings to make it your own phone.

---

## Access the phone settings menu

### On the handset

Select **[Menu]** > , then press **[OK]** to confirm.

### On the base station

- 1 Press **MENU**.
- 2 Select **[Phone setup]**, then press **[OK]** to confirm.

---

## Set the date and time

For information, see “Set the date and time” and “Set the date and time format” in the “Get started” section.

---

## ECO mode

The **ECO** mode reduces the transmission power of the handset and base station.

- 1 Access the “Phone settings” menu on the handset or base station (see “Access the phone settings menu” in the previous paragraph in this chapter).
- 2 Select **[Eco mode]**, then press **[OK]** to confirm.

- 3 Select **[On]/[Off]**, and press **[OK]** to confirm.
  - ↳ The setting is saved.
  - ↳ **ECO** is displayed in standby mode.

---

### Note

- When **ECO** is activated, the connection range between the handset and the base station can be reduced.

---

## Name the handset

The name of the handset can be up to 14 characters. It is displayed on the handset screen in standby mode.

- 1 Access the “Phone settings” menu on the handset or base station (see “Access the phone settings menu” in the previous paragraph in this chapter).
- 2 Select **[Phone name]**, then press **[OK]** to confirm.
- 3 Enter or edit the name. To erase a character, select **[Clear]**.
- 4 Press **[Save]** to confirm.
  - ↳ The setting is saved.

---

## Set the display language

---

### Note

- This feature only applies to models with multiple-language support.
- Languages available for selection vary from country to country.
- You can set a different language separately on the handset and base station. When you change the display language on the handset, it does not mean the display language on the base station is changed as well.

- 1 Access the “Phone settings” menu on the handset or base station (see “Access

the phone settings menu" in the previous paragraph in this chapter).

- 2 Select [**Language**], then press [**OK**] to confirm.
- 3 Select a language, then press [**OK**] to confirm.  
↳ The setting is saved.

---

## Line settings

You can select to access the land line or the Bluetooth lines.

- 1 Access the "Phone settings" menu on the handset or base station (see "Access the phone settings menu" in the previous paragraph in this chapter).
- 2 Select [**Line settings**], then press [**OK**] to confirm.
- 3 Select a new setting, then press [**OK**] to confirm.  
↳ The setting is saved.



### Tip

- If you select [**Auto**] on the handset, the idle line is pre-selected for an outgoing call, with [**Home**] as the highest priority. Then [**Mobile 1**] and [**Mobile 2**]. If you select [**Manual**], select an icon among these three options.

# 12 Alarm clock

Your phone has a built-in alarm clock. Check the information in the following paragraphs to set your alarm clock.

---

## Access the Alarm menu

### On the handset

Select **[Menu]** > , then press **[OK]** to confirm.

### On the base station

- 1 Press **MENU**.
- 2 Select **[Alarm]**, then press **[OK]** to confirm.

---

## Set the alarm

- 1 Access the "Alarm" menu on the handset or base station (see "Access the alarm menu" in the previous paragraph in this chapter).
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.
- 3 Select **[Alarm time]**, then press **[OK]** to confirm.
- 4 Enter an alarm time, then press **[OK]** to confirm.
- 5 Select **[Repetition]**, then press **[OK]** to confirm.
- 6 Select an alarm occurrence, then press **[OK]** to confirm.

- 7 Select **[Alarm tone]**, then press **[OK]**.
- 8 Select a tone from options, then press **[OK]** to confirm.  
↳ The alarm is set and  is displayed on the screen.



### Tip

- Press \* to switch between **[AM]/[PM]**.

# 13 Display settings

You can change the brightness of the display, color theme, and screen saver of the phone.

---

## Access the Display menu

### On the handset

Select **[Menu]** > , then press **[OK]** to confirm.

---

## Set the display

- 1 Access the "Display settings" menu on the handset (see "Access the Display settings menu" in the previous paragraph in this chapter).
- 2 Select **[Display]**, then press **[OK]** to confirm.
- 3 Select **[Brightness]/[Clock]/[Screen saver]**, then press **[OK]** to confirm.
- 4 Select an option, then press **[OK]** to confirm.

# 14 Sound settings

You can customize the sound settings of your phone.

---

## Access the sounds menu

### On the handset

Select **[Menu]** > , then press **[OK]** to confirm.

### On the base station

- 1 Press **MENU**.
- 2 Select **[Sounds]**, then press **[OK]** to confirm.

---

## Set the handset's ringtone volume

You can select among 5 ringtone volume levels or **[OFF]**.

- 1 Access the "Sounds" menu on the handset/base station (see "Access the sounds menu" in the previous paragraph in this chapter).
- 2 Select **[Ring volume]**, then press **[OK]** to confirm.
- 3 Select a volume level, then press **[OK]** to confirm.  
↳ The setting is saved.



### Tip

- To turn the ringtone off, press and hold  in standby mode. Then  is displayed on the screen.

---

## Set the handset's ringtone

You can select from 15 ringtones.

- 1 Access the "Sounds" menu on the handset/base station (see "Access the sounds menu" in the previous paragraph in this chapter).
- 2 Select **[Ring tones]**, then press **[OK]** to confirm.
- 3 Select a ringtone, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Set the silent mode

You can set your phone to silent mode and enable the silent mode for a specified duration. When the silent mode is activated, your phone does not ring or send any alerts or sound.



### Note

- When you press  to find your handset, or when you activate the alarm, your phone still sends an alert even when the silent mode is activated.

- 1 Access the "Sounds" menu on the handset/base station (see "Access the sounds menu" in the previous paragraph in this chapter).
- 2 Select **[Silent mode]**, then press **[OK]** to confirm.
- 3 Select **[On]/[Off]**, then press **[OK]** to confirm.
- 4 Select **[Start & end]**, then press **[OK]** to confirm.
- 5 Set the start time and end time of the silent mode, then press **[OK]** to confirm.  
↳ The setting is saved.  
↳  is displayed.

---

## Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Access the "Sounds" menu on the handset/ base station (see "Access the sounds menu" in the previous paragraph in this chapter).
- 2 Select [**Key tone**], then press [**OK**] to confirm.
- 3 Select [**On**]/[**Off**], then press [**OK**] to confirm.  
↳ The setting is saved.

---

## Set the docking tone

Docking tone is the sound made when you place the handset on the base station or charger:

- 1 Access the "Sounds" menu on the handset/ base station (see "Access the sounds menu" in the previous paragraph in this chapter).
- 2 Select [**Docking tone**], then press [**OK**] to confirm.
- 3 Select [**On**]/[**Off**], then press [**OK**] to confirm.  
↳ The setting is saved.

---

## Set the sound profile

You can set the sound in the earpiece among 3 different profiles.

- 1 Access the "Sounds" menu on the handset/ base station (see "Access the sounds menu" in the previous paragraph in this chapter).
- 2 Select [**My sound**], then press [**OK**] to confirm.
- 3 Select your preferred profile, then press [**OK**] to confirm.  
↳ The setting is saved.

# 15 Services

The phone supports a number of features that help you handle and manage the calls. You can access the "Services" menu through the handset or base station.

---

## Access the services menu

### On the handset

Select **[Menu]** > , then press **[OK]** to confirm.

### On the base station

- 1 Press **MENU**.
- 2 Select **[Services]**, then press **[OK]** to confirm.

---

## Auto conference

To join an external call with another handset, press .

---

### Activate/Deactivate auto conference

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Conference]**, then press **[OK]** to confirm.
- 3 Select **[Auto]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Manage the carrier code

### Note

- This feature only applies to models with carrier code support.

You can define a carrier code (up to 5 digits). This carrier code is automatically removed from an incoming call if it matches with the code you define. Then the phone number is saved in the call log without a carrier code.

---

### Activate auto removal of the carrier code

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Carrier code]**, then press **[OK]** to confirm.
- 3 Enter the carrier code, then press **[OK]** to confirm.  
↳ The setting is saved.

---

### Deactivate auto removal of the area code

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Carrier code]**, then press **[OK]** to confirm.
- 3 Press **[Clear]** to delete all the digits.
- 4 Press **[OK]** to confirm.  
↳ The setting is saved.

---

## Manage the area code

### Note

- This feature only applies to models with area code support.

You can define an area code (up to 5 digits). This area code is automatically removed from an incoming call if it matches with the code you define. Then the phone number is saved in the call log without an area code.

---

### Activate auto removal of the area code

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Area code]**, then press **[OK]** to confirm.
- 3 Enter the area code, then press **[OK]** to confirm.  
↳ The setting is saved.

---

### Deactivate auto removal of the area code

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Area code]**, then press **[OK]** to confirm.
- 3 Press **[Clear]** to delete all the digits.
- 4 Press **[OK]** to confirm.  
↳ The setting is saved.

---

## Auto prefix

This feature checks and formats your outgoing call number before it is dialed out. The prefix

number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out.

### Note

- The maximum length of a detect number is 5 digits. The maximum length of an auto prefix number is 10 digits.

---

### Set auto prefix

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Auto prefix]**, then press **[OK]** to confirm.
- 3 Enter the detect number, then press **[OK]** to confirm.
- 4 Enter the prefix number, then press **[OK]** to confirm.  
↳ The setting is saved.

### Note

- To enter a pause, press and hold **[#]**.

### Note

- If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls.

### Note

- The feature is unavailable if the dialed number starts with \* and #.

---

## Network type

### Note

- This feature only applies to models with network type support.

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Network type]**, then press **[OK]**.
- 3 Select a network type, then press **[OK]**.  
↳ The setting is saved.

---

## Select the recall duration

Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: **[Short]**, **[Medium]** and **[Long]**. The number of available options varies with different countries. For details, consult your service provider.

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Recall time]**, then press **[OK]** to confirm.
- 3 Select an option, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Dial mode

### Note

- This feature only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

---

## Set the dial mode

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Dial mode]**, then press **[OK]** to confirm.
- 3 Select a dial mode, then press **[OK]** to confirm.  
↳ The setting is saved.

### Note

- If your phone is in pulse dial mode, press \* during a call for temporary tone mode. Digits entered for this call are then sent out as tone signals.

---

## First ring

If you have subscribed to the caller ID service with your service provider, your phone can cancel the first ring before the caller ID is displayed on the screen. After the phone is reset, it can detect automatically if there is a caller subscription and start to cancel the first ring. You can change this setting to suit your preference. This feature only applies to models with first ring support.

---

## Turn the first ring on/off

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[First ring]**, then press **[OK]** to confirm.

- 3 Select **[On]/[Off]**, press **[OK]** to confirm.  
↳ The setting is saved.

#### Note

- To reset the first ring status, go to the reset menu.

---

## Auto clock

#### Note

- This service is network-dependent.

#### Note

- Make sure that you have the caller ID service before you have this feature.

It synchronizes the date and time on your phone with the public switched telephone network (PSTN) automatically. To synchronize the date, make sure that the current year is set.

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Auto clock]**, then press **[OK]** to confirm.
- 3 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Register the handsets

You can register additional handsets to the base station. The base station can register up to 5 handsets.

---

## Auto registration

Place the unregistered handset on the base station.

- ↳ The handset detects the base station and registers automatically.
- ↳ Registration is completed in less than 2 minutes. The base station automatically assigns a number to the handset.

---

## Manual registration

If auto registration fails, register your handset manually to the base station.

- 1 Access the "Services" menu on the handset (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Register]**, then press **[OK]** to confirm.
- 3 Press and hold **•••** on the base station for 5 seconds until you hear a confirmation beep.
- 4 Enter the system PIN. Press **[Clear]** to make corrections.
- 5 Press **[OK]** to confirm the PIN.  
↳ Registration is completed in less than 2 minutes. The base automatically assigns a handset number to the handset.

#### Note

- If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.

#### Note

- The preset PIN is 0000. No change can be made on it.

---

## Unregister the handsets

If two handsets share the same base station, you can unregister a handset with another handset.

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Unregister]**, then press **[OK]** to confirm.
- 3 Enter the system PIN. Press **[Clear]** to make corrections.
- 4 Select the handset number to be unregistered.
- 5 Press **[OK]** to confirm.  
↳ The handset is unregistered.

### Tip

- The handset number is displayed beside the handset name in standby mode.

### Note

- The preset PIN is 0000. No change can be made on it.

---

## Call services

The call services are network and country dependent. Contact your service provider for information.

### Note

- For the call services to work properly, make sure that the activation and/or deactivation codes are correctly entered.

---

## Call forward

You can divert your calls to another phone number. You can select among 3 options:

- **[Call forward]**: divert all incoming calls to another number.
- **[Call fwd busy]**: divert calls when the line is busy.
- **[Call fwd unans]**: divert calls when no one answers.

---

## Activate/Deactivate call forward

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Call Services]** > **[Call forward]/[Call fwd busy]/[Call fwd unans]**
- 3 Select **[Activate]/[Deactivate]**, then press **[OK]** to confirm.
- 4 Enter the telephone number.  
↳ The setting is saved.

---

## Edit the activation/deactivation code

You can edit the prefix and suffix to the call forward codes.

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Call Services]** > **[Call forward]/[Call fwd busy]/[Call fwd unans]**, then press **[OK]** to confirm.
- 3 Select **[Change code]**, then press **[OK]**.
- 4 Then you can either
  - Select **[Activation]** > **[Prefix]/[Suffix]**, then press **[OK]** to confirm; or
  - Select **[Deactivation]**, then press **[OK]** to confirm.
- 5 Enter or edit the code, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Call return

You can check the most recent unanswered call.

---

### Call the return service centre

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Call Services]** > **[Call return]** > **[Call]**, then press **[OK]** to confirm.  
↳ Your call is made to the service centre.

---

### Edit the call return service centre number

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Call Services]** > **[Call return]** > **[Settings]**, then press **[OK]** to confirm.
- 3 Enter or edit the number, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Call-back service

The call-back service notifies you when a party you have tried to call becomes available. You can cancel this service from the menu after you have activated it from the service provider.

---

### Cancel the call-back service

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Call Services]** > **[Cancel call bk]** > **[Call]**, then press **[OK]** to confirm.  
↳ A call is made to the service centre to cancel the call-back option.

---

## Edit the cancel call-back service number

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Call Services]** > **[Cancel call bk]** > **[Settings]**, then press **[OK]** to confirm.
- 3 Enter or edit the number, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Hide your identity

You can hide your identity from the caller.

---

### Activate ID withheld

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Call Services]** > **[Hide my ID]** > **[Activate]**, then press **[OK]** to confirm.  
↳ When you make a call to your contact, your ID is withheld.

---

### Edit the ID withheld code

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Call Services]** > **[Hide my ID]** > **[Settings]**, then press **[OK]** to confirm.
- 3 Enter or edit the number, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Access the "Services" menu on the handset or base station (see "Access the services menu" in the previous paragraph in this chapter).
- 2 Select **[Reset]**, then press **[OK]** to confirm.  
↳ A confirmation request is displayed on the handset.
- 3 Press **[OK]** to confirm.  
↳ All settings are reset.



- For information about the default settings, see the section on "Default settings".

# 16 Baby monitor

Your phone supports the baby monitor function which sends an alert when the sound level exceeds the set limit. You can access the baby monitor menu through the handset.

## Note

- The baby monitor feature is available only in multi-handset versions.

---

## Activate/Deactivate the baby monitor

Select **[Menu]** > **☰** > **[Activate]**, then press **[OK]** to confirm.

↳ The baby monitor mode is activated.

## Tip

- To exit from the baby monitor menu, press **⏪**.

## Note

- When the baby monitor mode is activated, the baby handset does not ring on incoming calls.

---

## Send an alert

You can send an alert to other handsets or an external line.

---

### Send to other handsets

- 1 Select **[Menu]** > **☰** > **[Send alert to]** > **[Connected line]**, then press **[OK]** to confirm.

- 2 Select the handset number, then press **[OK]** to confirm.

---

### Send to an external line

- 1 Select **[Menu]** > **☰** > **[Send alert to]** > **[External line]**, then press **[OK]** to confirm.
- 2 Enter a telephone number, then press **[OK]** to confirm.

---

## Set the baby cry level

- 1 Select **[Menu]** > **☰** > **[Baby cry level]**, then press **[OK]** to confirm.
- 2 Select a new setting, then press **[OK]** to confirm.  
↳ The setting is saved.

# 17 Telephone answering machine

Your phone includes a telephone answering machine that records unanswered calls when it is on. By default, the answering machine is set to **[Answer & rec.]**. You can also access the answering machine remotely and change the settings through the answering machine menu on the handset.

The LED indicator on the base station lights up when the answer machine is on.

## Turn on/off the answering machine

You can turn on/off the answering machine through the base station or the handset.

### Through the handset

- 1 Select **[Menu]** >  > **[Answer mode]**, then press **[OK]** to confirm. Then you can select among the options below:
  - To turn on the answering machine, select either **[Answer & rec.]** or **[Answer only]**.
  - To turn off the answering machine, select **[Off]**.
- 2 Press **[OK]** to confirm.  
↳ The setting is saved.

### Through the base

Press **⓪** to turn on/off the answering machine in standby mode.

### Note

- When the answering machine is switched on, it answers incoming calls after a certain number of rings based on the ring delay setting.

## Set the answering machine language

### Note

- This feature only applies to models with multiple-language support.

The answering machine language is the language for the announcements.

- 1 Select **[Menu]** >  > **[Voice language]**, then press **[OK]** to confirm.
- 2 Select a language, then press **[OK]** to confirm.  
↳ The setting is saved.

## Set the answer mode

You can set the answering machine and select if the callers can leave messages. Select **[Answer & rec.]** if you allow the callers to leave messages. Select **[Answer only]** if you forbid the callers to leave messages.

- 1 Select **[Menu]** >  > **[Answer mode]**, then press **[OK]** to confirm.
- 2 Select an answer mode, then press **[OK]** to confirm.  
↳ The setting is saved.

### Note

- If the memory is full, the answering machine switches to **[Answer only]** mode automatically.

## Announcements

The announcement is the message your caller hears when the answering machine picks up the call. The answering machine has 2 default announcements: the **[Answer & rec.]** mode and **[Answer only]** mode.

### Record an announcement

The maximum length of the announcement you can record is 3 minutes. The newly recorded announcement automatically replaces the old one.

- 1 Select **[Menu]** >  > **[Announcement]**, then press **[OK]** to confirm.
- 2 Select **[Answer & rec.]** or **[Answer only]**, then press **[OK]** to confirm.
- 3 Select **[Record new]**, then press **[OK]** to confirm.
- 4 Recording starts after the beep.
- 5 Press **[OK]** to stop recording or the recording stops after 3 minutes.  
↳ You can listen to the newly recorded announcement on the handset.

#### Note

- Make sure that you speak close to the microphone when you record an announcement.

### Listen to the announcement

- 1 Select **[Menu]** >  > **[Announcement]**, then press **[OK]** to confirm.
- 2 Select **[Answer & rec.]** or **[Answer only]**, then press **[OK]** to confirm.
- 3 Select **[Play]**, then press **[OK]** to confirm.  
↳ You can listen to the current announcement.

#### Note

- You can no longer listen to the announcement when you pick up an incoming call.

### Restore the default announcement

- 1 Select **[Menu]** >  > **[Announcement]**, then press **[OK]** to confirm.
- 2 Select **[Answer & rec.]** or **[Answer only]**, then press **[OK]** to confirm.
- 3 Select **[Use default]**, then press **[OK]** to confirm.  
↳ The handset displays a confirmation request.
- 4 Press **[OK]** to confirm.  
↳ The default announcement is restored.

## Incoming messages (ICM)

Each message can be up to 3 minutes long. When you receive new messages, the new message indicator flashes on the answering machine and the handset displays a notification message.

#### Note

- If you pick up the phone when the caller leaves a message, the recording stops and you can talk to the caller directly.

#### Note

- If the memory is full, the answering machine switches to **[Answer only]** automatically. Delete old messages to receive new ones.

### Listen to the incoming messages

You can listen to the incoming messages in the sequence they are recorded.

---

## From the base

- To start/stop listening, press ►■.
- To adjust the volume, press 🔊 / 🔊.
- To play the previous message, press [Option] > [Previous].
- To replay the current message, press [Option] > [Repeat].
- To play the next message, press [Option] > [Forward].
- To delete the current message, press ⏏.

### Note

- No deleted messages can be recovered.

---

## From the handset

Select [Menu] >  > [Play], then press [OK] to confirm.

- ↳ New messages start playing. Old messages start playing if there is no new message.
- Press [Back] to stop listening.
- Press [Option] to enter the options menu.
- Press ▲ / ▼ to increase/decrease the volume.

---

## Delete an incoming message

---

### From the base

Press ⏏ when you listen to the message.

- ↳ The current message is deleted.

---

### From the handset

- 1 When you listen to the message, press [Option] to enter the options menu.
- 2 Select [Delete], then press [OK] to confirm.
  - ↳ The current message is deleted.

---

## Delete all old incoming messages

---

### From the base

Press and hold ⏏ in standby mode.

- ↳ All old messages are permanently deleted.

---

### From the handset

- 1 Select [Menu] >  > [Delete all], then press [OK] to confirm.
  - ↳ The handset displays a confirmation request.
- 2 Press [OK] to confirm.
  - ↳ All old messages are permanently deleted.

### Note

- You can only delete the read messages. No deleted messages can be recovered.

---

## Call screening

You can hear the caller while he is leaving a message. Press  to answer the call.

---

### From the base

Press 🔊 / 🔊 to adjust the speaker volume during call screening. The lowest volume level turns off the call screening.

---

## Set the sound quality of the message

You can adjust the sound quality of the messages received from the answering machine.

- 1 Select [Menu] >  > [Msg quality], then press [OK] to confirm.
- 2 Select the new setting, then press [OK] to confirm.
  - ↳ The setting is saved.

## Note

- The sound quality can only be adjusted before recording starts.

## Set the ring delay

You can set the number of times the phone rings before the call goes to the answering machine.

- 1 Select **[Menu]** >  > **[Ring delay]**, then press **[OK]** to confirm.
- 2 Select a new setting, then press **[OK]** to confirm.  
↳ The setting is saved.

## Note

- Make sure that the answering machine is switched on before this feature can be applied.

## Tip

- When you access the answering machine remotely, you are recommended to set the ring delay to **[Toll saver]** mode. This is a cost effective way to manage your messages. When there are new messages, the answering machine picks up the call after 3 rings; when there is no messages, it picks up the call after 5 rings.

## Remote access

You can operate your answering machine when you are away from home. Simply make a call to your phone with a touch tone phone and enter your 4-digit PIN code.

## Note

- The remote access PIN code is the same as your system PIN. The preset PIN is 0000.

## Change the PIN code

- 1 Select **[Menu]** >  > **[Remote access]** > **[Change PIN]**, then press **[OK]** to confirm.
- 2 Enter the old PIN, then press **[OK]** to confirm.
- 3 Enter the new PIN code, then press **[OK]** to confirm.
- 4 Enter the new PIN code again, then press **[OK]** to confirm.  
↳ The setting is saved.

## Activate/deactivate the remote access

You can allow or block remote access to the answering machine.

- 1 Select **[Menu]** >  > **[Remote access]**, then press **[OK]** to confirm.
- 2 Select **[Activate]/[Deactivate]**, then press **[OK]** to confirm.  
↳ The setting is saved.

## Access the answering machine remotely

- 1 Make a call to your home number with a touch tone phone.
- 2 Enter # when you hear the announcement.
- 3 Enter your PIN code.  
↳ You now have access to your answering machine, and you can listen to the new messages.

## Note

- You have 2 chances to enter the correct PIN code, before your phone hangs up.

- 4 Press a key to carry out a function. See the 'Remote access commands' in the following table for a list of available functions.

 **Note**

- When there is no message, the phone hangs up automatically if no key is pressed for 8 seconds.

---

## Remote access commands

---

Key	Function
1	Repeat the current or listen to the previous message.
2	Listen to messages.
3	Skip to the next message.
6	Delete the current message.
7	Switch the answering machine on. (not available when you listen to the messages).
8	Stop listening to the message.
9	Switch the answering machine off. (not available when you listen to the messages).

---

# 18 Default settings

Language*	Country dependent
Handset name	PHILIPS
Date	<b>01/01/11</b>
Date format*	Country dependent
Time*	Country dependent
Time format*	Country dependent
Alarm	<b>[Off]</b>
Phonebook list	Unchanged
Recall time*	Country dependent
First ring*	Country dependent
Conference	<b>[Off]</b>
Dial mode*	Country dependent
Handset ring melody*	Country dependent
Receiver volume	<b>[Volume 3]</b>
Handset ring volume	<b>[Level 3]</b>
Handset key beep	<b>[On]</b>
Incoming call log	Empty
Redial list	Empty
Line settings	<b>[Auto]</b>

## Answering Machine

Ans machine status	<b>[On]</b>
Ans machine mode	<b>[Answer &amp; rec.]</b>
Base call screening	<b>[On]</b>
Announcement memory	Default announcement
Incoming message memory	Empty
Remote access	<b>[Off]</b>
PIN code	0000
Voice language*	Country dependent
Ring delay	<b>[5 rings]</b>
Speaker volume	<b>[Level 3]</b>

### Note

- \*Country dependent features

# 19 Technical data

## Display

- 64 color-TFT display

## General telephone features

- Dual mode caller name & number identification
- Conference call and voice mails
- Intercom
- Maximum talk time: 22 hours

## Phonebook list, Redial list and Call log

- Phonebook list with 200 entries for the land line, 500 entries for mobile 1 and 500 entries for mobile 2.
- Redial list with 20 entries
- Call log with 50 entries

## Battery

- Ni-MH AAA 1.2V 750mAh

## Power adapter

### Base

- SSW-2207XX, Input: 230V, 50Hz 0.2A, Output: 5.5V 1.5A  
Charger
- SSW-2095XX-1, Input: 100 – 240V, 50-60Hz 0.2A, Output: 5V 600mA

## Power consumption

- Power consumption at standby mode: around 1.2W

## Weight and dimensions

- Handset: 117.4 grams
- 167.5 × 49.3 × 27 mm (H × W × D)
- Base: 376.2 grams
- 57.3 × 243.5 × 109.7 mm (H × W × D)
- Charger: 56.8 grams
- 94.47 × 82.03 × 53.04 mm (H × W × D)

## Temperature range

- Operation: 0°C to +35°C (32°F to 95°F)
- Storage: -20°C to +45°C (-4°F to 113°F)

## Relative humidity

- Operation: Up to 90% at 40°C
- Storage: Up to 95% at 40°C

# 20 Notice

## Declaration of conformity

Hereby Philips Consumer Lifestyle, Accessories, declares that the SE888 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on [www.p4c.philips.com](http://www.p4c.philips.com).

This product has been designed, tested and manufactured according the European R&TTE directive 1999/5/EC. Following this directive, this product can be brought into service in the following countries:

CE 0168		R&TTE Directive 1999/5/EC	
AT ✓	BE ✓	BG ✓	CY ✓
CZ ✓	DK ✓	EE ✓	FI ✓
FR ✓	DE ✓	GR ✓	HU ✓
IS ✓	IE ✓	IT ✓	LV ✓
LI ✓	LT ✓	LU ✓	MT ✓
NL ✓	NO ✓	PL ✓	PT ✓
RO ✓	SK ✓	SI ✓	ES ✓
SE ✓	CH ✓	UK ✓	

## Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station,

put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions.

## Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

## Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product

is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

### **Environmental information**

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

owners. The **Bluetooth** word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Koninklijke Philips Electronics N.V. is under license.

iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

---

## **Trademarks**

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective

# 21 Frequently asked questions

## No signal bar is displayed on the screen.

- The handset is out of range. Move it closer to the base station.
- If **[Unregister]** is displayed on the handset, put the handset on the base until the signal bar is displayed.



### Tip

- For further information, see "Register the handsets" on the Services section.

## I cannot charge up my mobile phone.

- Make sure that the iPhone USB charging cable or micro-USB charging cable is connected correctly, SE888 is mainly supporting single mobile charging. If two mobiles are connected to SE888 and if the total battery charging is over the limit, you receive a message. In this case, you need to disconnect one mobile phone from battery charging.
- If you still fail to charge up the mobile phone even after you have removed one of the two mobile phones, disconnect all mobile phones from battery charging. Reconnect one mobile only to SE888 and charge it again.
- SE888 mainly supports iPhone charging and those mobile phones complying with the EU harmonized standard for mobile charging. If your mobile phone cannot be charged with SE888, it is because your mobile phone does not support the EU harmonized standard.
- You can find the list of mobile phones which SE888 supports for charging in **Charging compatibility list for SE888.pdf** saved in the CD rom or at <http://www.philips.com/support>

- Check and upgrade the OS (operation system) version of your mobile phone/iphone.

## I can neither pair the SE888 with my mobile phone, nor synchronize the phonebook or call log.

- You can find the list of mobile phones which are compatible with SE888 in **Bluetooth compatibility list for SE888.pdf** saved in the CD rom or at <http://www.philips.com/support>
- When the Bluetooth device list is full, remove the mobile phone/computer name before pairing can start.
- If the mobile phone name exists in your mobile phone, you have to remove it from your mobile phone. Then you can do the pairing again.
- Check and upgrade the OS (operation system) version of your mobile phone/iphone.

## My mobile phone/iphone does not reconnect to SE888 automatically.

- You can find the list of mobile phones which are compatible with SE888 in **Bluetooth compatibility list for SE888.pdf** saved in the CD rom or at <http://www.philips.com/support>
- Check and upgrade the OS (operation system) version of your mobile phone/iphone.

## I cannot pair my computer with SE888.

The PC application software only supports Bluetooth devices with Bluetooth protocol driver specified below. Check your Bluetooth device and change it if necessary.

- Microsoft Stack compatible
- Broadcom Stack V 5.1.0.1700, V 5.1.0.2100 and 5.1.0.3500 Retail

## I still cannot pair my computer with SE888 even I have changed my Bluetooth device.

Disable the internal computer Bluetooth device. For information, see the user manual of your computer. Then, install an external Bluetooth device that supports the Bluetooth protocol driver already mentioned above.

**There is unknown text/symbols displayed on the phonebook list.**

Normally, SE888 can recognize the text/symbols specified in the section "Text and number". If you still find unknown text/symbols, you are recommended to change them to English text.

**If I fail to register the additional handsets to the base station, what do I do?**

Your base memory is full. Unregister the unused handsets and try again.

**No dialing tone**

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.

**I cannot change the settings of my voice mail.**

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

**The handset on the charger does not charge.**

- Make sure that the batteries are inserted correctly.
- Make sure that the handset is placed properly on the charger. The battery icon animates when charging.
- Make sure that the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones from your dealer.

**No display**

- Make sure that the batteries are charged.
- Make sure that there is power and the phone is connected.

**Bad audio (crackles, echo, etc.)**

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

**The handset does not ring.**

Make sure that the handset ringtone is turned on.

**The caller ID does not display.**

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.

 **Note**

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.





# CE 0168



© 2011 Koninklijke Philips Electronics N.V.  
All rights reserved.

IFU\_SE888\_EN\_V2.0  
WK12245